Metasol Meta Solution

MCCB/ELCB

Molded Case Circuit Breakers
Earth Leakage Circuit Breakers



LS ELECTRIC

Metasol
MCCB/ELCB

Molded Case Circuit Breakers / Earth Leakage Circuit Breakers





Metasol Meta Solution

Molded Case Circuit Breakers/ Earth Leakage Circuit Breakers

Upgraded for the Global Best Worth!

LS will become a global leader in electric power solutions.

Contents

Marking and configuration / Internal structure	1-1 ~ 1-18
Quick selection table (Molded Case Circuit Breakers)	2-1 ~ 2-10
Quick selection table (Earth Leakage Circuit Breakers)	3-1 ~ 3-4
Type numbering system	4-1 ~ 4-2
Ratings (Molded Case Circuit Breakers)	5-1 ~ 5-22
Ratings (Earth Leakage Circuit Breakers)	6-1 ~ 6-18
Accessories	7-1 ~ 7-27
Characteristics curves	8-1 ~ 8-8
Dimensions	9-1 ~ 9-31
Technical information	10-1 ~ 10-18

Metasol

Meta solution



MCCB = ELCB

Upgrade of Meta-MEC series

...Metasol Low Voltage Circuit Breaker

- Ui=1000V
- Uimp=8kV



- **Compatible and differentiated design**
  - Compatible with the Meta-MEC
  - Outlook differentiated design
- **Same external dimension with MCCB and ELCB**
- **Upgrade the coordination**
  - Upgrade the coordination with Susol / Meta-MEC mass capacity


- **Upgrade breaking capacity**
  - N100AF : 10 ➡ 18kA
  - S125AF : 25 ➡ 37kA
  - S250AF : 25 ➡ 37kA
  - H250AF : 35 ➡ 50kA
  - N400AF : 25 ➡ 37kA
  - S400AF : 35 ➡ 50kA
  - S800AF : 50 ➡ 65kA

Metasol MCCB/ELCB




Metasol MCCB

Upgrade breaking capacity

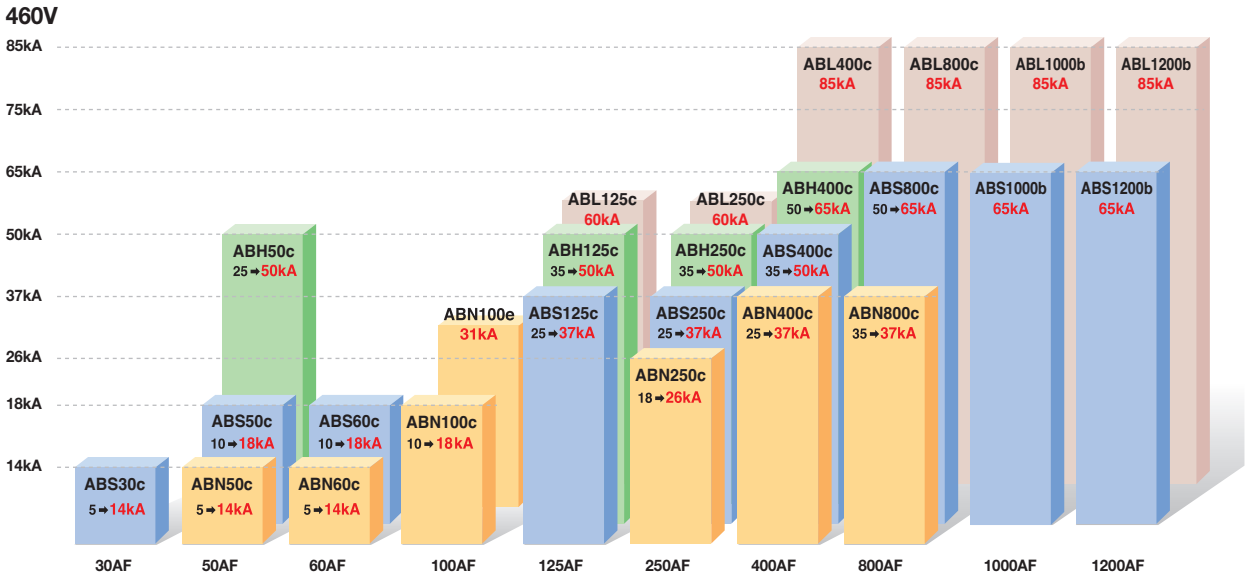

Short-circuit breaking capacity

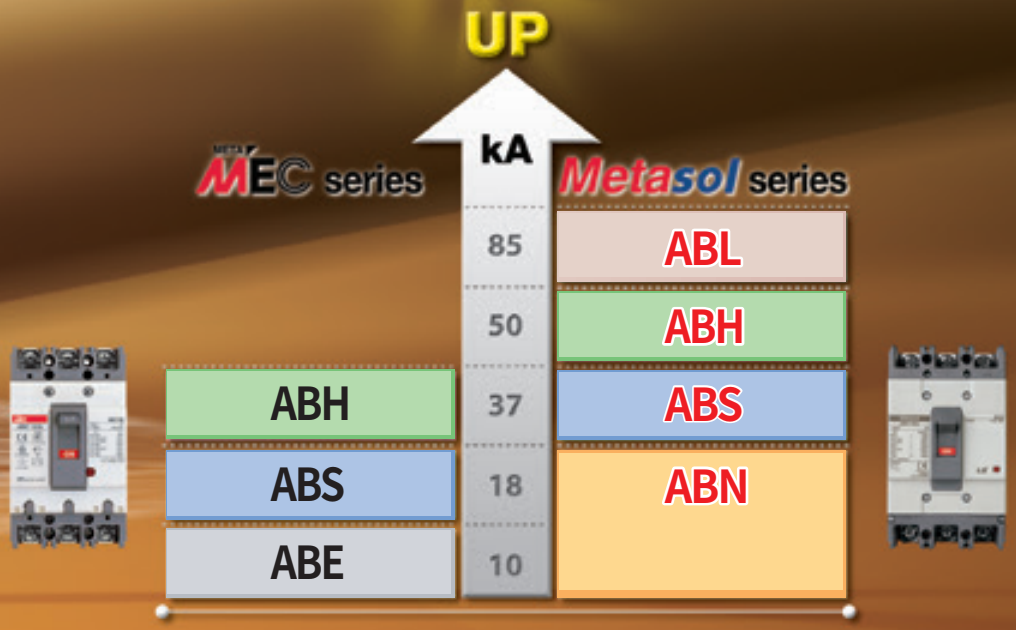


Upgrade breaking capacity

- N100AF : 10 ➡ 18kA
- S125AF : 25 ➡ 37kA
- S250AF : 25 ➡ 37kA
- H250AF : 35 ➡ 50kA
- N400AF : 25 ➡ 37kA
- S400AF : 35 ➡ 50kA
- S630AF : 50 ➡ 65kA
- S800AF : 50 ➡ 65kA

Metasol ELCB

Upgrade breaking capacity

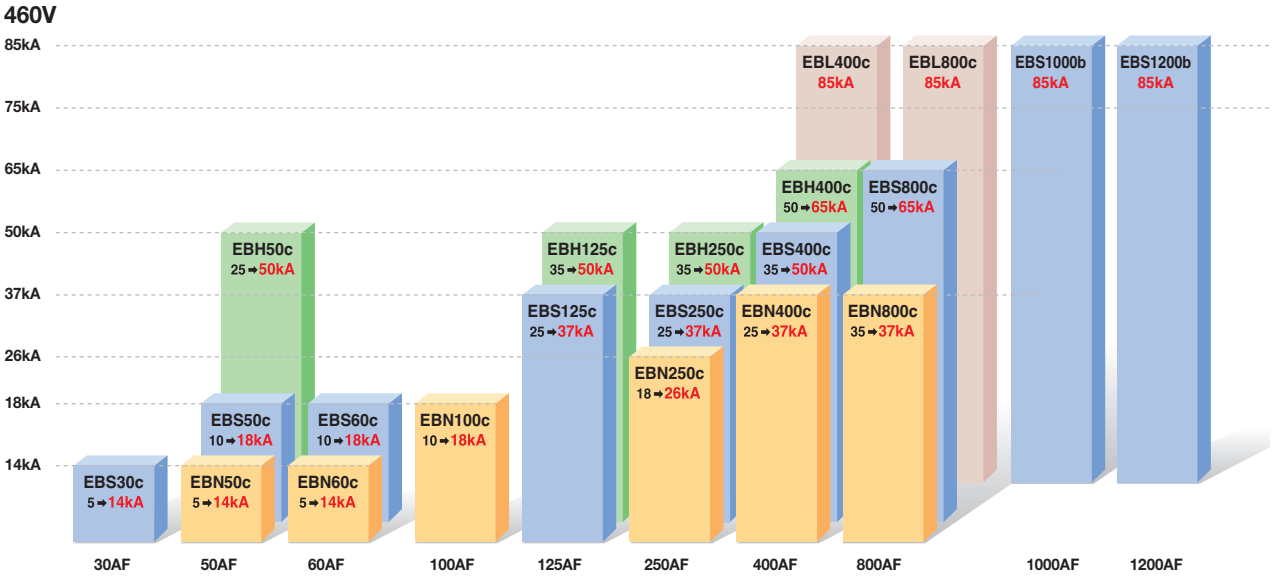

Metasol MCCB/ELCB Compatible and standard

- 100% compatible with Meta-MEC series.
- Standardized dimension (Depth, cutout) when the panel is made.




Metasol MCCB

Type \ AF	30AF	50AF	60AF	100AF	125AF	250AF	400AF	800AF	1000AF	1200AF
ABN		ABN50c 14kA	ABN60c 14kA	ABN100c 18kA ABN100d 26kA ABN100e 31kA		ABN250c 26kA	ABN400c 37kA	ABN800c 37kA		
ABS	ABS30c 14kA	ABS50c 18kA	ABS60c 18kA		ABS125c 37kA	ABS250c 37kA	ABS400c 50kA	ABS800c 65kA	ABS1000b 65kA	ABS1200b 65kA
ABH		ABH50c 50kA			ABH125c 50kA	ABH250c 50kA	ABH400c 65kA			
ABL					ABL125c 60kA	ABL250c 60kA	ABL400c 85kA	ABL800c 85kA	ABL1000b 85kA	ABL1200b 85kA

Note) Dimension is for 3 pole and breaking capacity is for AC460V.

• Same external dimension with MCCB and ELCB.

ELCB (Earth Leakage Circuit Breaker)

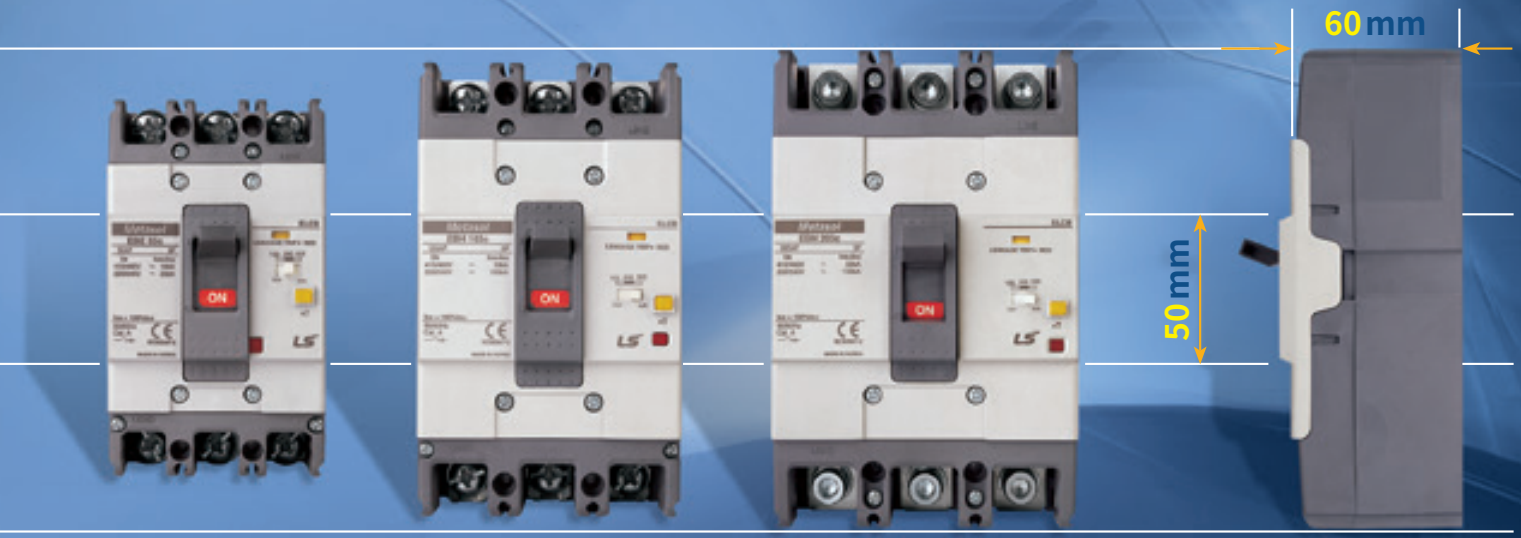

75×130×60mm

90×155×60mm


105×165×60mm

Metasol ELCB

Type \ AF	30AF	50AF	60AF	100AF	125AF	250AF	400AF	800AF	1000AF	1200AF
EBN		EBN50c 14kA	EBN60c 14kA	EBN100c 18kA		EBN250c 26kA	EBN400c 37kA	EBN800c 37kA		
EBS	EBS30c 14kA	EBS50c 18kA	EBS60c 18kA		EBS125c 37kA	EBS250c 37kA	EBS400c 50kA	EBS800c 65kA	EBS1000b 85kA	EBS1200b 85kA
EBH		EBH50c 50kA			EBH125c 50kA	EBH250c 50kA	EBH400c 65kA			
EBL							EBL400c 85kA	EBL800c 85kA		

Note) Dimension is for 3 pole and breaking capacity is for AC460V.

Metasol MCCB/ELCB System overview

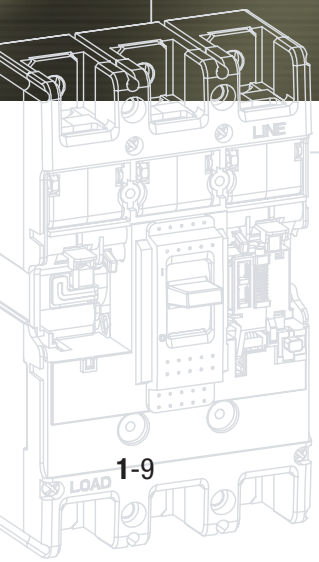


Various installable accessories

- Wider range of installable accessories compared to Meta MEC series.
- Composed of user friendly method.




System overview

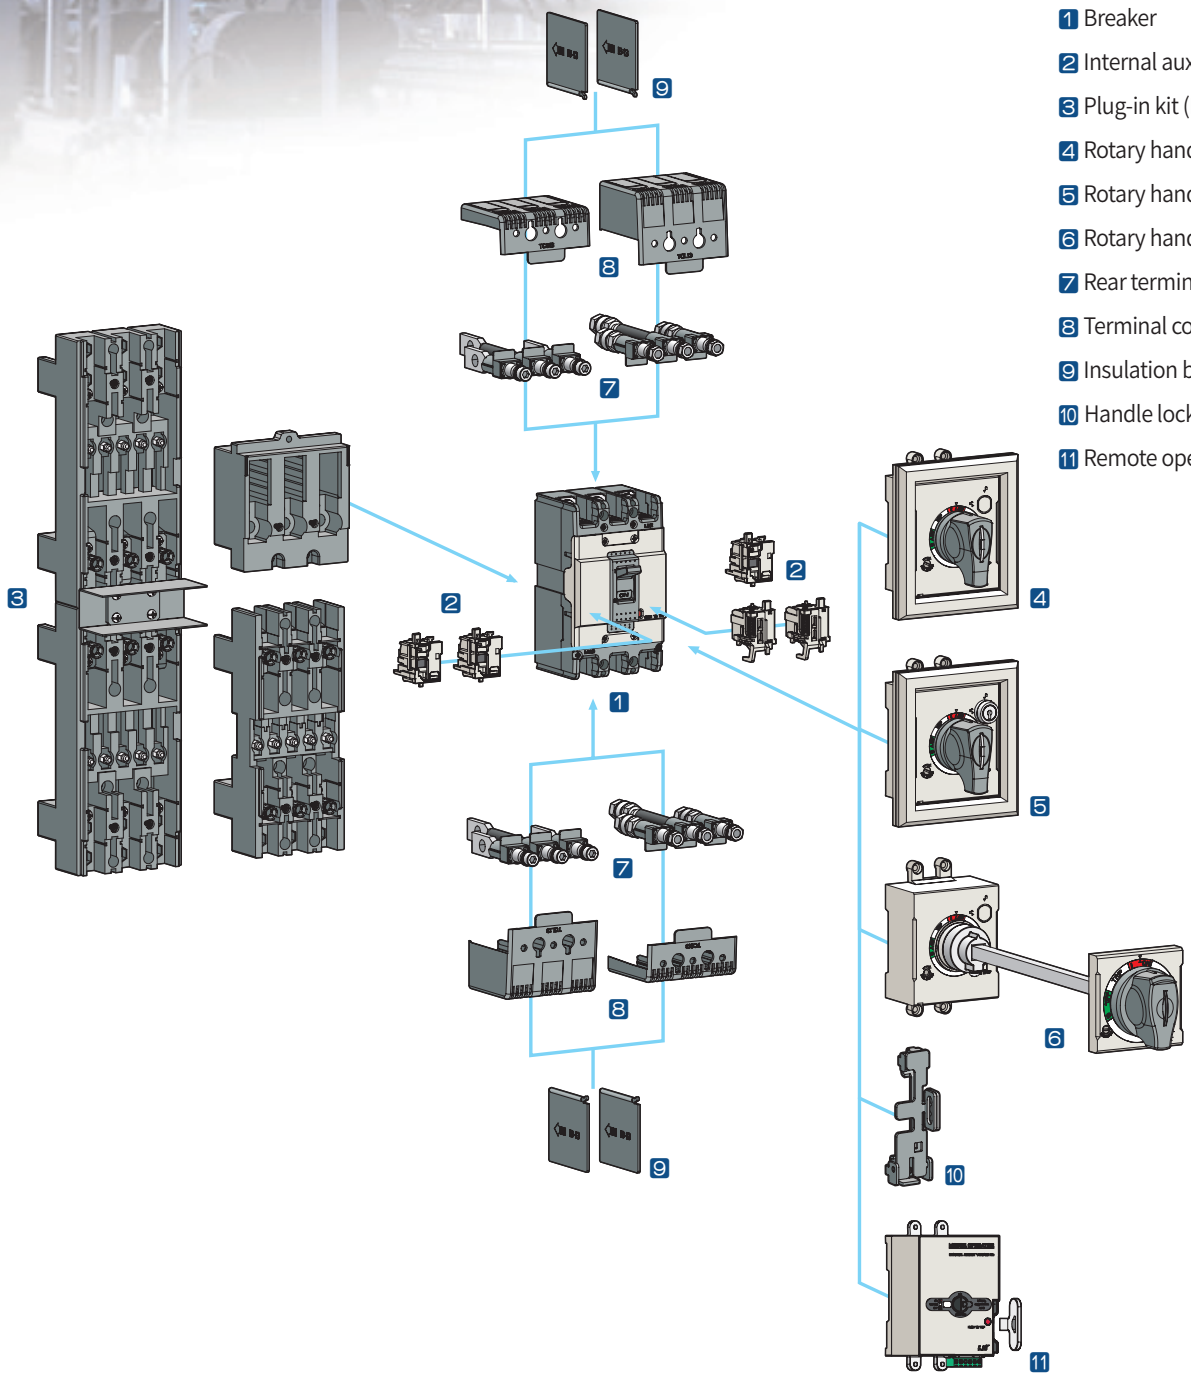


1 Breaker
2 Internal auxiliaries
3 Plug-in kit (ELCB only)
4 Rotary handle (Direct)
5 Rotary handle (Direct, key lock)
6 Rotary handle Extended)
7 Rear terminal
8 Terminal cover (Short, long)
9 Insulation barrier
10 Handle lock
11 Remote operation



Metasol MCCB/ELCB Internal accessories

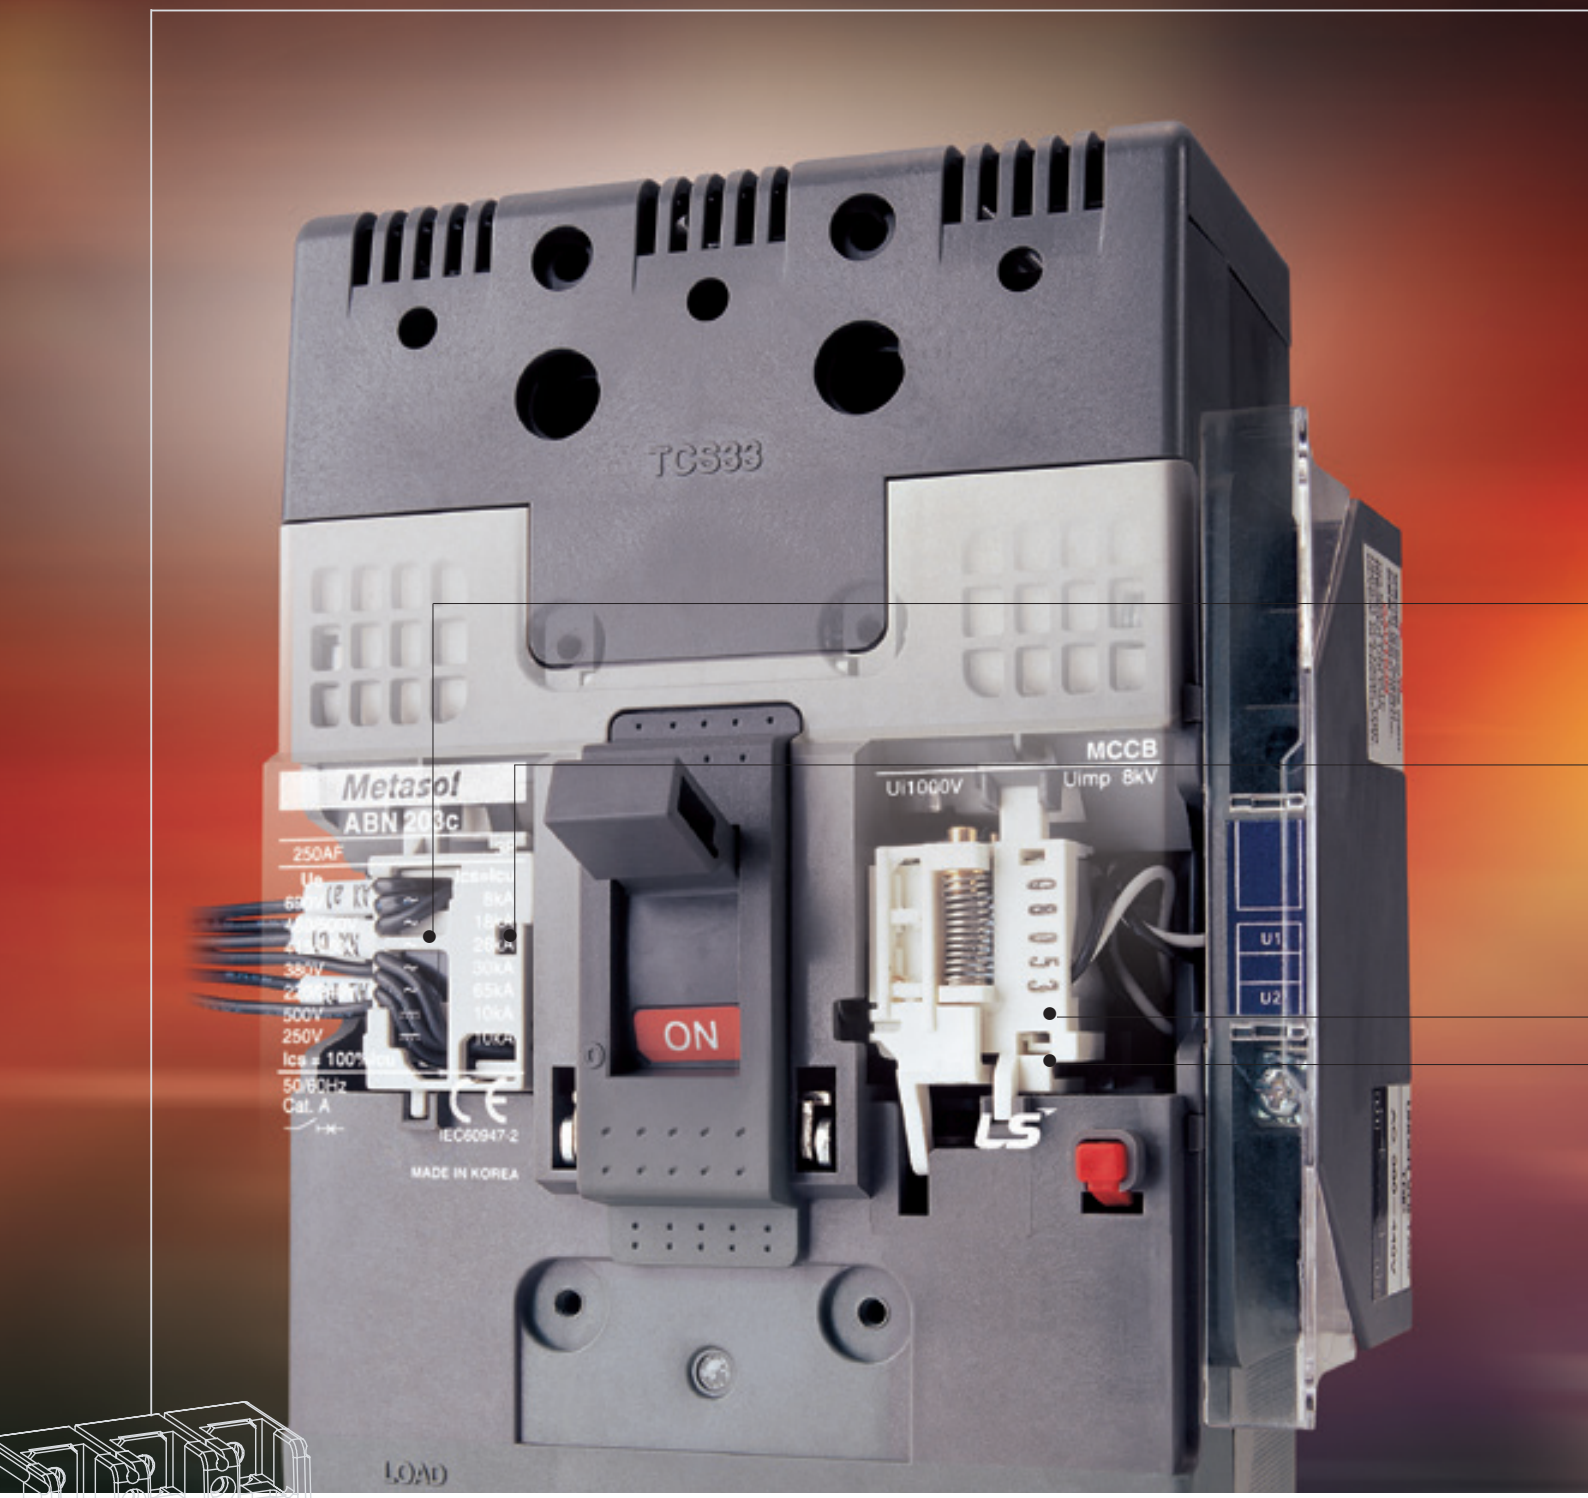

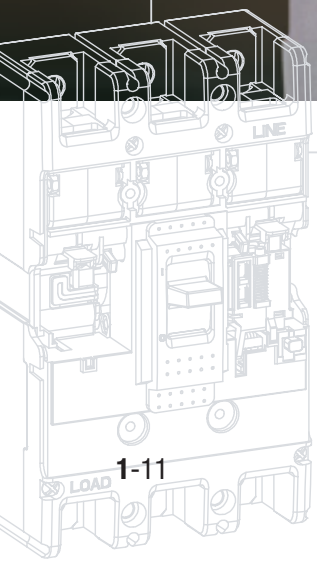

Internal accessories

Internal accessories can be commonly used in all Metasol MCCB and ELCB
(Notice: Exception of SHT, UVT in ELCB)



Common use to all Metasol MCCBs and ELCBs



Alarm switch (AL)

Alarm switches offer provisions for immediate audio or visual indication of a tripped breaker due to overload, short-circuit, operation of shunt trip, or undervoltage trip conditions, operation of push button.
They are particularly useful in automated plants where operators must be signaled about changes in the electrical distribution system. This switch features a closed contact when the circuit breaker is tripped automatically. In other words, this switch does not function when the breaker is operated manually. Its contact is open when the circuit breaker is reset.



Auxiliary switch (AX)

Auxiliary switch is for applications requiring remote "On" and "Off" indication. Each switch contains two contacts having a common connection. One is open and the other closed when the circuit breaker is open, and vice-versa.




Undervoltage trip (UVT)

The undervoltage trip automatically opens a circuit breaker when voltage drops to a value ranging between 35% to 70% of the line voltage. The operation is instantaneous, and the circuit breaker cannot be reclosed until the voltage returns to 85% of line voltage.
Continuously energized, the undervoltage trip must be operating be fore the circuit breaker can be closed.




Shunt trip (SHT)

The shunt trip opens the mechanism in response to an externally applied voltage signal. LS shunt trips include coil clearing contacts that automatically clear the signal circuit when the mechanism has tripped.contact with live parts and thereby guarantee protection against direct contacts.

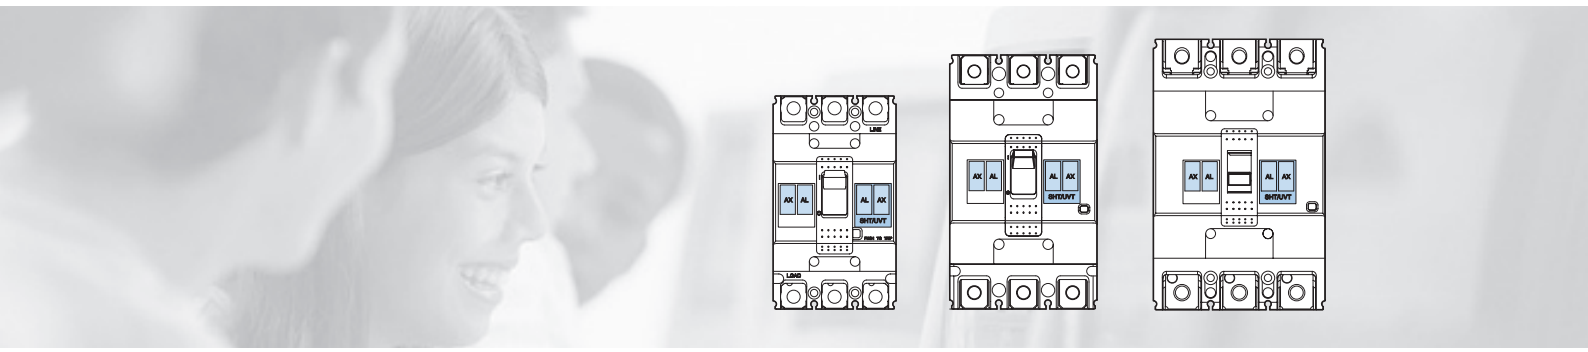



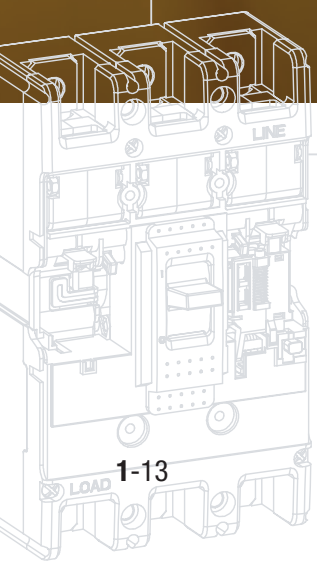

External accessories


Designed for various mount and user safety.

External accessories




Front and rear connection

Several kinds of terminals can be equipped with ELCBs as well as MCCBs.
- Terminals for front connection
- Rear connection terminals

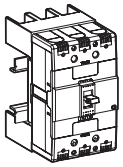


Plug-in base

It makes to extract and/or rapidly replace the circuit breaker without having to touch connections. (Easy replacement and maintenance)

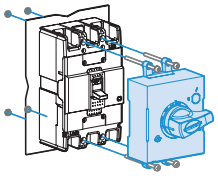

Direct & extended rotary handle

There are two types of rotary handles.
- Direct rotary handle (with or w/o key lock device)
- Extended rotary handle

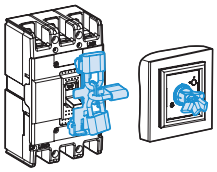


Locking device

- Fixed padlock
- Removable padlock
- Key lock device on direct handle




Insulation barrier

These allow the insulation characteristics between the phases at the connections to be increased.



Insulation terminal cover

The terminal covers are applied to the circuit-breaker to prevent accidental contact with live parts and thereby guarantee protection against direct contacts.

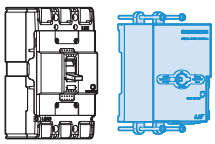


Remote operation

It is a device that makes it possible to turn On / Off the breaker even in the remote place. It is safe because it does not have to operate the handle of the circuit breaker by hand, and it is suitable for automation.

Marking and configuration

MCCB

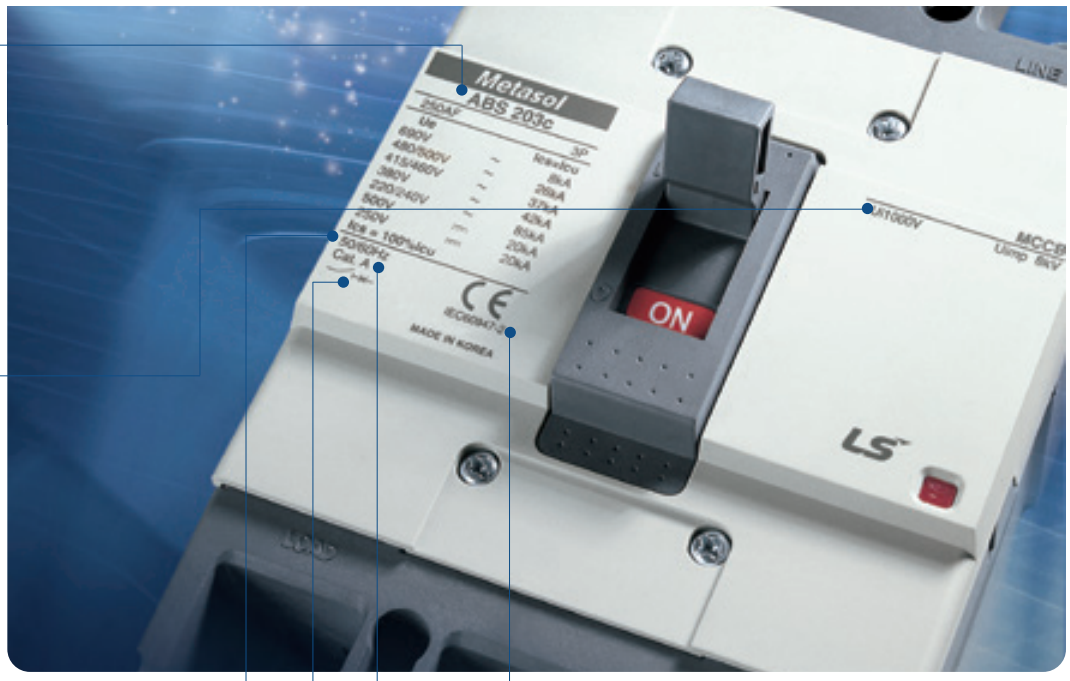

MCCB model
- ABN: Economic type
- ABS: Standard type
- ABH: High capacity type

Standardized characteristics
Ui: Rated insulation voltage
Uimp: Impulse withstand voltage
Ue: Rated operational voltage
Icu: Ultimate breaking capacity
Ics: Service breaking capacity


Rated frequency

Utilization category

Standard

Symbol indicating suitability for isolation as defined by IEC 947-2

MCCB

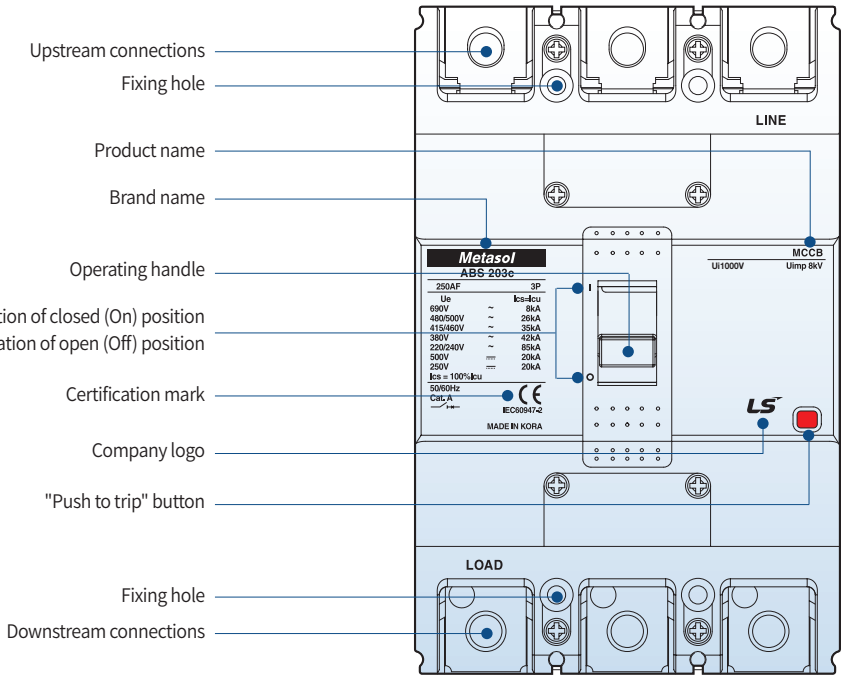

ELCB



ELCB model
- EBN: Economic type
- EBS: Standard type
- EBH: High capacity type


Rated frequency

Utilization category

Standard

Symbol indicating suitability for isolation as defined by IEC 947-2

ELCB

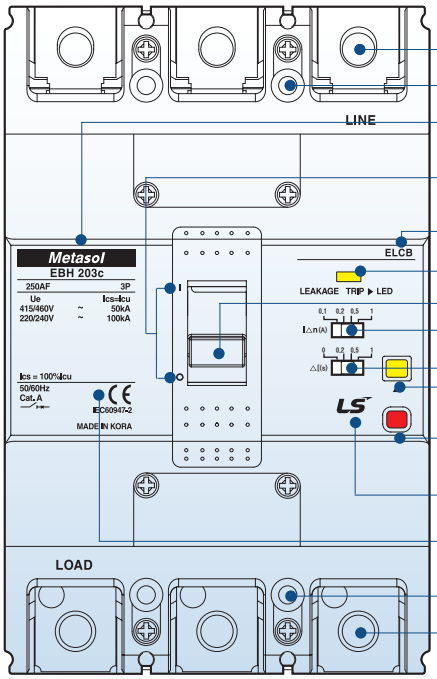

Upstream connections
Fixing hole
Brand name
Indication of closed (On) position
Indication of open (Off) position
Product name
Trip indication by earth fault
Operating handle
Residual current (I△n) setting
Non-operating current setting
"Push to trip" button for earth fault
"Push to trip" button for overcurrent trip
Company logo
Certification mark
Fixing hole
Downstream connections

MCCB


① Handle

- Function of indications
  - "On" "Off" "Trip"
- Resetting
  When the handle indicates "Tripped" position it must first be reset by moving the handle to the "Off" position and then closing is possible
- Trip-free even if the handle is held at "On", the Breaker will trip if an over current flows
- Suitable for verification of the main contact position under abnormal conditions because the handle doesn't indicate open position

② Arc-Extinguishing unit


LS patent technique PASQ
Arc-extinguishing unit
PASQ : Puffer assisted self-quenching

- Reduction of arc voltage for a short time

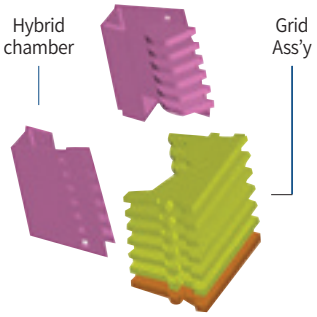


③ Trip button (Push to trip)

- Enables tripping mechanically from outside, for confirming the operation of the accessory switches and the manual resetting function.

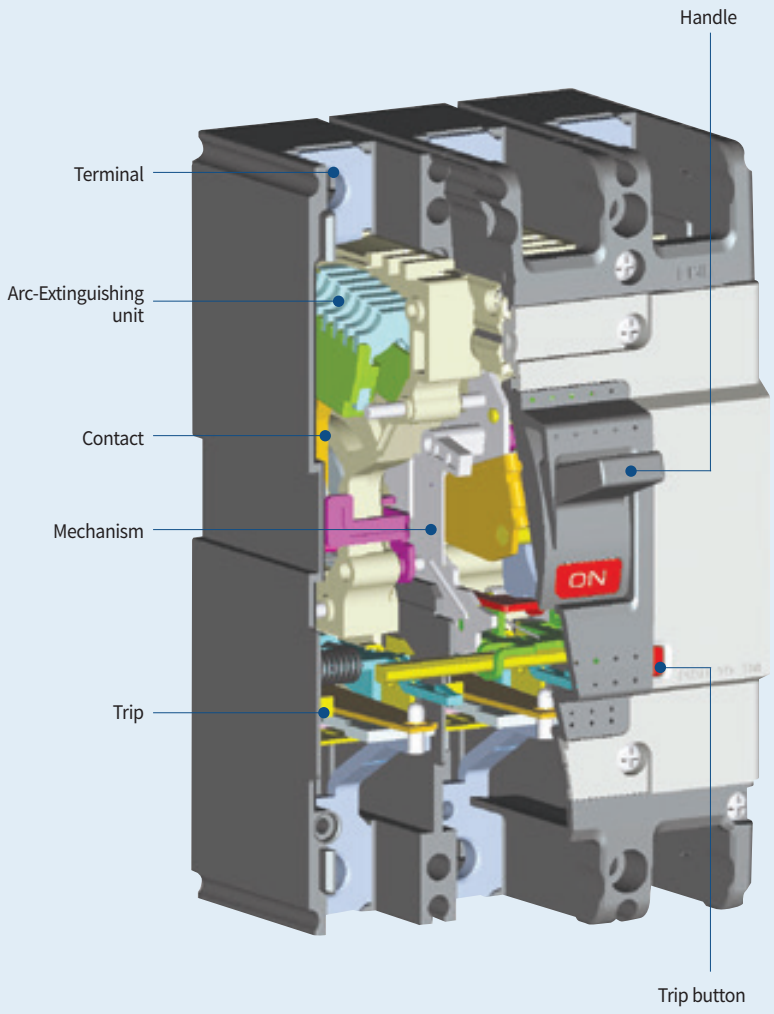

A application of PASQ arc extinguishing

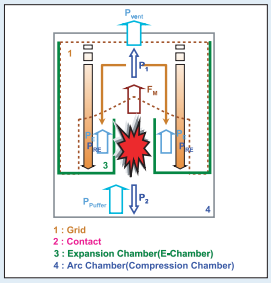


- The reduction of breaking time by applying PASQ arc extinguishing for inhibition of arc voltage for a short time.

A application of current limiting structure

- Current limiting repulsion structure
  (U fixed structure)
- Toggle structure
  - When the operating unit repulses by short circuit current, repulsion structure at bigger angle.



ELCB

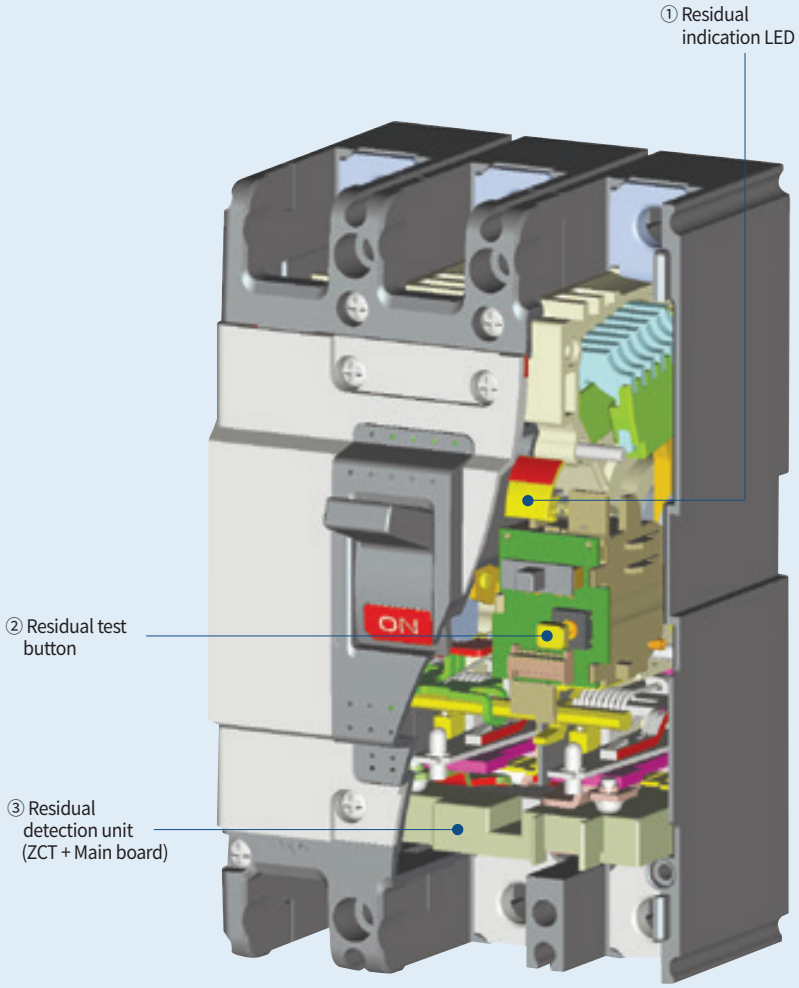


① Residual indication LED
- Normal situation is yellow, trio situation is red

② Residual test button
- Special design for upgrade to prohibit resistance accident


③ Residual detection unit (ZCT + Main board)
- For upgrade the design is selected the 3 phase input power method and in case of voltage problem, it can break residual current safely.

Upgrade coil operation by special design

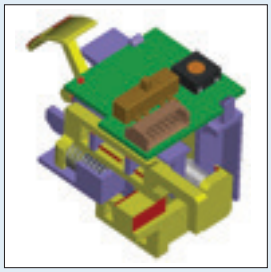

- Sliding structure application of trip lever
- Trip special design by applying design button method.
- Upgrade the testing unit

3 phase power supply method

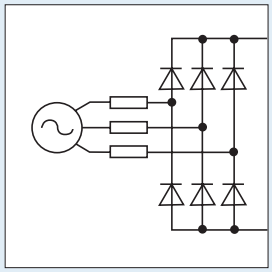

- In case of 1 phase loss residual operation upgrade
- New IEC standard

Quick selection table
Molded Case Circuit Breakers

MCCBs







AF		30AF		50AF			60AF	
Type		E-type	S-type	N-type	S-type	H-type	N-type	S-type
Type and pole	2-pole	ABE32b	ABS32c	ABN52c	ABS52c	ABH52c	ABN62c	ABS62c
	3-pole	ABE33b	ABS33c	ABN53c	ABS53c	ABH53c	ABN63c	ABS63c
	4-pole	-	ABS34c	ABN54c	ABS54c	ABH54c	ABN64c	ABS64c
Rated current, In	A	(3, 5, 10) Note) 1, 15, 20, 30		15, 20, 30, 40, 50			15, 20, 30, 40, 50, 60	
Rated operational voltage, Ue	AC (V)	460	690	690	690	690	690	690
	DC (V)	-	500	500	500	500	500	500
Rated insulation voltage, Ui	V	460	1000	1000	1000	1000	1000	1000
Rated impulse withstand voltage, Uimp	kV	6	8	8	8	8	8	8
Rated short-circuit breaking capacity (Icu) kA (Sym) , IEC 60947-2								
AC	690V	-	2.5	2.5	5	10	2.5	5
	480/500V	-	7.5 (5)	7.5	10	35	7.5	10
	415/460V	2.5	14 (10)	14	18	50	14	18
	380V	2.5	18 (14)	18	22	50	18	22
	220/250V	5	30 (25)	30	35	100	30	35
DC	500V (3P)	-	5	5	10	30	5	10
	250V (2P)	-	5	5	10	30	5	10
Ics=%×Icu		50	100	100	100	100	100	100
Dimensions (mm)	W×H×D (3-pole)	75×96×60	75×130×60 (Fig. 1)	75×130×60 (Fig. 1)		90×155×60 (Fig. 2)	75×130×60 (Fig. 1)	

* For more detail see the page. Ratings 5-1page ~ 5-14page, Curves 8-1page ~ 8-3page, and Drawings 9-1page ~ 9-4page

Note) 1. The short-circuit breaking capacities of ABS30AF type in ( ) are applied to the rated current in (3, 5, 10A)
2. MCCBs can be applied to both 50 and 60Hz.
3. Standard type is designed on the basis of 40°C of ambient temperature.
4. There are certain products for hot areas. (30~250AF on the basis of 55°C)
5. The Ics(service breaking capacity) of ABN100e, ABL125/250AF are in ( )

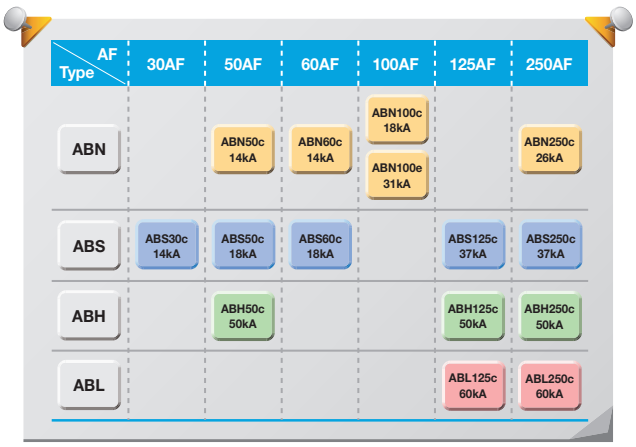

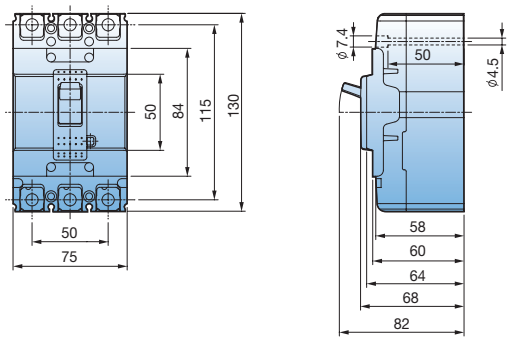


(Fig. 1)









	100AF		125AF			250AF			
	N-type		S-type	H-type	L-type	N-type	S-type	H-type	L-type
	ABN102c	ABN102e	ABS102c	ABH102c	ABL102c	ABN202c	ABS202c	ABH202c	ABL202c
	ABN103c	ABN103e	ABS103c	ABH103c	ABL103c	ABN203c	ABS203c	ABH203c	ABL203c
	ABN104c	ABN104e	ABS104c	ABH104c	ABL104c	ABN204c	ABS204c	ABH204c	ABL204c
	15, 20, 30, 40, 50, 60, 75, 100		15, 20, 30, 40, 50, 60, 75, 100, 125			100, 125, 150, 175, 200, 225, 250			
	690	690	690	690	690	690	690	690	690
	500	500	500	500	500	500	500	500	500
	1000	1000	1000	1000	1000	1000	1000	1000	1000
	8	8	8	8	8	8	8	8	8
	5	7.5 (5)	8	10	10 (10)	8	8	10	10 (10)
	10	14 (10)	26	35	35 (35)	18	26	35	35 (35)
	18	31 (18)	37	50	60 (50)	26	37	50	60 (50)
	22	31 (22)	42	50	60 (50)	30	42	50	60 (50)
	35	65 (35)	85	100	125 (100)	65	85	100	125 (100)
	10	15 (10)	20	30	30 (30)	10	20	30	30 (30)
	10	15 (10)	20	30	30 (30)	10	20	30	30 (30)
	100	( )	100	100	( )	100	100	100	( )
	75×130×60 (Fig. 1)		90×155×60 (Fig. 2)			105×165×60 (Fig. 3)			

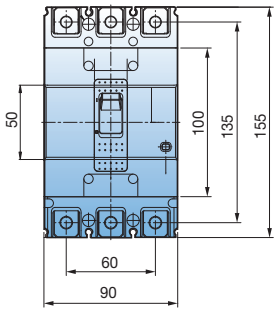


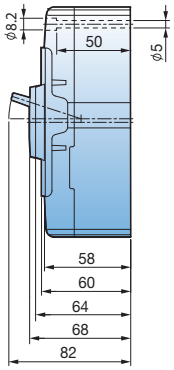

(Fig. 2)

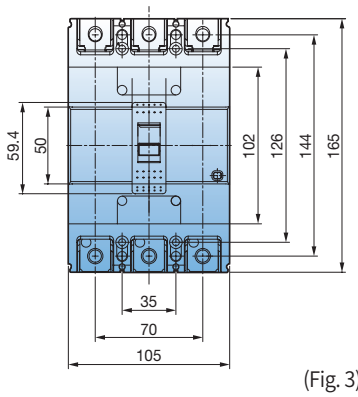

(Fig. 3)

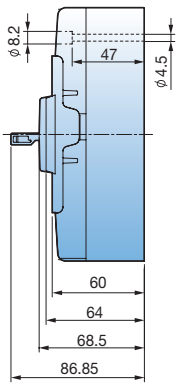

Quick selection table
Molded Case Circuit Breakers





MCCBs

AF		400AF			
Type		N-type	S-type	H-type	L-type
Type and pole	2-pole	ABN402c	ABS402c	ABH402c	ABL402c
	3-pole	ABN403c	ABS403c	ABH403c	ABL403c
	4-pole	ABN404c	ABS404c	ABH404c	ABL404c
Rated current, In	A	250, 300, 350, 400			
Rated operational voltage, Ue	AC (V)	690	690	690	690
	DC (V)	500	500	500	500
Rated insulation voltage, Ui	V	1000	1000	1000	1000
Rated impulse withstand voltage, Uimp	kV	8	8	8	8
Rated short-circuit breaking capacity (Icu) kA (Sym) , IEC 60947-2					
AC	690V	5	8	10	14
	480/500V	18	35	50	65
	415/460V	37	50	65	85
	380V	42	65	70	100
	220/250V	50	75	85	125
DC	500V (3P)	10	20	40	40
	250V (2P)	10	20	40	40
Ics=%×Icu		100	100	100	75
Dimensions (mm)	W×H×D (3-pole)	140×257×109 (Fig. 4)			

* For more detail see the page. Ratings 5-15page ~ 5-22page, Curves 8-4page ~ 8-5page, and Drawings 9-5page ~ 9-8page

Note) 1. MCCBs can be applied to both 50 and 60Hz.
2. Standard type is designed on the basis of 40°C of ambient temperature.
3. There are certain products for hot areas. (400~800AF on the basis of 50°C)

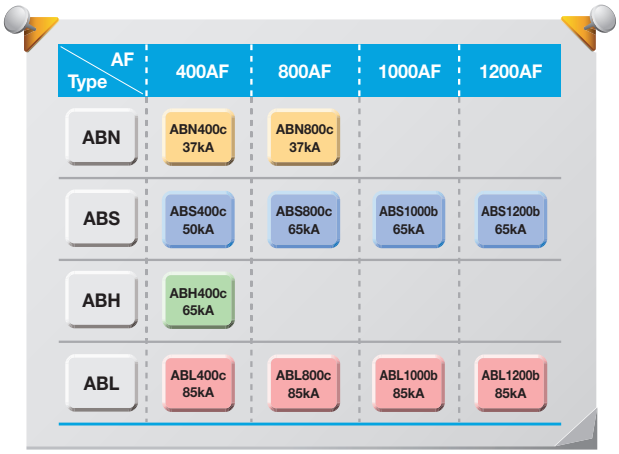

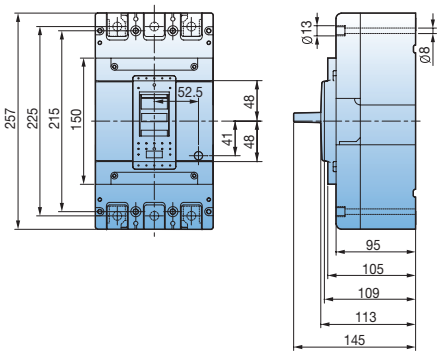


(Fig. 4)






	800AF			1000AF		1200AF		
	N-type	S-type	L-type	S-type	L-type	S-type		L-type
	ABN802c	ABS802c	ABL802c	-	-	-	-	-
	ABN803c	ABS803c	ABL803c	ABS1003b	ABL1003b	ABS1203b	ABS1203bE	ABL1203b
	ABN804c	ABS804c	ABL804c	ABS1004b	ABL1004b	ABS1204b	-	ABL1204b
	500, 630, 700, 800			1000		1200		
	690	690	690	600	600	600	600	600
	500	500	500	-	-	-	-	-
	1000	1000	1000	690	690	690	690	690
	8	8	8	6	6	6	6	6
	8	10	14	-	-	-	-	-
	25	45	65	50	75	50	50	75
	37	65	85	65	85	65	65	85
	45	75	100	65	85	65	65	85
	50	85	125	100	125	100	100	125
	10	20	40	-	-	-	-	-
	10	20	40	-	-	-	-	-
	100	100	75	50	50	50	50	50
	210×280×109 (Fig. 5)			220×400×105 (Fig. 6)		220×400×105 (Fig. 6)		

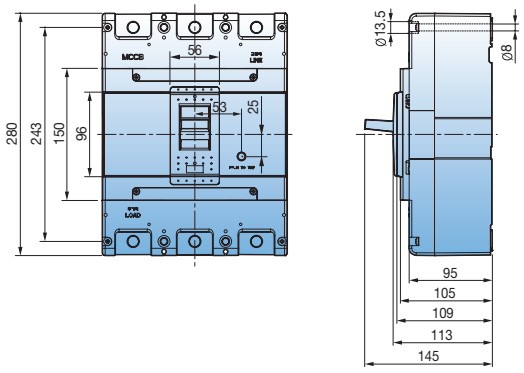

(Fig. 5)

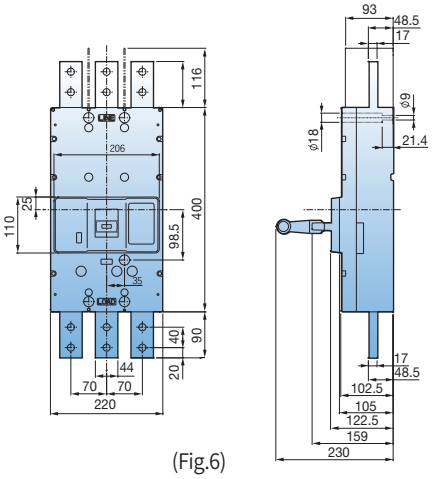

(Fig.6)

Quick selection table

Motor protection Molded Case Circuit Breakers

MCCBs







AF		30AF	50AF			60AF	
Type		S-type	N-type	S-type	H-type	N-type	S-type
Type and pole	3-pole	ABS33cM	ABN53cM	ABS53cM	ABH53cM	ABN63cM	ABS63cM
Rated current, In	A	16, 24	16, 24, 32, 45			60	
Rated operational voltage, Ue	AC (V)	690	690	690	690	690	690
	DC (V)	500	500	500	500	500	500
Rated insulation voltage, Ui	V	1000	1000	1000	1000	1000	1000
Rated impulse withstand voltage, Uimp	kV	8	8	8	8	8	8
Rated short-circuit breaking capacity (Icu) kA (Sym) , IEC 60947-2							
AC	690V	2.5	2.5	5	10	2.5	5
	480/500V	7.5	7.5	10	35	7.5	10
	415/460V	14	14	18	50	14	18
	380V	18	18	22	50	18	22
	220/250V	30	30	35	100	30	35
DC	500V (3P)	5	5	10	30	5	10
Ics=%×Icu		100	100	100	100	100	100
Dimensions (mm)	W×H×D (3-pole)	75×130×60 (Fig. 1)	75×130×60 (Fig. 1)		90×155×60 (Fig. 2)	75×130×60 (Fig. 1)	

* For more detail see the page. Ratings 5-3page ~ 5-14page, Curves 8-7page ~ 8-8page, and Drawings 9-2page ~ 9-4page

Note) 1. Same electrical and physical specification with MCCB.
2. Accessory: same application with MCCB
3. MCCBs can be applied to both 50 and 60Hz.

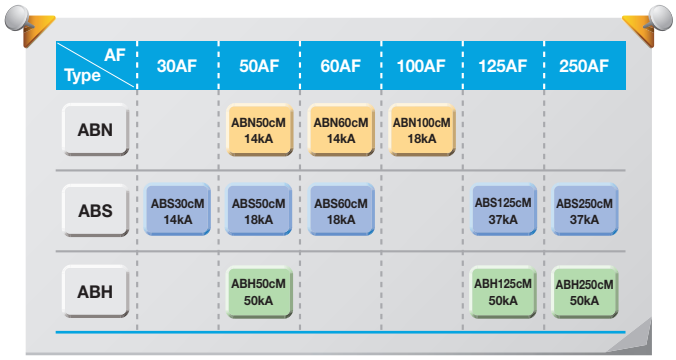

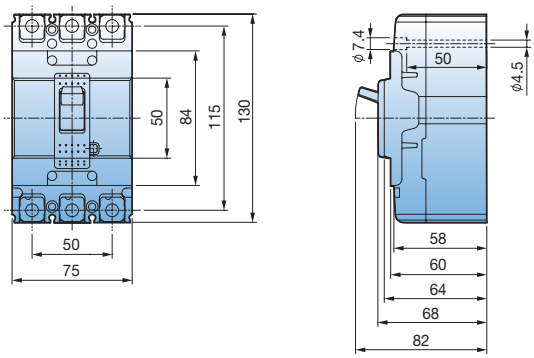


(Fig. 1)








	100AF	125AF		250AF		
	N-type	S-type	H-type	N-type	S-type	H-type
	ABN103cM	ABS103cM	ABH103cM	ABN203cM	ABS203cM	ABH203cM
	60, 75, 90	60, 75, 90		125, 150, 175, 225		
	690	690	690	690	690	690
	500	500	500	500	500	500
	1000	1000	1000	1000	1000	1000
	8	8	8	8	8	8
	5	8	10	8	8	10
	10	26	35	18	26	35
	18	37	50	26	37	50
	22	42	50	30	42	50
	35	85	100	65	85	100
	10	20	30	10	20	30
	100	100	100	100	100	100
	75×130×60 (Fig. 1)	90×155×60 (Fig. 2)		105×165×60 (Fig. 3)		

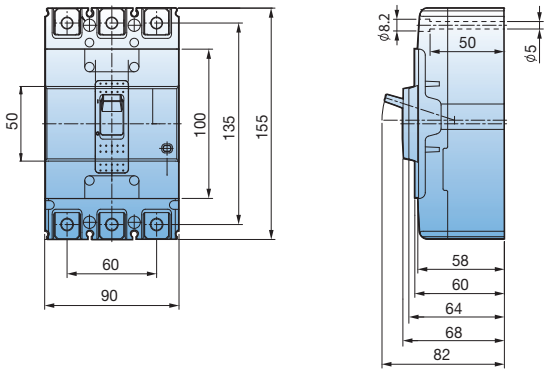

(Fig. 2)

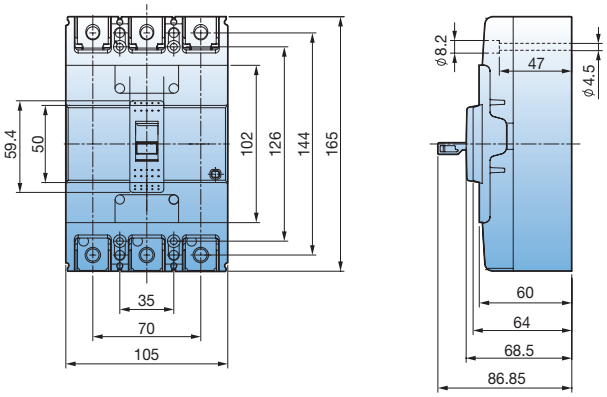

(Fig. 3)

Quick selection table
ZCT Molded Case Circuit Breakers

MCCBs







AF		30AF	50AF			60AF	
Type		S-type	N-type	S-type	H-type	N-type	S-type
Type and pole	2-pole	-	-	-	ABH52cZ	-	-
	3-pole	ABS33cZ	ABN53cZ	ABS53cZ	ABH53cZ	ABN63cZ	ABS63cZ
	4-pole	ABS34cZ	ABN54cZ	ABS54cZ	ABH54cZ	ABN64cZ	ABS64cZ
Rated current, In	A	15, 20, 30	15, 20, 30, 40, 50			15, 20, 30, 40, 50, 60	
Rated operational voltage, Ue	AC (V)	690	690	690	690	690	690
Rated insulation voltage, Ui	V	1000	1000	1000	1000	1000	1000
Rated impulse withstand voltage, Uimp	kV	8	8	8	8	8	8
Rated short-circuit breaking capacity (Icu) kA (Sym) , IEC 60947-2							
AC	690V	2.5	2.5	5	10	2.5	5
	480/500V	7.5	7.5	10	35	7.5	10
	415/460V	14	14	18	50	14	18
	380V	18	18	22	50	18	22
	220/250V	30	30	35	100	30	35
Ics=%×Icu		100	100	100	100	100	100
Dimensions (mm)	W×H×D (3-pole)	75×130×60 (Fig. 1)	75×130×60 (Fig. 1)		90×155×60 (Fig. 2)	75×130×60 (Fig. 1)	

* For more detail see the page. Ratings 5-3page ~ 5-14page, Curves 8-1page ~ 8-3page, and Drawings 9-2page ~ 9-4page

Note) 1. Same electrical and physical specification with MCCB.
2. Accessory: Same application with MCCB
3. MCCBs can be applied to both 50 and 60Hz.
4. Marking ZCT on the Aux. cover right side
5. Dimension of ABH52c, ABS102c and ABH102, which have a built-in ZCT, is 60 (W) X 155 (H) X 60 (D) mm
6. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.

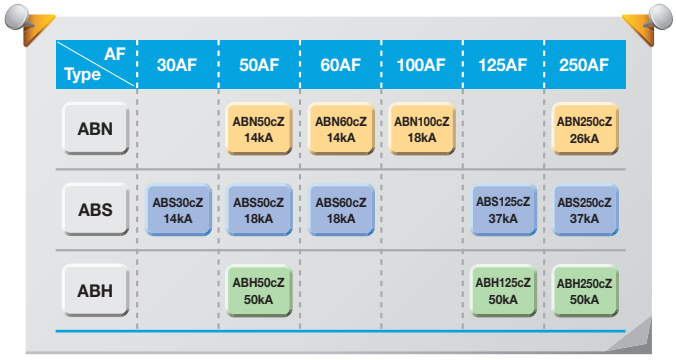

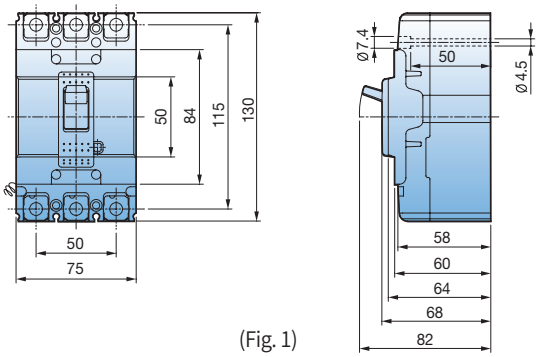


(Fig. 1)








	100AF	125AF		250AF		
	N-type	S-type	H-type	N-type	S-type	H-type
	-	ABS102cZ	ABH102cZ	-	-	-
	ABN103cZ	ABS103cZ	ABH103cZ	ABN203cZ	ABS203cZ	ABH203cZ
	ABN104cZ	ABS104cZ	ABH104cZ	ABN204cZ	ABS204cZ	ABH204cZ
	15, 20, 30, 40, 50 60, 75, 100	15, 20, 30, 40, 50, 60, 75, 100, 125		100, 125, 150, 175, 200, 225, 250		
	690	690	690	690	690	690
	1000	1000	1000	1000	1000	1000
	8	8	8	8	8	8
	5	8	10	8	8	10
	10	26	35	18	26	35
	18	37	50	26	37	50
	22	42	50	30	42	50
	35	85	100	65	85	100
	100	100	100	100	100	100
	75×130×60 (Fig. 1)	90×155×60 (Fig. 2)		105×165×60 (Fig. 3)		

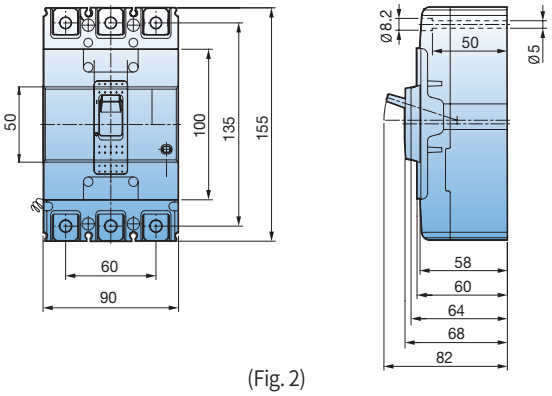

(Fig. 2)

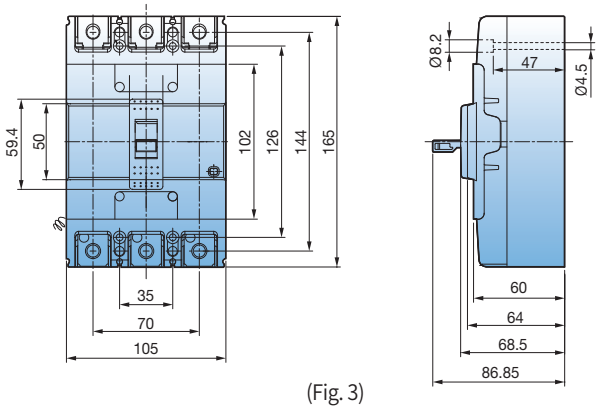

(Fig. 3)

Quick selection table
ZCT Molded Case Circuit Breakers




MCCBs

AF		400AF				
Type		N-type	S-type	H-type	L-type	
Type and pole	2-pole	-	-	-	-	
	3-pole	ABN403cZ	ABS403cZ	ABH403cZ	ABL403cZ	
	4-pole	ABN404cZ	ABS404cZ	ABH404cZ	ABL404cZ	
Rated current, In	A	250, 300, 350, 400				
Rated operational voltage, Ue	AC (V)	690	690	690	690	
Rated insulation voltage, Ui	V	1000	1000	1000	1000	
Rated impulse withstand voltage, Uimp	kV	8	8	8	8	
Rated short-circuit breaking capacity (Icu) kA (Sym) , IEC 60947-2						
AC	690V	5	8	10	14	
	480/500V	18	35	50	65	
	415/460V	37	50	65	85	
	380V	42	65	70	100	
	220/250V	50	75	85	125	
Ics=%×Icu		100	100	100	75	
Dimensions (mm)	W×H×D (3-pole)	140×257×109 (Fig. 4)				


* For more detail see the page. Ratings 5-15page ~ 5-18page, Curves 8-4page and Drawings 9-5page ~ 9-6page

Note) 1. Same electrical and physical specification with MCCB.
2. Accessory: Same application with MCCB
3. MCCBs can be applied to both 50 and 60Hz.
4. Marking ZCT on the Aux. cover right side
5. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.

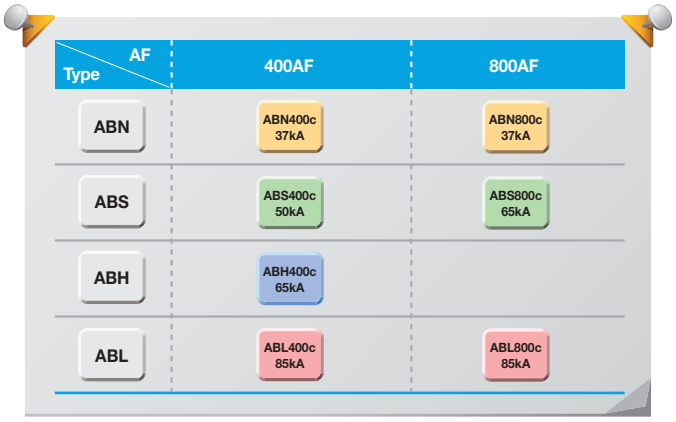




	800AF		
	N-type	S-type	L-type
	-	-	-
	ABN803cZ	ABS803cZ	ABL803cZ
	-	-	-
	500, 630, 700, 800		
	690	690	690
	1000	1000	1000
	8	8	8
	8	10	14
	25	45	65
	37	65	85
	45	75	100
	50	85	125
	100	100	75
	210×280×109 (Fig. 5)		

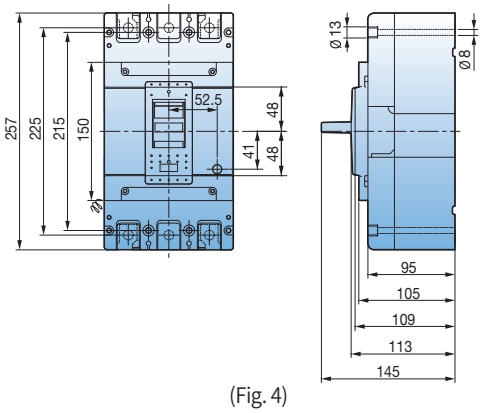

(Fig. 4)

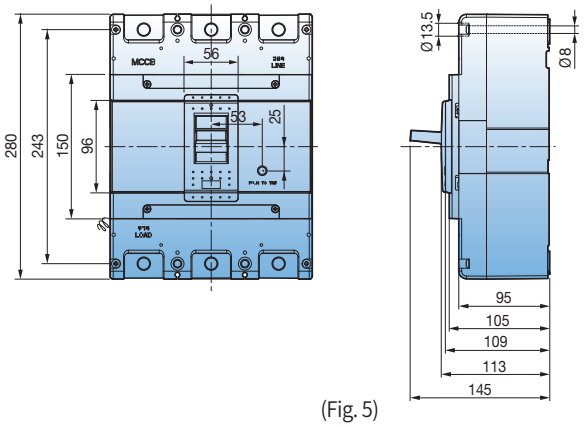

(Fig. 5)

Quick selection table
Earth Leakage Circuit Breakers

ELCBs







AF			30AF	50AF			60AF	
Type			S-type	N-type	S-type	H-type	N-type	S-type
Type and pole		2-pole	EBS32c	EBN52c	-	-	-	-
		3-pole	EBS33c	EBN53c	EBS53c	EBH53c	EBN63c	EBS63c
		4-pole	EBS34c	-	EBS54c	EBH54c	-	EBS64c
Protective function			Overload, short-circuit and ground fault	Overload, short-circuit and ground fault			Overload, short-circuit and ground fault	
Rated current, In		A	(5, 10) Note)3,15, 20, 30	15, 20, 30, 40, 50			60	
Rated impulse withstand voltage, Uimp		kV	6	6			6	
Instantaneous type	Rated residual current, I△n	mA	30, 100, 100/200/500, 100/300/500	30, 100, 100/200/500, 100/300/500			30, 100, 100/200/500, 100/300/500	
	Residual current off-time at I△n	sec	≤0.1	≤0.1			≤0.1	
	Rated operational voltage, Ue	AC (V)	220/460	220/460			220/460	
Time delay type	Rated residual current	1A	0.1/0.2/0.5/1	0.1/0.2/0.5/1			0.1/0.2/0.5/1	
	Intentional time delay	1s	0/0.2/0.5/1	0/0.2/0.5/1			0/0.2/0.5/1	
	Rated residual current	2A	0.1/0.4/1/2	0.1/0.4/1/2			0.1/0.4/1/2	
	Intentional time delay	2s	0.5/1/1.5/2	0.5/1/1.5/2			0.5/1/1.5/2	
Rated short-circuit breaking capacity (Icu) kA (Sym) , IEC 60947-2								
AC		415/460V	14 (10)	14	18	50	14	18
		220/250V	30 (25)	30	35	100	30	35
Ics=%×Icu			100	100	100	100	100	100
Dimensions (mm)		W×H×D	75×130×60	75×130×60		90×155×60	75×130×60	
		(3-pole)	(Fig. 1)	(Fig. 1)		(Fig. 2)	(Fig. 1)	

* For more detail see the page. Ratings 6-1page ~ 6-12page, Curves 8-1 ~ 8-3page and Drawings 9-9page ~ 9-11page

Note) 1. MCCBs can be applied to both 50 and 60Hz.
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. The short-circuit breaking capacities in ( ) are applied to the rated current in (5, 10A)
4. Below 250AF Some ELCBs have a test lead type for remote testing.

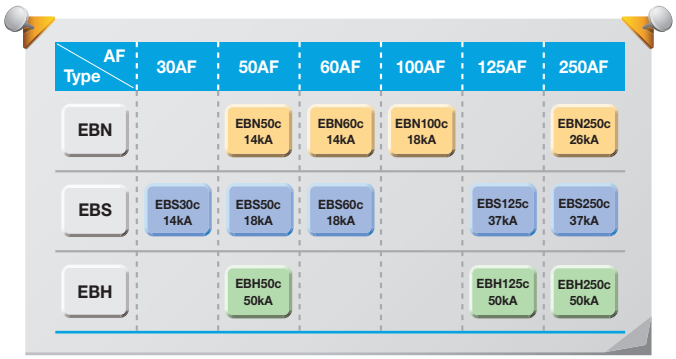

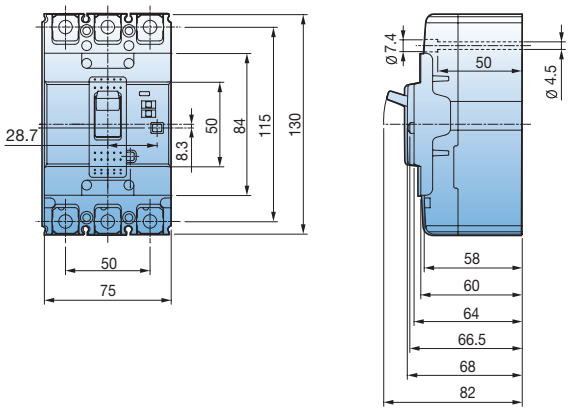


(Fig. 1)








	100AF	125AF		250AF		
	N-type	S-type	H-type	N-type	S-type	H-type
	EBN102c	-	-	EBN202c	-	-
	EBN103c	EBS103c	EBH103c	EBN203c	EBS203c	EBH203c
	EBN104c	EBS104c	EBH104c	-	EBS204c	EBH204c
	Overload, short-circuit and ground fault	Overload, short-circuit and ground fault		Overload, short-circuit and ground fault		
	60, 75, 100	15, 20, 30, 40, 50, 60, 75, 100, 125		100, 125, 150, 175, 200, 225, 250		
	6	6		6		
	30, 100, 100/200/500, 100/300/500	30, 100, 100/200/500, 100/300/500		30, 100, 100/200/500, 100/300/500		
	≤0.1	≤0.1		≤0.1		
	220/460	220/460		220/460		
	0.1/0.2/0.5/1	0.1/0.2/0.5/1		0.1/0.2/0.5/1		
	0/0.2/0.5/1	0/0.2/0.5/1		0/0.2/0.5/1		
	0.1/0.4/1/2	0.1/0.4/1/2		0.1/0.4/1/2		
	0.5/1/1.5/2	0.5/1/1.5/2		0.5/1/1.5/2		
	18	37	50	26	37	50
	35	85	100	65	85	100
	100	100	100	100	100	100
	75×130×60 (Fig. 1)	90×155×60 (Fig. 2)		105×165×60 (Fig. 3)		

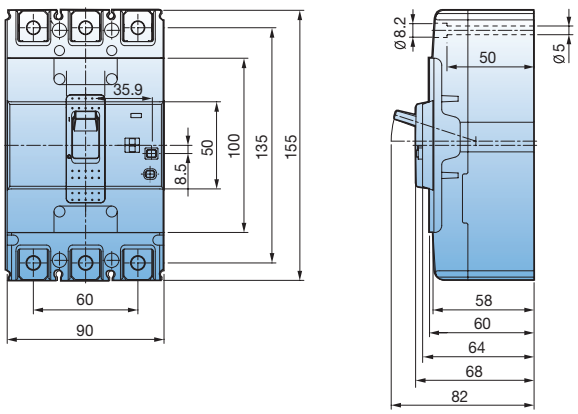

(Fig. 2)

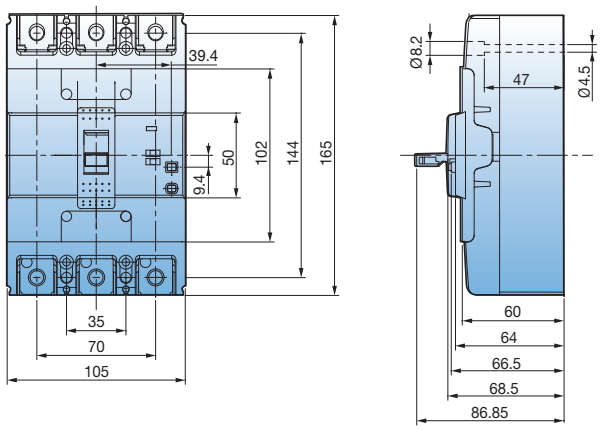

(Fig. 3)

Quick selection table
Earth Leakage Circuit Breakers





ELCBs

AF			400AF				
Type			N-type	S-type	H-type	L-type	
		3-pole	EBN403c	EBS403c	EBH403c	EBL403c	
		4-pole	EBN404c	EBS404c	EBH404c	EBL404c	
Protective function			Overload, short-circuit and ground fault				
Rated current, In		A	250, 300, 350, 400				
Rated impulse withstand voltage, Uimp		kV	6	6	6	6	
Rated operational voltage, Ue		AC (V)	220/460	220/460	220/460	220/460	
Instantaneous type	Rated residual current, I∆n	mA	30, 100/200/500				
	Residual current off-time at I∆n	sec	≤0.1	≤0.1	≤0.1	≤0.1	
Time delay type	Rated residual current	A	0.1/0.4/1/2				
	Intentional time delay	s	0.5/1/1.5/2				
Rated short-circuit breaking capacity (Icu) kA (Sym) , IEC 60947-2							
	AC	415/460V	37	50	65	85	
		220/250V	50	75	85	125	
	Ics=%×Icu		100	100	100	75	
Dimensions (mm)		W×H×D (3-pole)	140×257×109 (Fig. 4)				

* For more detail see the page. Ratings 6-13page ~ 6-18page, Curves 8-4~ 8-5page and Drawings 9-12page ~ 9-14page

Note) 1. MCCBs other than 1,000/1200AF can be applied to both 50 and 60Hz.
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.

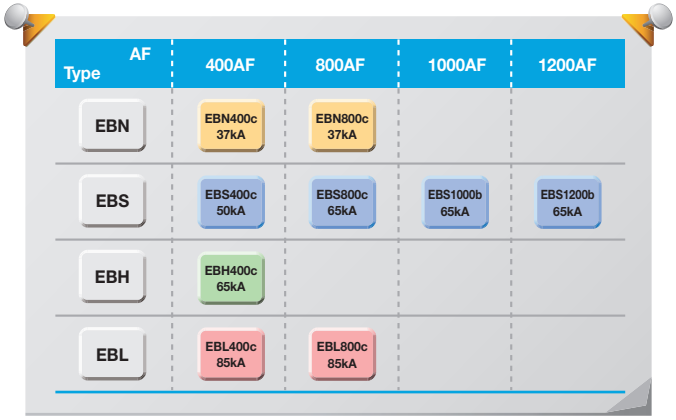

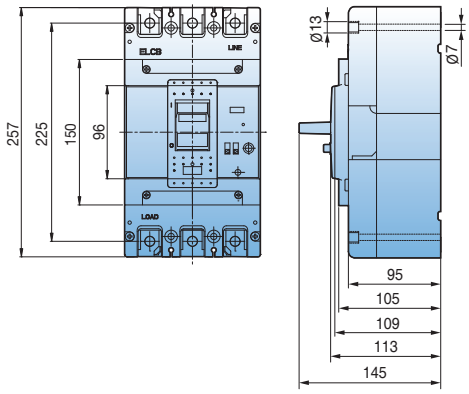


(Fig. 4)






	800AF			1000AF	1200AF
	N-type	S-type	L-type	S-type	S-type
	EBN803c	EBS803c	EBL803c	EBN1003b	EBS1203b
	-	-	-	-	-
	Overload, short-circuit and ground fault			Overload, short-circuit and ground fault	
	500, 630, 700, 800			1000	1200
	6	6	6	-	-
	220/460	220/460	220/460	220/460	220/460
	30, 100/200/500			100/200/500	100/200/500
	≤0.1	≤0.1	≤0.1	≤0.1	≤0.1
	0.1/0.4/1/2			-	
	0.5/1/1.5/2			-	
	37	65	85	85	85
	50	85	125	125	125
	100	100	75	-	-
	210×280×109 (Fig. 5)			220×565×105 (Fig. 6)	

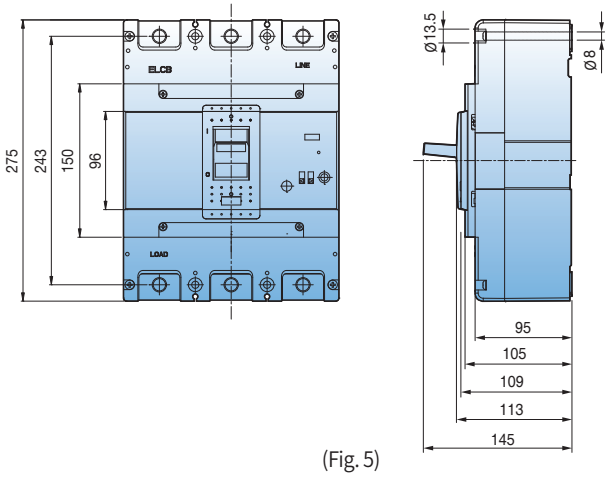


(Fig. 5)

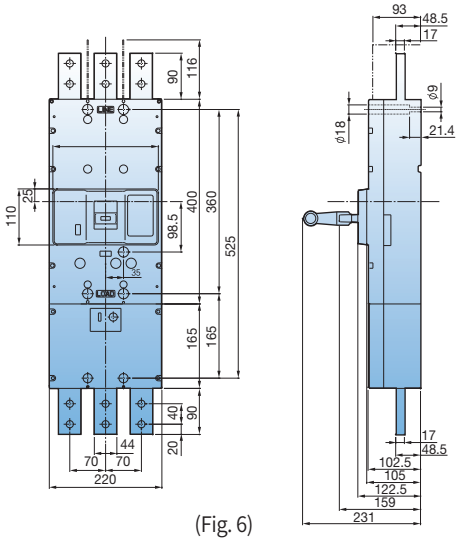

(Fig. 6)


Type numbering system

MCCB

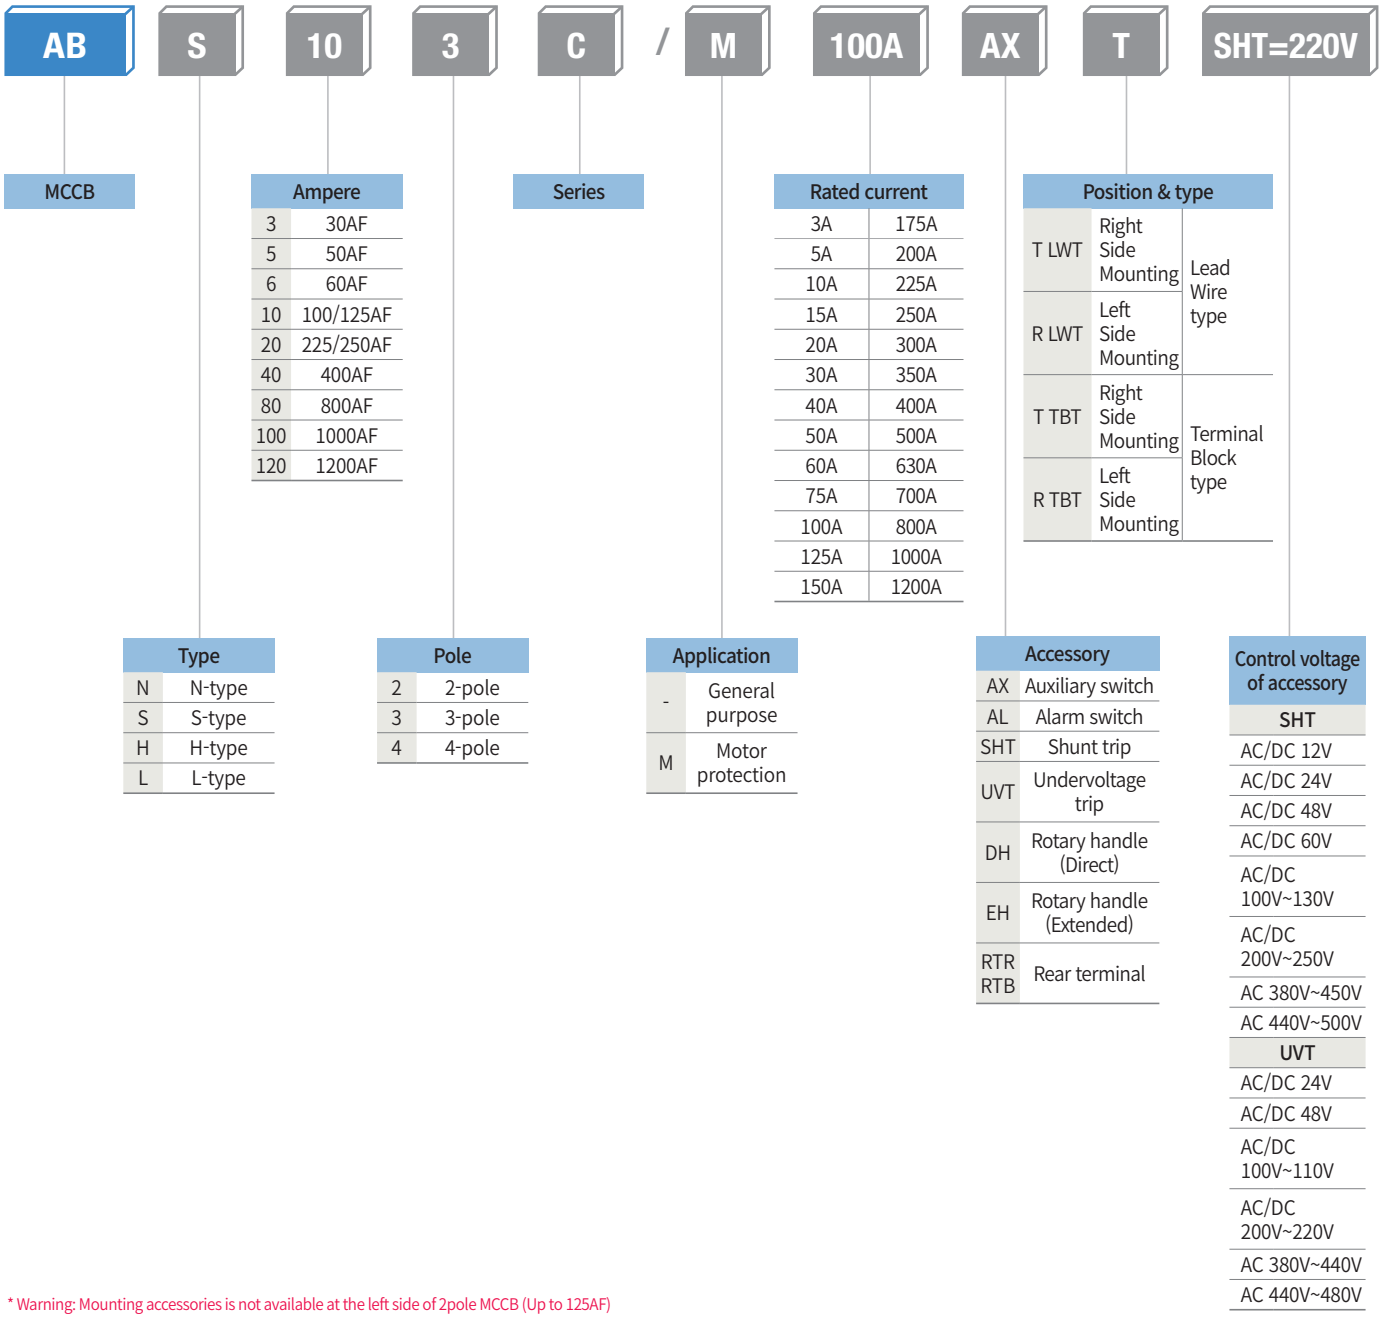

* Warning: Mounting accessories is not available at the left side of 2pole MCCB (Up to 125AF)

ELCB

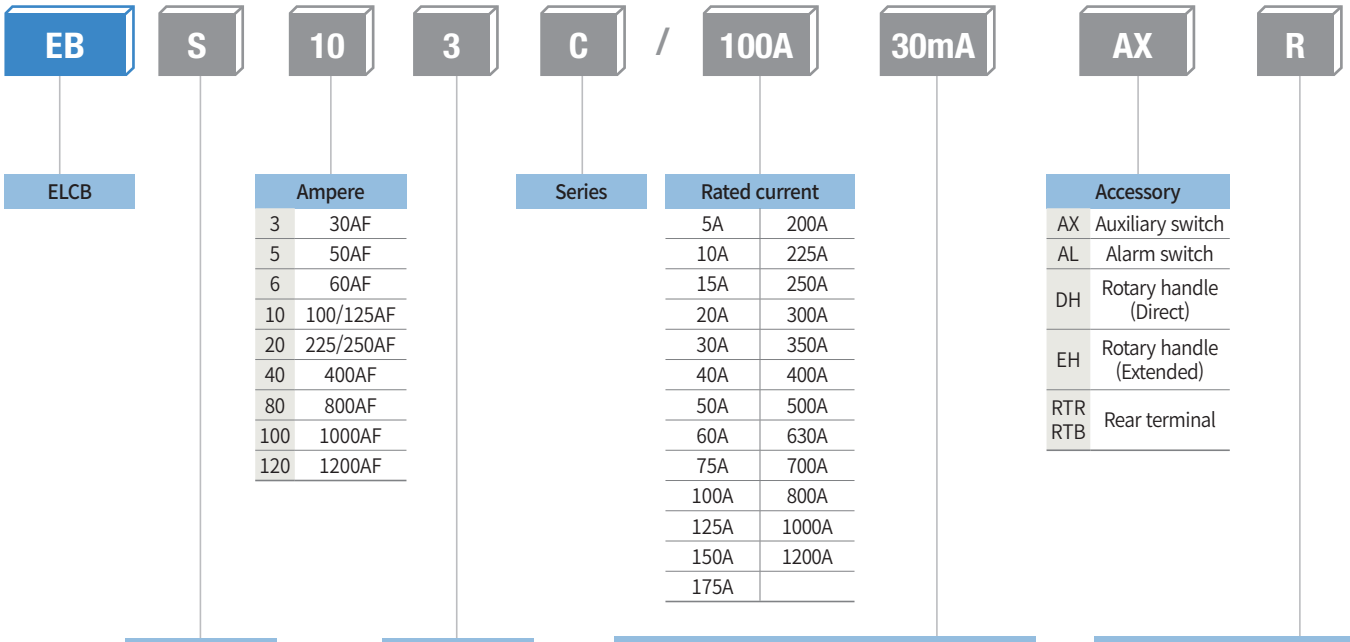

ELCB

Ampere	
3	30AF
5	50AF
6	60AF
10	100/125AF
20	225/250AF
40	400AF
80	800AF
100	1000AF
120	1200AF

Series

Rated current	
5A	200A
10A	225A
15A	250A
20A	300A
30A	350A
40A	400A
50A	500A
60A	630A
75A	700A
100A	800A
125A	1000A
150A	1200A
175A	

Accessory	
AX	Auxiliary switch
AL	Alarm switch
DH	Rotary handle (Direct)
EH	Rotary handle (Extended)
RTR RTB	Rear terminal

Type	
N	N-type
S	S-type
H	H-type
L	L-type

Pole	
2	2-pole
3	3-pole
4	4-pole

Rated residual current, Intentional time delay	
30mA	30mA
100mA	100mA
100/200/500mA	100/200/500mA
1A, 1s	0.1/0.2/0.5/1A, 0/0.2/0.5/1s
2A, 2s	0.1/0.4/1/2A, 0.5/1/1.5/2s

Position & type		
R LWT	Left Side Mounting	Lead Wire type
R TBT	Left Side Mounting	Terminal Block type

* Warning: Mounting accessories is not available at the right side ELCB (Up to 250AF)




ABE32b



ABE33b

Ratings

Frame size			30AF	
Type and pole			**E-type**	
	2-pole		**ABE32b**	
	3-pole		**ABE33b**	
	4-pole		-	
Rated current, In			3-5-10-15-20-30A	
Rated operational voltage, Ue			AC: 460V	
			-	
Rated insulation voltage, Ui			AC: 460V	
Rated impulse withstand voltage, Uimp			6kV	
Rated short-circuit breaking			**E-type**	
capacity, Icu	AC	690V	-	
IEC 60947-2 (Icu)		480/500V	-	
		460V	**2.5kA**	
		415V	2.5kA	
		380V	2.5kA	
		220/250V	**5kA**	
	DC	500V (3P)	-	
		250V (2P)	-	
Ics=%×Icu			50%	
Protective function			Overload, short-circuit	
Type of trip unit			Hydraulic-magnetic	
Magnetic trip range			12In	
Life cycle Note2)	Mechanical		8,500 operations	
	Electrical		1,500 operations	
Connection	Standard		Front connection	
	Optional		-	
			-	
Mounting	Standard		Screw fixing	

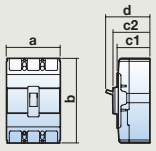Dimensions (mm)	Pole	2p	3p
	a	50	75
	b	96	96
	c1 Note1)	60	60
	c2 Note1)	-	-
	d	80	80
Weight, kg	Standard	0.5	0.7

Certification	Pole	2p	3p
CE marking	CE	○	○

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)


For more information

- Accessories ▶ 7-1 page
- Trip curves ▶ 8-1 page
- Drawings ▶ 9-1 page
- Connection and mounting ▶ 10-2 page


Ordering types

Breaker types

ABE type (2.5kA/460V)		
Rated current, In	2-pole	3-pole
3 A	ABE32b/3	ABE33b/3
5 A	ABE32b/5	ABE33b/5
10 A	ABE32b/10	ABE33b/10
15 A	ABE32b/15	ABE33b/15
20 A	ABE32b/20	ABE33b/20
30 A	ABE32b/30	ABE33b/30

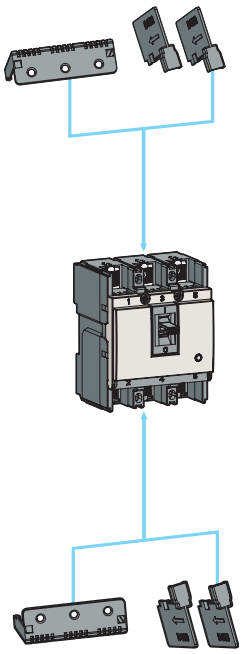


Breaker types

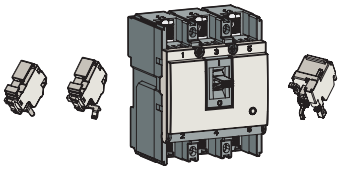

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
SHT	Shunt trip



Maximum possibilities

T-position	One of above auxiliaries
R-position	Option of AX or AL

Note) For more detail see 7-1 page



External accessories

ABE30b	Name
B-03B	Insulation barrier
TBS23	Short type


Note) For more detail see 7-9 ~ 7-26 page


ABS32c


ABS33c


ABS34c

Ratings

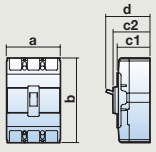Frame size			30AF		
Type and pole			**S-type**		
	2-pole		**ABS32c**		
	3-pole		**ABS33c**		
	4-pole		**ABS34c**		
Rated current, In			(3-5-10)Note1)-15-20-30A		
Rated operational voltage, Ue			AC: 690V		
			DC: 500V		
Rated insulation voltage, Ui			AC: 1000V		
Rated impulse withstand voltage, Uimp			8kV		
Rated short-circuit breaking			**S-type**		
capacity, Icu	AC	690V	2.5kA		
IEC 60947-2 (Icu)		480/500V	7.5 (5)kA		
		460V	**14 (10)kA**		
		415V	14 (10)kA		
		380V	18 (14)kA		
		220/250V	**30 (25)kA**		
	DC	500V (3P)	5kA		
		250V (2P)	5kA		
Ics=%×Icu			100%		
Protective function			Overload, short-circuit		
Type of trip unit			Thermal-magnetic		
Magnetic trip range			400A		
Life cycle Note4)	Mechanical		25,000 operations		
	Electrical		10,000 operations		
Connection	Standard		Front connection		
	Optional		Rear connection		
			Plug-in		
Mounting	Standard		Screw fixing		
Dimensions (mm)		Pole	2p	3p	4p
		a	50	75	100
		b	130	130	130
		c1 Note2)	60	60	60
		c2 Note2)	64	64	64
		d	82	82	82
Weight, kg		Standard	0.5	0.7	0.9
Certification		Pole	2p	3p	4p
CE marking		CE	○	○	○

Note) 1. The short-circuit breaking capacities in ( ) are applied to the rated current in (3, 5, 10A)
2. Depth by door cut size: c1 for large cut, c2 for small cut
3. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
4. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information


- Accessories ▶ 7-1 page
- Trip curves ▶ 8-1 page
- Drawings ▶ 9-2 page
- Connection and mounting ▶ 10-2 page

Ordering types


Breaker types

ABS type (10kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
3 A	ABS32c/3	ABS33c/3	ABS34c/3
5 A	ABS32c/5	ABS33c/5	ABS34c/5
10 A	ABS32c/10	ABS33c/10	ABS34c/10

ABS type (14kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABS32c/15	ABS33c/15	ABS34c/15
20 A	ABS32c/20	ABS33c/20	ABS34c/20
30 A	ABS32c/30	ABS33c/30	ABS34c/30

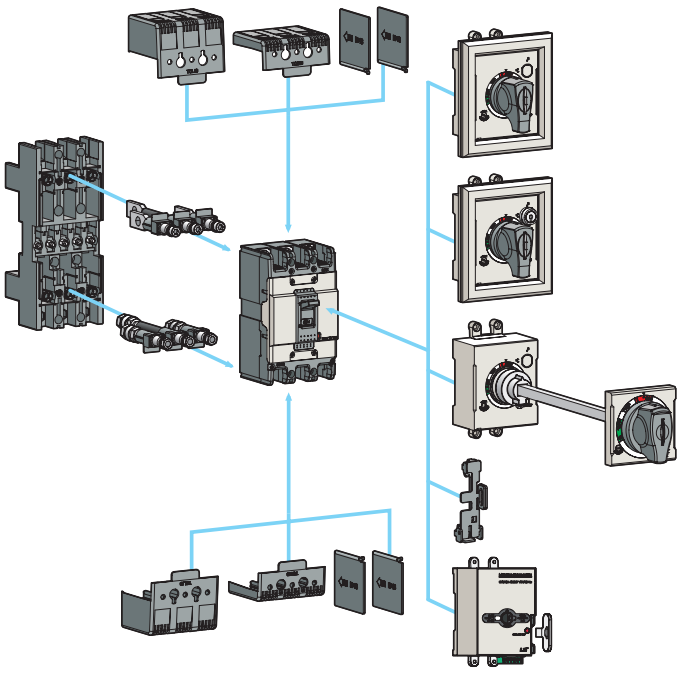


Breaker types

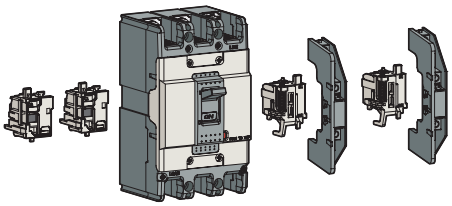

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch
SHT	Shunt trip
UVT	Undervoltage trip



Maximum possibilities

T-position	One of above auxiliaries
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

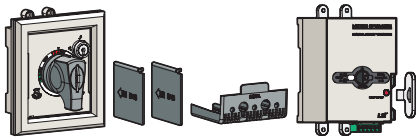

External accessories

ABS30c	Name
IB13	Insulation barrier
TCL13	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS13	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-30c	Rotary handle (Direct) - applicable for either 2, 3pole
DH100	Rotary handle (Direct)
DHK100	Rotary handle (Direct, key lock)
EH100	Rotary handle (Extended)
RTR1	Rear terminal (Round)
PB-A3	Plug-in kit
Handle lock	
MOP-M1	Remote operation

Note) For more detail see 7-9 ~ 7-26 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.

50AF MCCB
ABN50c, ABS50c, ABH50c



ABS52c


ABS53c


ABS54c

Ratings

Frame size			50AF		
Type and pole			**N-type**	**S-type**	**H-type**
	2-pole		**ABN52c**	**ABS52c**	**ABH52c**
	3-pole		**ABN53c**	**ABS53c**	**ABH53c**
	4-pole		**ABN54c**	**ABS54c**	**ABH54c**
Rated current, In			15-20-30-40-50A		
Rated operational voltage, Ue			AC: 690V		
			DC: 500V		
Rated insulation voltage, Ui			AC: 1000V		
Rated impulse withstand voltage, Uimp			8kV		
Rated short-circuit breaking			**N-type**	**S-type**	**H-type**
capacity, Icu	AC	690V	2.5kA	5kA	10kA
IEC 60947-2 (Icu)		480/500V	7.5kA	10kA	35kA
		460V	**14kA**	**18kA**	**50kA**
		415V	14kA	18kA	50kA
		380V	18kA	22kA	50kA
		220/250V	**30kA**	**35kA**	**100kA**
	DC	500V (3P)	5kA	10kA	30kA
		250V (2P)	5kA	10kA	30kA
Ics=%×Icu			100%	100%	100%
Protective function			Overload, short-circuit		
Type of trip unit			Thermal-magnetic		
Magnetic trip range			12×In (30A and under: 400A)		
Life cycle Note3)	Mechanical		25,000 operations		
	Electrical		10,000 operations		
Connection	Standard		Front connection		
	Optional		Rear connection		
			Plug-in		
Mounting	Standard		Screw fixing		

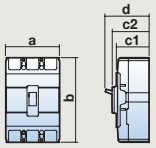Dimensions (mm)	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p
	a	50	75	100	50	75	100	60	90	120
	b	130			130			155		
	c1 Note1)	60			60			60		
	c2 Note1)	64			64			64		
	d	82			82			82		
Weight, kg	Standard	0.5	0.7	0.9	0.5	0.7	0.9	0.7	1	1.2

Certification	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p
CE marking	CE		○			○			○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
3. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-1 page
- Trip curves ▶ 8-1 page
- Drawings ▶ 9-2 page
- Connection and mounting ▶ 10-2 page


Ordering types

Breaker types


ABN type (14kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABN52c/15	ABN53c/15	ABN54c/15
20 A	ABN52c/20	ABN53c/20	ABN54c/20
30 A	ABN52c/30	ABN53c/30	ABN54c/30
40 A	ABN52c/40	ABN53c/40	ABN54c/40
50 A	ABN52c/50	ABN53c/50	ABN54c/50

ABS type (18kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABS52c/15	ABS53c/15	ABS54c/15
20 A	ABS52c/20	ABS53c/20	ABS54c/20
30 A	ABS52c/30	ABS53c/30	ABS54c/30
40 A	ABS52c/40	ABS53c/40	ABS54c/40
50 A	ABS52c/50	ABS53c/50	ABS54c/50

ABH type (50kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABH52c/15	ABH53c/15	ABH54c/15
20 A	ABH52c/20	ABH53c/20	ABH54c/20
30 A	ABH52c/30	ABH53c/30	ABH54c/30
40 A	ABH52c/40	ABH53c/40	ABH54c/40
50 A	ABH52c/50	ABH53c/50	ABH54c/50

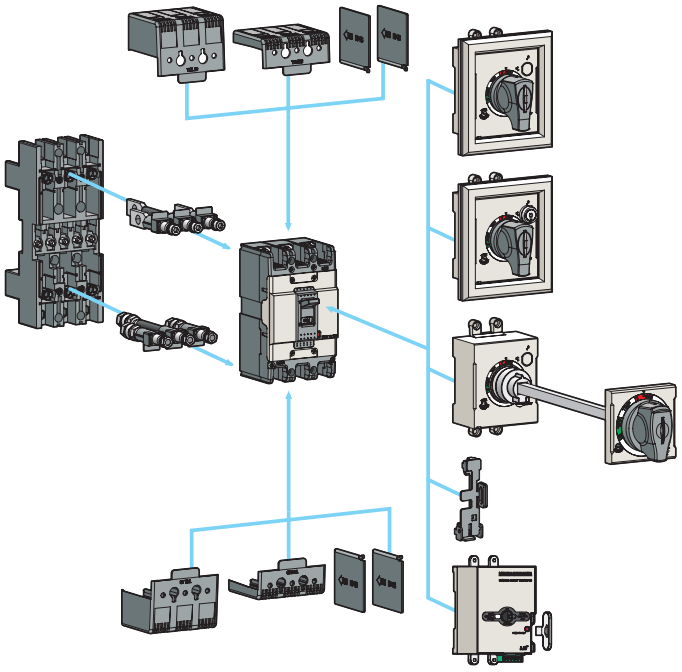


Accessories

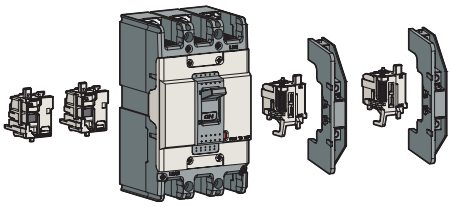

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch
SHT	Shunt trip
UVT	Undervoltage trip



Maximum possibilities

T-position	One of above auxiliaries
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

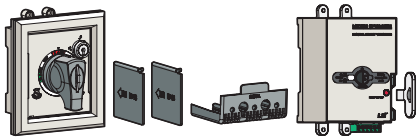

External accessories

ABN50c ABS50c	ABH50c	Name
IB13	**IB23**	Insulation barrier
TCL13	**TCL23**	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS13	**TCS23**	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-30c	**N-40c**	Rotary handle (Direct) - applicable for either 2, 3pole
DH100	**DH125**	Rotary handle (Direct)
DHK100	**DHK125**	Rotary handle (Direct, key lock)
EH100	**EH125**	Rotary handle (Extended)
-	**RTB2**	Rear terminal (Bar)
RTR1	**RTR2**	Rear terminal (Round)
PB-A3	**PB-C3**	Plug-in kit
Handle lock		
MOP-M1	**MOP-M2**	Remote operation

Note) For more detail see 7-9 ~ 7-26 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.



ABS62c


ABS63c


ABS64c

Ratings

Frame size			60AF	
Type and pole			**N-type**	**S-type**
	2-pole		**ABN62c**	**ABS62c**
	3-pole		**ABN63c**	**ABS63c**
	4-pole		**ABN64c**	**ABS64c**
Rated current, In			15-20-30-40-50-60A	
Rated operational voltage, Ue			AC: 690V	
			DC: 500V	
Rated insulation voltage, Ui			AC: 1000V	
Rated impulse withstand voltage, Uimp			8kV	
Rated short-circuit breaking			**N-type**	**S-type**
capacity, Icu	AC	690V	2.5kA	5kA
IEC 60947-2 (Icu)		480/500V	7.5kA	10kA
		460V	**14kA**	**18kA**
		415V	14kA	18kA
		380V	18kA	22kA
		220/250V	**30kA**	**35kA**
	DC	500V (3P)	5kA	10kA
		250V (2P)	5kA	10kA
Ics=%×Icu			100%	100%
Protective function			Overload, short-circuit	
Type of trip unit			Thermal-magnetic	
Magnetic trip range			12×In (30A and under: 400A)	
Life cycle Note3)	Mechanical		25,000 operations	
	Electrical		10,000 operations	
Connection	Standard		Front connection	
	Optional		Rear connection	
			Plug-in	
Mounting	Standard		Screw fixing	

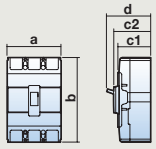Dimensions (mm)	Pole	2p	3p	4p	2p	3p	4p
	a	50	75	100	50	75	100
	b	130			130		
	c1 Note1)	60			60		
	c2 Note1)	64			64		
	d	82			82		
Weight, kg	Standard	0.5	0.7	0.9	0.5	0.7	0.9

Certification	Pole	2p	3p
CE marking	CE	○	○

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
3. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information


- Accessories ▶ 7-1 page
- Trip curves ▶ 8-1 page
- Drawings ▶ 9-2 page
- Connection and mounting ▶ 10-2 page

Ordering types


Breaker types

ABN type (14kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABN62c/15	ABN63c/15	ABN64c/15
20 A	ABN62c/20	ABN63c/20	ABN64c/20
30 A	ABN62c/30	ABN63c/30	ABN64c/30
40 A	ABN62c/40	ABN63c/40	ABN64c/40
50 A	ABN62c/50	ABN63c/50	ABN64c/50
60 A	ABN62c/60	ABN63c/60	ABN64c/60

ABS type (18kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABS62c/15	ABS63c/15	ABS64c/15
20 A	ABS62c/20	ABS63c/20	ABS64c/20
30 A	ABS62c/30	ABS63c/30	ABS64c/30
40 A	ABS62c/40	ABS63c/40	ABS64c/40
50 A	ABS62c/50	ABS63c/50	ABS64c/50
60 A	ABS62c/60	ABS63c/60	ABS64c/60

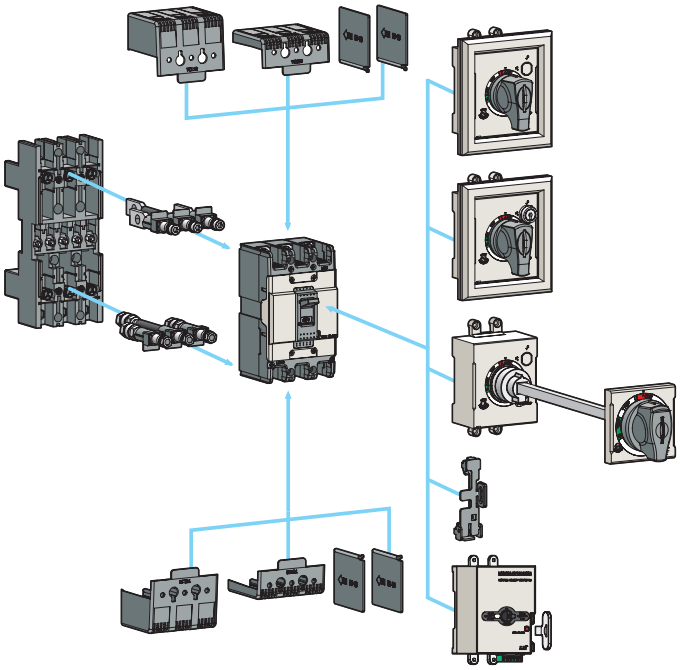


Accessories

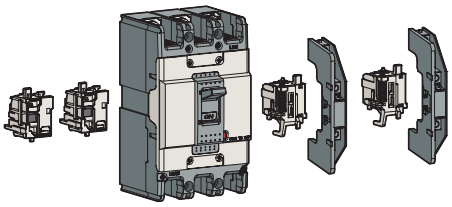

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch
SHT	Shunt trip
UVT	Undervoltage trip



Maximum possibilities

T-position	One of above auxiliaries
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

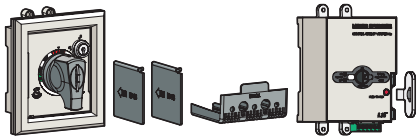

External accessories

ABN50c ABS50c	Name
IB13	Insulation barrier
TCL13	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS13	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-30c	Rotary handle (Direct) - applicable for either 2, 3pole
DH100	Rotary handle (Direct)
DHK100	Rotary handle (Direct, key lock)
EH100	Rotary handle (Extended)
RTB1	Rear terminal (Bar)
RTR1	Rear terminal (Round)
PB-A3	Plug-in kit
handle lock	
MOP-M1	Remote operation

Note) For more detail see 7-9 ~ 7-26 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.



ABN102c




ABN103c



ABN104c

Ratings

Frame size			100AF	
Type and pole			N-type	
	2-pole		**ABN102c**	**ABN102e**
	3-pole		**ABN103c**	**ABN103e**
	4-pole		**ABN104c**	**ABN104e**
Rated current, In			15-20-30-40-50-60-75-100A	
Rated operational voltage, Ue			AC: 690V	
			DC: 500V	
Rated insulation voltage, Ui			AC: 1000V	
Rated impulse withstand voltage, Uimp			8kV	
Rated short-circuit breaking			N-type	
capacity, Icu	AC	690V	5kA	7.5 (5)kA
IEC 60947-2 (Icu)		480/500V	10kA	14 (10)kA
		460V	**18kA**	**31 (18)kA**
		415V	18kA	31 (18)kA
		380V	22kA	31 (22)kA
		220/250V	**35kA**	**65 (35)kA**
	DC	500V (3P)	10kA	15 (10)kA
		250V (2P)	10kA	15 (10)kA
Ics=%×Icu			100%	( )
Protective function			Overload, short-circuit	
Type of trip unit			Thermal-magnetic	
Magnetic trip range			400A	
Life cycle Note4)	Mechanical		25,000 operations	
	Electrical		10,000 operations	
Connection	Standard		Front connection	
	Optional		Rear connection	
			Plug-in	
Mounting	Standard		Screw fixing	

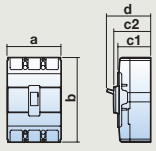Dimensions (mm)	Pole	2p	3p	4p
	a	50	75	100
	b	130	130	130
	c1 Note1)	60	60	60
	c2 Note1)	64	64	64
	d	82	82	82
Weight, kg	Standard	0.5	0.7	0.9

Certification	Pole	2p	3p	4p
CE marking	CE	○	○	○

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
3. The Ics(Service breaking capacity) of ABN100e are in ( )
4. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information


- Accessories ▶ 7-1 page
- Trip curves ▶ 8-1 page
- Drawings ▶ 9-2 page
- Connection and mounting ▶ 10-2 page

Ordering types


Breaker types

ABN-c type (18kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABN102c/15	ABN103c/15	ABN104c/15
20 A	ABN102c/20	ABN103c/20	ABN104c/20
30 A	ABN102c/30	ABN103c/30	ABN104c/30
40 A	ABN102c/40	ABN103c/40	ABN104c/40
50 A	ABN102c/50	ABN103c/50	ABN104c/50
60 A	ABN102c/60	ABN103c/60	ABN104c/60
75 A	ABN102c/75	ABN103c/75	ABN104c/75
100 A	ABN102c/100	ABN103c/100	ABN104c/100

ABN-e type (31kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABN102e/15	ABN103e/15	ABN104e/15
20 A	ABN102e/20	ABN103e/20	ABN104e/20
30 A	ABN102e/30	ABN103e/30	ABN104e/30
40 A	ABN102e/40	ABN103e/40	ABN104e/40
50 A	ABN102e/50	ABN103e/50	ABN104e/50
60 A	ABN102e/60	ABN103e/60	ABN104e/60
75 A	ABN102e/75	ABN103e/75	ABN104e/75
100 A	ABN102e/100	ABN103e/100	ABN104e/100

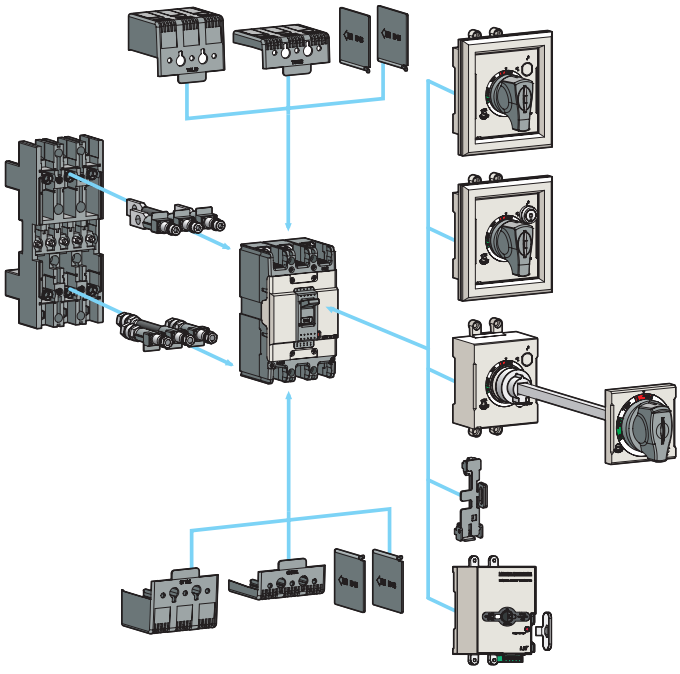


Accessories

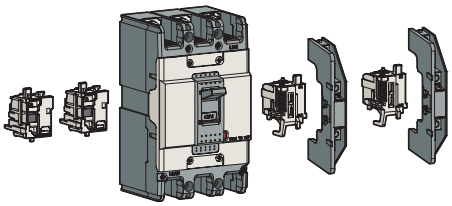

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch
SHT	Shunt trip
UVT	Undervoltage trip



Maximum possibilities

T-position	One of above auxiliaries
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

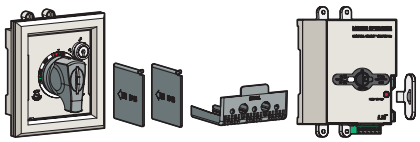

External accessories

ABN100c	Name
IB13	Insulation barrier
TCL13	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS13	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-30c	Rotary handle (Direct) - applicable for either 2, 3pole
DH100	Rotary handle (Direct)
DHK100	Rotary handle (Direct, key lock)
EH100	Rotary handle (Extended)
RTB1	Rear terminal (Bar)
RTR1	Rear terminal (Round)
PB-A3	Plug-in kit
Handle lock	
MOP-M1	Remote operation

Note) For more detail see 7-9 ~ 7-26 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.

125AF MCCB
ABS125c, ABH125c, ABL125c



ABS102c


ABS103c


ABS104c

Ratings

Frame size			125AF		
Type and pole			**N-type**	**H-type**	**L-type**
	2-pole		**ABS102c**	**ABH102c**	**ABL102c**
	3-pole		**ABS103c**	**ABH103c**	**ABL103c**
	4-pole		**ABS104c**	**ABH104c**	**ABL104c**
Rated current, In			15-20-30-40-50-60-75-100-125A		
Rated operational voltage, Ue			AC: 690V		
			DC: 500V		
Rated insulation voltage, Ui			AC: 1000V		
Rated impulse withstand voltage, Uimp			8kV		
Rated short-circuit breaking			**N-type**	**H-type**	**L-type**
capacity, Icu	AC	690V	8kA	10kA	10 (10)kA
IEC 60947-2 (Icu)		480/500V	26kA	35kA	35 (35)kA
		460V	**37kA**	**50kA**	**60 (50)kA**
		415V	37kA	50kA	60 (50)kA
		380V	42kA	50kA	60 (50)kA
		220/250V	**85kA**	**100kA**	**125 (100)kA**
	DC	500V (3P)	20kA	30kA	30 (30)kA
		250V (2P)	20kA	30kA	30 (30)kA
Ics=%×Icu			100%	100%	( )
Protective function			Overload, short-circuit		
Type of trip unit			Thermal-magnetic		
Magnetic trip range			12×In (30A and under: 400A)		
Life cycle Note4)	Mechanical		25,000 operations		
	Electrical		10,000 operations		
Connection	Standard		Front connection		
	Optional		Rear connection		
			Plug-in		
Mounting	Standard		Screw fixing		

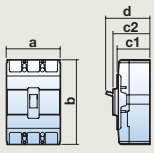Dimensions (mm)	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p
	a	60	90	120	60	90	120	60	90	120
	b	155			155			155		
	c1 Note1)	60			60			60		
	c2 Note1)	64			64			64		
	d	82			82			82		
Weight, kg	Standard	0.7	1	1.2	0.7	1	1.2	0.7	1	1.2

Certification	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p
CE marking	CE		○			○			○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
3. The Ics(Service breaking capacity) of ABL125AF are in ( )
4. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-1 page
- Trip curves ▶ 8-2 page
- Drawings ▶ 9-3 page
- Connection and mounting ▶ 10-2 page

Ordering types


Breaker types

ABS type (37kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABS102c/15	ABS103c/15	ABS104c/15
20 A	ABS102c/20	ABS103c/20	ABS104c/20
30 A	ABS102c/30	ABS103c/30	ABS104c/30
40 A	ABS102c/40	ABS103c/40	ABS104c/40
50 A	ABS102c/50	ABS103c/50	ABS104c/50
60 A	ABS102c/60	ABS103c/60	ABS104c/60
75 A	ABS102c/75	ABS103c/75	ABS104c/75
100 A	ABS102c/100	ABS103c/100	ABS104c/100
125 A	ABS102c/125	ABS103c/125	ABS104c/125

ABH type (50kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABH102c/15	ABH103c/15	ABH104c/15
20 A	ABH102c/20	ABH103c/20	ABH104c/20
30 A	ABH102c/30	ABH103c/30	ABH104c/30
40 A	ABH102c/40	ABH103c/40	ABH104c/40
50 A	ABH102c/50	ABH103c/50	ABH104c/50
60 A	ABH102c/60	ABH103c/60	ABH104c/60
75 A	ABH102c/75	ABH103c/75	ABH104c/75
100 A	ABH102c/100	ABH103c/100	ABH104c/100
125 A	ABH102c/125	ABH103c/125	ABH104c/125


ABL type (60kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
15 A	ABL102c/15	ABL103c/15	ABL104c/15
20 A	ABL102c/20	ABL103c/20	ABL104c/20
30 A	ABL102c/30	ABL103c/30	ABL104c/30
40 A	ABL102c/40	ABL103c/40	ABL104c/40
50 A	ABL102c/50	ABL103c/50	ABL104c/50
60 A	ABL102c/60	ABL103c/60	ABL104c/60
75 A	ABL102c/75	ABL103c/75	ABL104c/75
100 A	ABL102c/100	ABL103c/100	ABL104c/100
125 A	ABL102c/125	ABL103c/125	ABL104c/125

Accessories

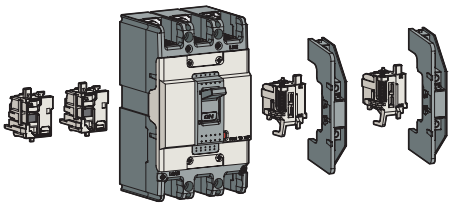

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch
SHT	Shunt trip
UVT	Undervoltage trip



Maximum possibilities

T-position	One of above auxiliaries
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

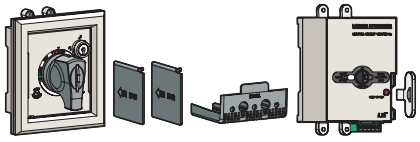

External accessories

ABS125c ABH125c	Name
IB13	Insulation barrier
TCL23	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS23	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-40c	Rotary handle (Direct) - applicable for either 2, 3pole
DH125	Rotary handle (Direct)
DHK125	Rotary handle (Direct, key lock)
EH125	Rotary handle (Extended)
RTB2	Rear terminal (Bar)
RTR2	Rear terminal (Round)
PB-C3	Plug-in kit
Handle lock	
MOP-M2	Remote operation

Note) For more detail see 7-9 ~ 7-26 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.

250AF MCCB

ABN250c, ABS250c, ABH250c, ABL250c



ABS202c




ABS203c



ABS204c

Ratings

Frame size			250AF			
Type and pole			**N-type**	**S-type**	**H-type**	**L-type**
	2-pole		**ABN202c**	**ABS202c**	**ABH202c**	**ABL202c**
	3-pole		**ABN203c**	**ABS203c**	**ABH203c**	**ABL203c**
	4-pole		**ABN204c**	**ABS204c**	**ABH204c**	**ABL204c**
Rated current, In			100-125-150-175-200-225-250A			
Rated operational voltage, Ue			AC: 690V			
			DC: 500V			
Rated insulation voltage, Ui			AC: 1000V			
Rated impulse withstand voltage, Uimp			8kV			
Rated short-circuit breaking			**N-type**	**S-type**	**H-type**	**L-type**
capacity, Icu	AC	690V	8kA	8kA	10kA	10 (10)kA
IEC 60947-2 (Icu)		480/500V	18kA	26kA	35kA	35 (35)kA
		460V	**26kA**	**37kA**	**50kA**	**60 (50)kA**
		415V	26kA	37kA	50kA	60 (50)
		380V	30kA	42kA	50kA	60 (50)
		220/250V	**65kA**	**85kA**	**100kA**	**125 (100)kA**
	DC	500V (3P)	10kA	20kA	30kA	30 (30)kA
		250V (2P)	10kA	20kA	30kA	30 (30)kA
Ics=%×Icu			100%	100%	100%	( )
Protective function			Overload, short-circuit			
Type of trip unit			Thermal-magnetic			
Magnetic trip range			12×In			
Life cycle Note4)	Mechanical		25,000 operations			
	Electrical		10,000 operations			
Connection	Standard		Front connection			
	Optional		Rear connection			
			Plug-in			
Mounting	Standard		Screw fixing			

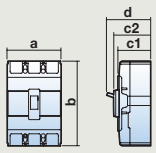Dimensions (mm)	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p	2p	3p	4p
	a	105	105	140	105	105	140	105	105	140	105	105	140
	b	165			165			165			165		
	c1 Note1)	60			60			60			60		
	c2 Note1)	64			64			64			64		
	d	87			87			87			87		
Weight, kg	Standard	1.1	1.2	1.6	1.1	1.2	1.6	1.1	1.2	1.6	1.1	1.2	1.6

Certification	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p	2p	3p	4p
CE marking	CE		○			○			○			○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
3. The Ics(Service breaking capacity) of ABL250AF are in ( )
4. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-1 page
- Trip curves ▶ 8-3 page
- Drawings ▶ 9-4 page
- Connection and mounting ▶ 10-2 page

Ordering types

Breaker types


ABN type (26kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
100 A	ABN202c/100	ABN203c/100	ABN204c/100
125 A	ABN202c/125	ABN203c/125	ABN204c/125
150 A	ABN202c/150	ABN203c/150	ABN204c/150
175 A	ABN202c/175	ABN203c/175	ABN204c/175
200 A	ABN202c/200	ABN203c/200	ABN204c/200
225 A	ABN202c/225	ABN203c/225	ABN204c/225
250 A	ABN202c/250	ABN203c/250	ABN204c/250

ABS type (37kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
100 A	ABS202c/100	ABS203c/100	ABS204c/100
125 A	ABS202c/125	ABS203c/125	ABS204c/125
150 A	ABS202c/150	ABS203c/150	ABS204c/150
175 A	ABS202c/175	ABS203c/175	ABS204c/175
200 A	ABS202c/200	ABS203c/200	ABS204c/200
225 A	ABS202c/225	ABS203c/225	ABS204c/225
250 A	ABS202c/250	ABS203c/250	ABS204c/250

ABH type (50kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
100 A	ABH202c/100	ABH203c/100	ABH204c/100
125 A	ABH202c/125	ABH203c/125	ABH204c/125
150 A	ABH202c/150	ABH203c/150	ABH204c/150
175 A	ABH202c/175	ABH203c/175	ABH204c/175
200 A	ABH202c/200	ABH203c/200	ABH204c/200
225 A	ABH202c/225	ABH203c/225	ABH204c/225
250 A	ABH202c/250	ABH203c/250	ABH204c/250


ABL type (60kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
100 A	ABL202c/100	ABL203c/100	ABL204c/100
125 A	ABL202c/125	ABL203c/125	ABL204c/125
150 A	ABL202c/150	ABL203c/150	ABL204c/150
175 A	ABL202c/175	ABL203c/175	ABL204c/175
200 A	ABL202c/200	ABL203c/200	ABL204c/200
225 A	ABL202c/225	ABL203c/225	ABL204c/225
250 A	ABL202c/250	ABL203c/250	ABL204c/250

Accessories

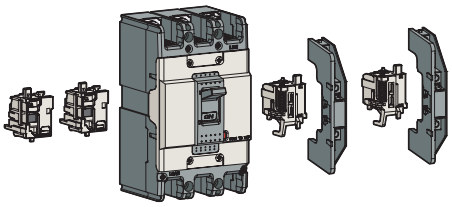

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch
SHT	Shunt trip
UVT	Undervoltage trip



Maximum possibilities

T-position	One of above auxiliaries
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

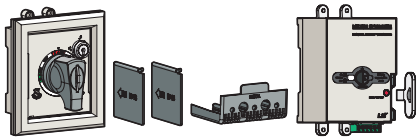

External accessories

ABH250c	Name
B33	Insulation barrier
TCL33	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS33	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-50c	Rotary handle (Direct)
DH250	Rotary handle (Direct)
DHK250	Rotary handle (Direct, key lock)
EH250	Rotary handle (Extended)
RTB3	Rear terminal (Bar)
RTR3	Rear terminal (Round)
PBA250C	Plug-in kit
Handle lock	
MOP-M3	Remote operation

Note) For more detail see 7-9 ~ 7-26 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.


400AF MCCB
ABN400c, ABS400c, ABH400c, ABL400c


ABS403c


ABL404c

Ratings

Frame size			400AF			
Type and pole			**N-type**	**S-type**	**H-type**	**L-type**
	2-pole		**ABN402c**	**ABS402c**	**ABH402c**	**ABL402c**
	3-pole		**ABN403c**	**ABS403c**	**ABH403c**	**ABL403c**
	4-pole		**ABN404c**	**ABS404c**	**ABH404c**	**ABL404c**
Rated current, In			250-300-350-400A			
Rated operational voltage, Ue			AC: 690V			
			DC: 500V			
Rated insulation voltage, Ui			AC: 1000V			
Rated impulse withstand voltage, Uimp			8kV			
Rated short-circuit breaking			**N-type**	**S-type**	**H-type**	**L-type**
capacity, Icu	AC	690V	5kA	8kA	10kA	14kA
IEC 60947-2 (Icu)		480/500V	18kA	35kA	50kA	65kA
		415/460V	**37kA**	**50kA**	**65kA**	**85kA**
		380V	42kA	65kA	70kA	100kA
		220/250V	**50kA**	**75kA**	**85kA**	**125kA**
	DC	500V (3P)	10kA	20kA	40kA	40kA
		250V (2P)	10kA	20kA	40kA	40kA
Ics=%×Icu			100%	100%	100%	75
Protective function			Overload, short-circuit			
Type of trip unit			Thermal-magnetic			
Magnetic trip range			8~12In			
Life cycle Note3)	Mechanical		4,000 operations			
	Electrical		1,000 operations			
Connection	Standard		Front connection			
	Optional		Plug-in			
Mounting	Standard		Screw fixing			

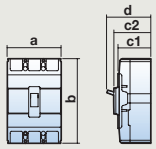Dimensions (mm)	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p	2p	3p	4p
	a	140	140	184	140	140	184	140	140	184	140	140	184
	b	257			257			257			257		
	c1 Note)	109			109			109			109		
	c2 Note)	113			113			113			113		
	d	145			145			145			145		
Weight, kg	Standard	5.2	6.2	7.8	5.2	6.2	7.8	5.2	6.2	7.8	5.2	6.2	7.8

Certification	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p	2p	3p	4p
CE marking	CE		○			○			○			○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
3. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-2 page
- Trip curves ▶ 8-4 page
- Drawings ▶ 9-5 page
- Connection and mounting ▶ 10-3 page

Ordering types

Breaker types

ABN type (37kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
250 A	ABN402c/250	ABN403c/250	ABN404c/250
300 A	ABN402c/300	ABN403c/300	ABN404c/300
350 A	ABN402c/350	ABN403c/350	ABN404c/350
400 A	ABN402c/400	ABN403c/400	ABN404c/400

ABS type (50kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
250 A	ABS402c/250	ABS403c/250	ABS404c/250
300 A	ABS402c/300	ABS403c/300	ABS404c/300
350 A	ABS402c/350	ABS403c/350	ABS404c/350
400 A	ABS402c/400	ABS403c/400	ABS404c/400

ABH type (65kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
250 A	ABH402c/250	ABH403c/250	ABH404c/250
300 A	ABH402c/300	ABH403c/300	ABH404c/300
350 A	ABH402c/350	ABH403c/350	ABH404c/350
400 A	ABH402c/400	ABH403c/400	ABH404c/400

ABL type (85kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
250 A	ABL402c/250	ABL403c/250	ABL404c/250
300 A	ABL402c/300	ABL403c/300	ABL404c/300
350 A	ABL402c/350	ABL403c/350	ABL404c/350
400 A	ABL402c/400	ABL403c/400	ABL404c/400

Accessories








Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
SHT	Shunt trip
UVT	Undervoltage trip




Maximum possibilities

T-position	Option of 2AX, 2AL and SHT or UVT
R-position	Option of 2AX, 2AL and SHT or UVT


Note) For more detail see 7-2 page

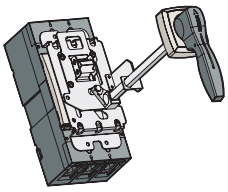

E-70U

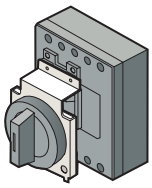

N-70

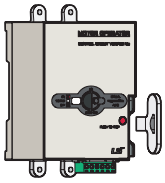

MOP-M4

External accessories

B-43B	Insulation barrier
T1-43A	Terminal cover (Long) - 2, 3pole - Single type, N-handle type
T1-44A	Terminal cover (Long) - 4pole
N-70	Rotary handle (Direct)
E-70U	Rotary handle (Extended)
MI-43	Mechanical interlock - 2, 3pole
MI-44	Mechanical interlock - 4pole
PB-I3-FR	Plug-in kit
MOP-M4	Remote operation

Note) For more detail see 7-9 ~ 7-26 page


800AF MCCB
ABN800c, ABS800c, ABL800c


ABS803c


ABL804c

Ratings

Frame size			800AF		
Type and pole			**N-type**	**S-type**	**L-type**
	2-pole		**ABN802c**	**ABS802c**	**ABL802c**
	3-pole		**ABN803c**	**ABS803c**	**ABL803c**
	4-pole		**ABN804c**	**ABS804c**	**ABL804c**
Rated current, In			500-630-700-800A		
Rated operational voltage, Ue			AC: 690V		
			DC: 500V		
Rated insulation voltage, Ui			AC: 1000V		
Rated impulse withstand voltage, Uimp			8kV		
Rated short-circuit breaking			**N-type**	**S-type**	**L-type**
capacity, Icu	AC	690V	8kA	10kA	14kA
IEC 60947-2 (Icu)		480/500V	25kA	45kA	65kA
		415/460V	**37kA**	**65kA**	**85kA**
		380V	45kA	75kA	100kA
		220/250V	**50kA**	**85kA**	**125kA**
	DC	500V (3P)	10kA	20kA	40kA
		250V (2P)	10kA	20kA	40kA
Ics=%×Icu			100%	100%	75%
Protective function			Overload, short-circuit		
Type of trip unit			Thermal-magnetic		
Magnetic trip range			8~12In		
Life cycle Note3)	Mechanical		2,500 operations		
	Electrical		500 operations		
Connection	Standard		Front connection		
	Optional		Plug-in		
Mounting	Standard		Screw fixing		

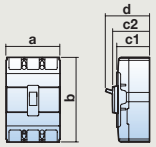Dimensions (mm)	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p
	a	210	210	280	210	210	280	210	210	280
	b	280			280			280		
	c1 Note1)	109			109			109		
	c2 Note1)	113			113			113		
	d	145			145			145		
Weight, kg	Standard	7.7	8.8	11.4	7.7	8.8	11.4	7.7	8.8	11.4

Certification	Pole	2p	3p	4p	2p	3p	4p	2p	3p	4p
CE marking	CE		○			○			○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
3. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-2 page
- Trip curves ▶ 8-4 page
- Drawings ▶ 9-6 page
- Connection and mounting ▶ 10-3 page

Ordering types

Breaker types

ABN type (37kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
500 A	ABN802c/500	ABN803c/500	ABN804c/500
630 A	ABN802c/630	ABN803c/630	ABN804c/630
700 A	ABN802c/700	ABN803c/700	ABN804c/700
800 A	ABN802c/800	ABN803c/800	ABN804c/800

ABS type (65kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
500 A	ABS802c/500	ABS803c/500	ABS804c/500
630 A	ABS802c/630	ABS803c/630	ABS804c/630
700 A	ABS802c/700	ABS803c/700	ABS804c/700
800 A	ABS802c/800	ABS803c/800	ABS804c/800

ABL type (85kA/460V)			
Rated current, In	2-pole	3-pole	4-pole
500 A	ABL802c/500	ABL803c/500	ABL804c/500
630 A	ABL802c/630	ABL803c/630	ABL804c/630
700 A	ABL802c/700	ABL803c/700	ABL804c/700
800 A	ABL802c/800	ABL803c/800	ABL804c/800

Accessories








Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
SHT	Shunt trip
UVT	Undervoltage trip




Maximum possibilities

T-position	Option of 2AX, 2AL and SHT or UVT
R-position	Option of 2AX, 2AL and SHT or UVT


Note) For more detail see 7-2 page

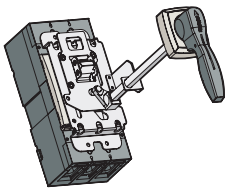

E-80U

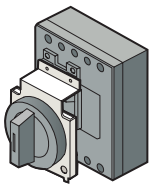

N-80

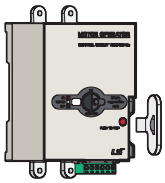

MOP-M5

External accessories

B-33C	Insulation barrier
T1-63A	Terminal cover (Long) - 2, 3pole - Single type, N-handle type
T1-64A	Terminal cover (Long) - 4pole
N-80	Rotary handle (Direct)
E-80U	Rotary handle (Extended)
MI-83S	Mechanical interlock - 2, 3pole
MI-84S	Mechanical interlock - 4pole
PB-J3-FR	Plug-in kit
MOP-M5	Remote operation

Note) For more detail see 7-9 ~ 7-26 page



① Adjustable instantaneous **for each phase**

Ratings

Frame size			1000AF		1200AF	
Type and pole			**S-type**	**L-type**	**S-type**	**L-type**
	2-pole		-	-	-	-
	3-pole		**ABS1003b**	**ABL1003b**	**ABS1203b**	**ABL1203b**
	4-pole		**ABS1004b**	**ABL1004b**	**ABS1204b**	**ABL1204b**
Rated current, In			1000A		1200A	
Rated operational voltage, Ue			AC: 600V			
Rated insulation voltage, Ui			690V			
Rated impulse withstand voltage, Uimp			6kV			
Rated short-circuit breaking			**S-type**	**L-type**	**S-type**	**L-type**
capacity, Icu	AC	690V	45kA	65kA	45kA	65kA
IEC 60947-2 (Icu)		480/500V	50kA	75kA	50kA	75kA
		460V/415V	**65kA**	**85kA**	**65kA**	**85kA**
		380V	65kA	85kA	65kA	85kA
		220/250V	**100kA**	**125kA**	**100kA**	**125kA**
Ics=%×Icu			50%	50%	50%	50%
Protective function			Overload, short-circuit			
Type of trip unit			Thermal-magnetic			
Magnetic trip range			3~6×In ...①			
Life cycle Note3)	Mechanical		2,500 operations			
	Electrical		500 operations			
Connection	Standard		Front connection			
Mounting	Standard		Screw fixing			
Dimensions (mm)		Pole	3p	4p	3p	4p
		a	220	290	220	290
		b	400	400	400	400
		c	105	105	105	105
		d	159	159	159	159
Weight, kg		Standard	19.6	25.7	19.6	25.7
Certification		Pole	3p	4p	3p	4p
CE marking		CE	ABS1003b	ABS1004b	ABS1203b	ABS1204b
			○	×	○	×
			ABL1003b	ABL1004b	ABL1203b	ABL1204b
			×	×	×	×

Note) 1. Please specify the frequency when ordering.
2. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
3. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Trip curves ▶ 8-5 page
- Drawings ▶ 9-7 page

Ordering types


Breaker types

ABS type (65kA/460V)		
Rated current, In	3-pole	4-pole
1000 A	ABS1003b/1000	ABS1004b/1000
1200 A	ABS1203b/1200	ABS1204b/1200

ABL type (85kA/460V)		
Rated current, In	3-pole	4-pole
1000 A	ABL1003b/1000	ABL1004b/1000
1200 A	ABL1203b/1200	ABL1204b/1200


Option of below items for T-position

AX1	Auxiliary switch (1c)
AX2	Auxiliary switch (2c)
AL1	Alarm switch (1c)
AL2	Alarm switch (2c)
AX1+AL	Auxiliary (1c) + Alarm (1c) switch
AX2+AL	Auxiliary (2c) + Alarm (1c) switch



Option of below items for R-position

SHT	Shunt trip
UVT	Undervoltage trip

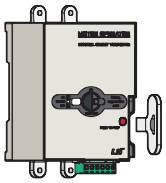





MOP-M6

External accessories

MOP-M6	Remote operation

Note) For more detail see7-25 page

Contact operation for auxiliary and alarm switches

MCCB	On	Off	Trip
AX			
AL			

Contact rating for auxiliary and alarm switches

AC			DC		
Voltage (V)	Current (A)		Voltage (V)	Current (A)	
	Resistive load	Inductive load		Resistive load	Inductive load
125	20	20	30	6	5
250	20	20	125	0.4	0.05
500	10	5	250	0.2	0.03

Rating for shunt trip (SHT)


Control voltage		Time rating	Operational voltage
AC	100~110V 125V 200~220V 380~440V 480~550V	Continuous	85~110% of control voltage
DC	24V 48V 100~110V 125V 200~220V		75~125% of control voltage


Rating for undervoltage release (UVT)

Control voltage		Time rating	Operational voltage	Trip voltage
AC	100~110V 125V 200~220V 380~440V	Continuous	85~110% of control voltage	20~70% of control voltage

1200AF Electronic MCCB
ABS1203bE



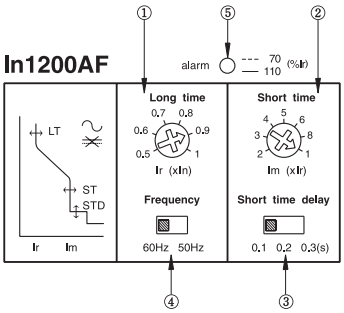

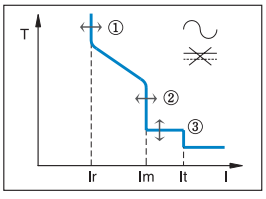

For more information

- Trip curves ▶ 8-5 page
- Drawings ▶ 9-8 page

Ratings

Frame size			1200AF
Type and pole			**S-type**
	2-pole		-
	3-pole		**ABS1203bE**
	4-pole		-
Rated current, In			1200A
Rated operational voltage, Ue			AC: 600V
Rated insulation voltage, Ui			AC: 690V
Rated impulse withstand voltage, Uimp			6kV
Type	Long time	Current, IR	(0.5-0.6-0.7-0.8-0.9-1.0) × In, adjustable...①
	Pick-up	Time	5sec ± 20% at 6 × Ir, fixed
	Short time	Current, Im	(2-3-4-5-6-8-10) × In, adjustable...②
	Pick-up	Time	0.1-0.2-0.3 sec, adjustable...③
	Instantaneous	Current, It	11×In, fixed
	Pick-up	Time	within 0.03 sec, fixed
	⑤ LED	Pre-alarm	Between 70 to 110% of set current Ir: LED flickering
			Over 110% of set current Ir: stays on
	④ Rated frequency		50-60Hz selectable by the switch of the trip unit
Rated short-circuit breaking capacity, Icu			**S-type**
		AC 690V	45kA
		480/500V	50kA
		415/460V	**65kA**
		380V	65kA
		220/250V	**100kA**
Ics=%×Icu			50%
Protective function			Overload, short-circuit
Type of trip unit			Electronic type
Life cycle Note1)	Mechanical		2,500 operations
	Electrical		500 operations
Connection	Standard		Front connection
Mounting	Standard		Screw fixing
Dimensions (mm)		Pole	3p
		a	220
		b	400
		c	105
		d	159
Weight, kg		Standard	21





Note) 1. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

Ordering types

Breaker types


ABS type (65kA/460V)	
Rated current, In	3-pole
1200 A	ABS1203bE

Contact operation for auxiliary and alarm switches

MCCB	On	Off	Trip
AX			
AL			

Option of below items for T-position

AX1	Auxiliary switch (1c)
AX2	Auxiliary switch (2c)
AL1	Alarm switch (1c)
AL2	Alarm switch (2c)
AX1+AL	Auxiliary (1c) + Alarm (1c) switch
AX2+AL	Auxiliary (2c) + Alarm (1c) switch



Option of below items for R-position

SHT	Shunt trip
UVT	Undervoltage trip

Contact rating for auxiliary and alarm switches

AC			DC		
Voltage (V)	Current (A)		Voltage (V)	Current (A)	
	Resistive load	Inductive load		Resistive load	Inductive load
125	20	20	30	6	5
250	20	20	125	0.4	0.05
500	10	5	250	0.2	0.03

Rating for shunt trip (SHT)

Control voltage		Time rating	Operational voltage
AC	100~110V 125V 200~220V 380~440V 480~550V	Continuous	85~110% of control voltage
DC	24V 48V 100~110V 125V 200~220V		75~125% of control voltage

Rating for undervoltage release (UVT)

Control voltage		Time rating	Operational voltage	trip voltage
AC	100~110V 125V 200~220V 380~440V	Continuous	85~110% of control voltage	20~70% of control voltage


30AF ELCB
EBS30c



EBS33c

Ratings

Frame size			30AF
Type and pole			**S-type**
		2-pole (2-sensor)	**EBS32c**
		3-pole (3-sensor)	**EBS33c**
		4-pole (3-sensor)	**EBS34c**
Rated current, In			(5-10) Note3) -15-20-30A
Rated impulse withstand voltage, Uimp			6kV
Instantaneous type	Rated residual current, I△n		30, 100, 100/200/500, 100/300/500mA (Adjustable)
	Residual current off-time at I△n		≤0.1 sec
	Rated operational voltage, Ue		AC: 220/460V
Time delay type	Rated residual current		0.1/0.2/0.5/1A, 0.1/0.4/1/2A (Adjustable)
	Intentional time delay		0/0.2/0.5/1s, 0.5/1/1.5/2s (Adjustable)
Wiring system		2-pole (2-sensor)	1Ø2W
		3-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W
		4-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W, 3Ø4W
Rated short-circuit breaking capacity, Icu			**S-type**
	AC	**460V**	**14 (10)kA**
		415V	14 (10)kA
		220/250V	**30 (25)kA**
Ics=%×Icu			100%
Protective function			Overload, short-circuit and ground fault
Type of trip unit			Thermal-magnetic
Magnetic trip range			400A
Life cycle Note6)		Mechanical	25,000 operations
		Electrical	10,000 operations
Connection		Standard	Front connection
		Optional	Rear connection
Mounting		Standard	Screw fixing

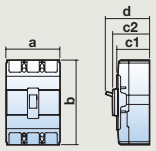Dimensions (mm)	Pole	2p	3p	4p
	a	75		100
	b	130		130
	c1 Note1)	60		60
	c2 Note1)	64		64
	d	82		82
Weight, kg	Standard	0.5	0.7	0.9

Certification	Pole	3p	4p
CE marking	CE	○	○

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. The short-circuit breaking capacities in ( ) are applied to the rated current in (5, 10A)
4. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
5. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
6. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

• Accessories	▶ 7-1 page
• Trip curves	▶ 8-1 page
• Drawings	▶ 9-9 page
• Connection and mounting	▶ 10-2 page

Ordering types

Breaker types

Instantaneous type

EBS33c / 5 / 30

Code	Frame size/ Pole
EBS32c	EBS 30AF 2P
EBS33c	EBS 30AF 3P
EBS34c	EBS 30AF 4P

Code	Rated current
5	5A
10	10A
15	15A
20	20A
25	25A
30	30A

Code	Rated residual current
30	30mA
100	100mA
100/200/500	100/200/500mA
100/300/500	100/300/500mA

Note) EBS32c/5/30: EBS32c, Rated current 5A, Rated residual current 30mA

Time delay type


EBS33c / 5 / 1A1s

Code	Frame size/ Pole
EBS32c	EBS 30AF 2P
EBS33c	EBS 30AF 3P
EBS34c	EBS 30AF 4P


Code	Rated current
5	5A
10	10A
15	15A
20	20A
25	25A
30	30A

Code	Rated residual current	Intentional time delay
1A1s	1A	1s
2A2s	2A	2s

Note) EBS32c/5/30: EBS32c, Rated current 5A, Time delay type 1A1s

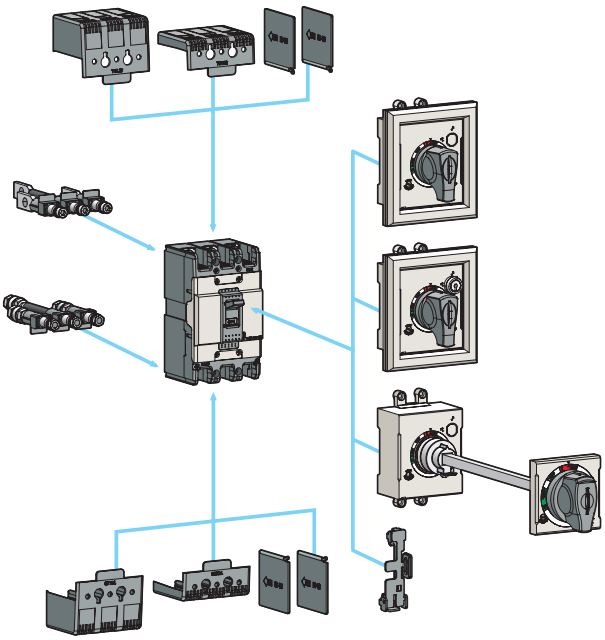


Accessories

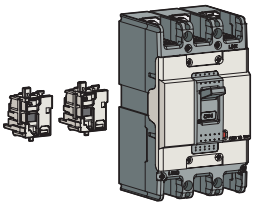

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch



Maximum possibilities

T-position	Not available
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

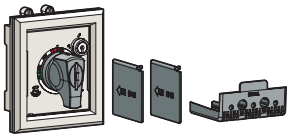

External accessories

EBS30c	Name
IB13	Insulation barrier
TCL13	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS13	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-30c	Rotary handle (Direct)
DH100	Rotary handle (Direct)
DHK100	Rotary handle (Direct, key lock)
EH100	Rotary handle (Extended)
RTR1	Rear terminal (Bar)
Handle lock	

Note) For more detail see 7-9 ~ 7-23 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.


50AF ELCB
EBN50c, EBS50c, EBH50c


EBN53c


EBS53c

Ratings

Frame size			50AF		
Type and pole			**N-type**	**S-type**	**H-type**
		2-pole (2-sensor)	**EBN52c**	-	-
		3-pole (3-sensor)	**EBN53c**	**EBS53c**	**EBH53c**
		4-pole (3-sensor)	-	**EBS54c**	**EBH54c**
Rated current, In			15-20-30-40-50A		
Rated impulse withstand voltage, Uimp			6kV		
Instantaneous type	Rated residual current, I△n		30, 100, 100/200/500, 100/300/500mA (Adjustable)		
	Residual current off-time at I△n		≤0.1 sec		
	Rated operational voltage, Ue		AC: 220/460V		
Time delay type	Rated residual current		0.1/0.2/0.5/1A, 0.1/0.4/1/2A (Adjustable)		
	Intentional time delay		0/0.2/0.5/1s, 0.5/1/1.5/2s (Adjustable)		
Wiring system		2-pole (2-sensor)	1Ø2W		
		3-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W		
		4-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W, 3Ø4W		
Rated short-circuit breaking capacity, Icu			**N-type**	**S-type**	**H-type**
	AC	**460V**	**14kA**	**18kA**	**50kA**
		415V	14kA	18kA	50kA
		220/250V	**30kA**	**35kA**	**100kA**
Ics=%×Icu			100%	100%	100%
Protective function			Overload, short-circuit and ground fault		
Type of trip unit			Thermal-magnetic		
Magnetic trip range			12×In (30A and under: 400A)		
Life cycle Note5)	Mechanical		25,000 operations		
	Electrical		10,000 operations		
Connection	Standard		Front connection		
	Optional		Rear connection		
Mounting	Standard		Screw fixing		

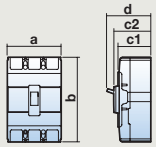Dimensions (mm)	Pole	2p	3p	3p	4p	3p	4p
	a	75	75	75	100	90	120
	b	130		130		155	
	c1 Note1)	60		60		60	
	c2 Note1)	64		64		64	
	d	82		82		82	
Weight, kg	Standard	0.5	0.7	0.7	0.9	1	1.2

Certification	Pole	2p	3p	3p	4p	3p	4p
CE marking	CE	○		○		○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
4. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
5. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

• Accessories	▶ 7-1 page
• Trip curves	▶ 8-1 ~ 8-2 page
• Drawings	▶ 9-9 ~ 9-10 page
• Connection and mounting	▶ 10-2 page

Ordering types

Breaker types

Instantaneous type

EBN53c / 20 / 30

Code	Frame size/ Pole
EBN52c	EBN 50AF 2P
EBN53c	EBN 50AF 3P
EBS53c	EBS 50AF 3P
EBS54c	EBS 50AF 4P
EBH53c	EBH 50AF 3P
EBH54c	EBH 50AF 4P

Code	Rated current
15	15A
20	20A
30	30A
40	40A
50	50A

Code	Rated residual current
30	30mA
100	100mA
100/200/500	100/200/500mA
100/300/500	100/300/500mA

Note) EBS53c/20/30: EBS53c, Rated current 20A, Rated residual current 30mA

Time delay type


EBN53c / 20 / 1A1s

Code	Frame size/ Pole
EBN52c	EBN 50AF 2P
EBN53c	EBN 50AF 3P
EBS53c	EBS 50AF 3P
EBS54c	EBS 50AF 4P
EBH53c	EBH 50AF 3P
EBH54c	EBH 50AF 4P


Code	Rated current
15	15A
20	20A
30	30A
40	40A
50	50A

Code	Rated residual current	Intentional time delay
1A1s	1A	1s
2A2s	2A	2s


Note) EBS53c/20/30: EBS53c, Rated current 20A, Time delay type 1A1s

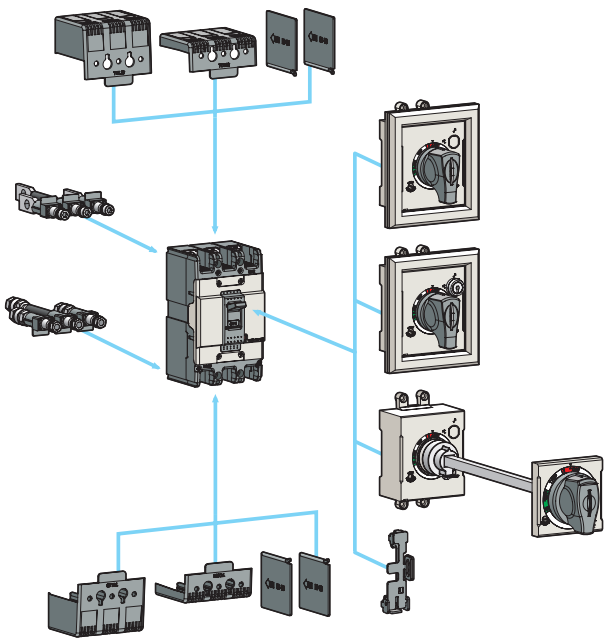

Accessories

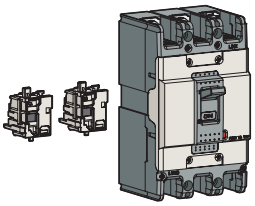

Electrical auxiliaries




AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch

Maximum possibilities

T-position	Not available
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

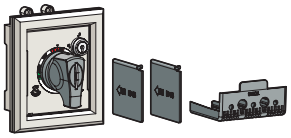

External accessories

EBN50c EBS50c	EBH50c	Name
IB13	**IB23**	Insulation barrier
TCL13	**TCL23**	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS13	**TCS23**	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-30c	**N-40c**	Rotary handle (Direct)
DH100	**DH125**	Rotary handle (Direct)
DHK100	**DHK125**	Rotary handle (Direct, key lock)
EH100	**EH125**	Rotary handle (Extended)
-	**RTB2**	Rear terminal (Bar)
RTR1	**RTR2**	Rear terminal (Round)
Handle lock		

Note) For more detail see 7-9 ~ 7-23 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.




EBN63c



EBS63c

Ratings

Frame size			60AF	
Type and pole			**N-type**	**S-type**
		2-pole (2-sensor)	-	-
		3-pole (3-sensor)	**EBN63c**	**EBS63c**
		4-pole (3-sensor)	-	**EBS64c**
Rated current, In			60A	
Rated impulse withstand voltage, Uimp			6kV	
Instantaneous type	Rated residual current, I⊿n		30, 100, 100/200/500, 100/300/500mA (Adjustable)	
	Residual current off-time at I⊿n		≤0.1 sec	
	Rated operational voltage, Ue		AC: 220/460V	
Time delay type	Rated residual current		0.1/0.2/0.5/1A, 0.1/0.4/1/2A (Adjustable)	
	Intentional time delay		0/0.2/0.5/1s, 0.5/1/1.5/2s (Adjustable)	
Wiring system		2-pole (2-sensor)	-	
		3-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W	
		4-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W, 3Ø4W	
Rated short-circuit breaking capacity, Icu	AC	**460V**	**14kA**	**18kA**
		415V	14kA	18kA
		220/250V	**30kA**	**35kA**
Ics=%×Icu			100%	100%
Protective function			Overload, short-circuit and ground fault	
Type of trip unit			Thermal-magnetic	
Magnetic trip range			12×In	
Life cycle Note5)	Mechanical		25,000 operations	
	Electrical		10,000 operations	
Connection	Standard		Front connection	
	Optional		Rear connection	
Mounting	Standard		Screw fixing	

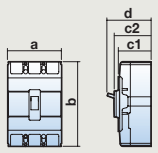Dimensions (mm)	Pole	3p	3p	4p
	a	75	75	100
	b	130	130	130
	c1 Note1)	60	60	60
	c2 Note1)	64	64	64
	d	82	82	82
Weight, kg	Standard	0.7	0.7	0.9

Certification	Pole	3p	3p	4p
CE marking	CE	○	○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
4. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
5. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-1 page
- Trip curves ▶ 8-1 page
- Drawings ▶ 9-9 page
- Connection and mounting ▶ 10-2 page

Ordering types

Breaker types

Instantaneous type

EBN63c / 60 / 30

Code	Frame size/ Pole
EBN63c	EBN 60AF 3P
EBS63c	EBS 60AF 3P
EBS64c	EBS 60AF 4P

Code	Rated current
60	60A

Code	Rated residual current
30	30mA
100	100mA
100/200/500	100/200/500mA
100/300/500	100/300/500mA

Note) EBS63c/60/30: EBS63c, Rated current 60A, Rated residual current 30mA

Time delay type


EBN63c / 60 / 1A1s

Code	Frame size/ Pole
EBN63c	EBN 60AF 3P
EBS63c	EBS 60AF 3P
EBS64c	EBS 60AF 4P


Code	Rated current
60	60A

Code	Rated residual current	Intentional time delay
1A1s	1A	1s
2A2s	2A	2s

Note) EBS63c/60/30: EBS63c, Rated current 60A, Time delay type 1A1s

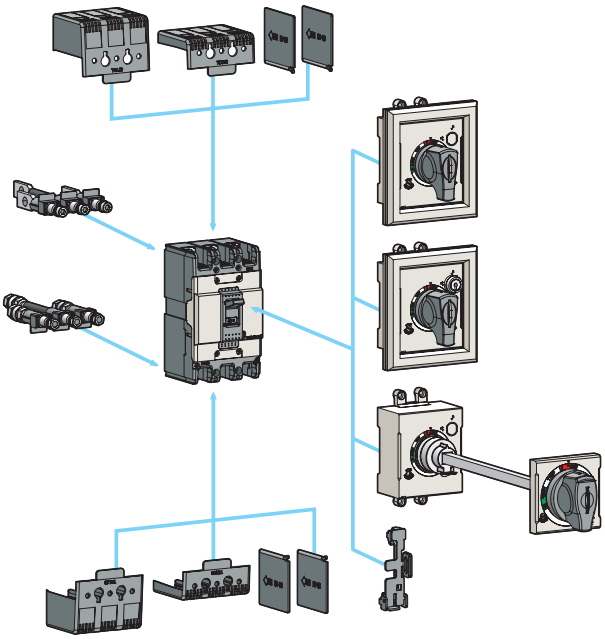


Accessories

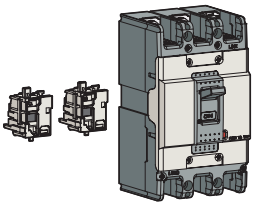

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch



Maximum possibilities

T-position	Not available
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

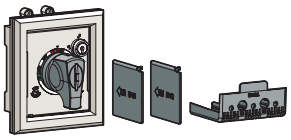

External accessories


EBS60c EBN60c	Name
IB13	Insulation barrier
TCL13	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS13	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-30c	Rotary handle (Direct)
DH100	Rotary handle (Direct)
DHK100	Rotary handle (Direct, key lock)
EH100	Rotary handle (Extended)
RTB1	Rear terminal (Bar)
RTR1	Rear terminal (Round)
Handle lock	

Note) For more detail see 7-9 ~ 7-23 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.

100AF ELCB
EBN100c


EBN103c

Ratings

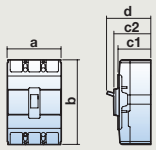Frame size			100AF		
Type and pole			**N-type**		
		2-pole (2-sensor)	**EBN102c**		
		3-pole (3-sensor)	**EBN103c**		
		4-pole (3-sensor)	**EBN104c**		
Rated current, In			60-75-100A		
Rated impulse withstand voltage, Uimp			6kV		
Instantaneous type	Rated residual current, I△n		30, 100, 100/200/500, 100/300/500mA (Adjustable)		
	Residual current off-time at I△n		≤0.1 sec		
	Rated operational voltage, Ue		AC: 220/460V		
Time delay type	Rated residual current		0.1/0.2/0.5/1A, 0.1/0.4/1/2A (Adjustable)		
	Intentional time delay		0/0.2/0.5/1s, 0.5/1/1.5/2s (Adjustable)		
Wiring system		2-pole (2-sensor)	1Ø2W		
		3-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W		
		4-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W, 3Ø4W		
Rated short-circuit breaking capacity, Icu			**N-type**		
	AC	**460V**	**18kA**		
		415V	18kA		
		220/250V	**35kA**		
Ics=%×Icu			100%		
Protective function			Overload, short-circuit and ground fault		
Type of trip unit			Thermal-magnetic		
Magnetic trip range			12×In		
Life cycle Note5)	Mechanical		25,000 operations		
	Electrical		10,000 operations		
Connection	Standard		Front connection		
	Optional		Rear connection		
Mounting	Standard		Screw fixing		
Dimensions (mm)		Pole	2p	3p	4p
		a	75	75	100
		b	130	130	130
		c1 Note1)	60	60	60
		c2 Note1)	64	64	64
		d	82	82	82
Weight, kg		Standard	0.5	0.7	0.9
Certification		Pole	2p	3p	4p
	CE marking	CE	○	○	○

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
4. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
5. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-1 page
- Trip curves ▶ 8-1 page
- Drawings ▶ 9-9 page
- Connection and mounting ▶ 10-2 page

Ordering types

Breaker types

Instantaneous type

EBN103c / 100 / 30

Code	Frame size/ Pole
EBN102c	EBN 100AF 2P
EBN103c	EBN 100AF 3P
EBN104c	EBN 100AF 4P

Code	Rated current
60	60A
75	75A
100	100A

Code	Rated residual current
30	30mA
100	100mA
100/200/500	100/200/500mA
100/300/500	100/300/500mA

Note) EBN103c/100/30: EBN103c, Rated current 100A, Rated residual current 30mA

Time delay type


EBN103c / 100 / 1A1s

Code	Frame size/ Pole
EBN102c	EBN 100AF 2P
EBN103c	EBN 100AF 3P
EBN104c	EBN 100AF 4P


Code	Rated current
60	60A
75	75A
100	100A

Code	Rated residual current	Intentional time delay
1A1s	1A	1s
2A2s	2A	2s

Note) EBN103c/100/30: EBN103c, Rated current 100A, Time delay type 1A1s

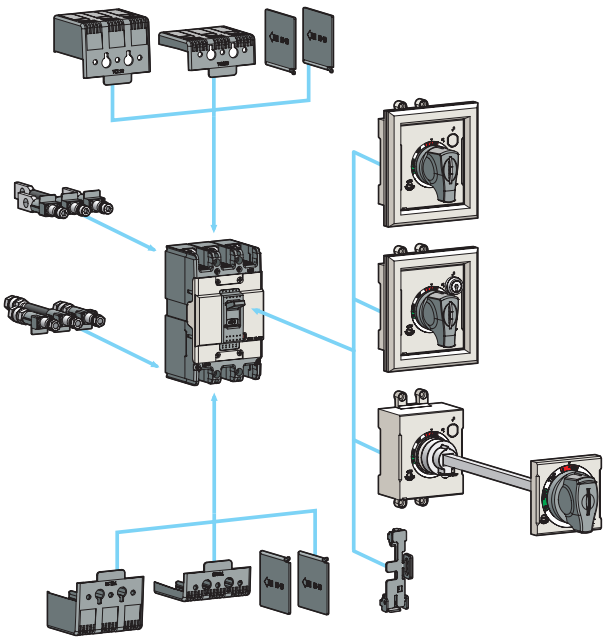


Accessories

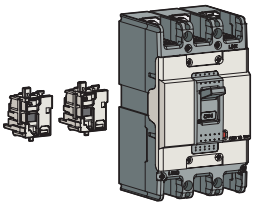

Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch



Maximum possibilities

T-position	Not available
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

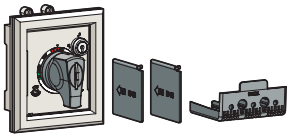

External accessories

EBN100c	Name
IB13	Insulation barrier
TCL13	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS13	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-30c	Rotary handle (Direct)
DH100	Rotary handle (Direct)
DHK100	Rotary handle (Direct, key lock)
EH100	Rotary handle (Extended)
RTB1	Rear terminal (Bar)
RTR1	Rear terminal (Round)
Handle lock	

Note) For more detail see 7-9~ 7-23 pageNote) For more detail see 82 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.

125AF ELCB
EBS125c, EBH125c




EBS103c



EBH103c

Ratings

Frame size			125AF	
Type and pole			**S-type**	**H-type**
		2-pole (2-sensor)	-	-
		3-pole (3-sensor)	**EBS103c**	**EBH103c**
		4-pole (3-sensor)	**EBS104c**	**EBH104c**
Rated current, In			15-20-30-40-50-60-75-100-125A	
Rated impulse withstand voltage, Uimp			6kV	
Instantaneous type	Rated residual current, I△n		30, 100, 100/200/500, 100/300/500mA (Adjustable)	
	Residual current off-time at I△n		≤0.1 sec	
	Rated operational voltage, Ue		AC: 220/460V	
Time delay type	Rated residual current		0.1/0.2/0.5/1A, 0.1/0.4/1/2A (Adjustable)	
	Intentional time delay		0/0.2/0.5/1s, 0.5/1/1.5/2s (Adjustable)	
Wiring system		2-pole (2-sensor)	-	
		3-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W	
		4-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W, 3Ø4W	
Rated short-circuit breaking capacity, Icu			**N-type**	**S-type**
	AC	**460V**	**37kA**	**50kA**
		415V	37kA	50kA
		220/250V	**85kA**	**100kA**
Ics=%×Icu			100%	100%
Protective function			Overload, short-circuit and ground fault	
Type of trip unit			Thermal-magnetic	
Magnetic trip range			12×In (30A and under: 400A)	
Life cycle Note5)	Mechanical		25,000 operations	
	Electrical		10,000 operations	
Connection	Standard		Front connection	
	Optional		Rear connection	
Mounting	Standard		Screw fixing	

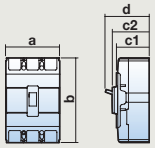Dimensions (mm)	Pole	3p	4p	3p	4p
	a	90	120	90	120
	b	155	155	155	155
	c1 Note1)	60	60	60	60
	c2 Note1)	64	64	64	64
	d	82	82	82	82
Weight, kg	Standard	1	1.2	1	1.2

Certification	Pole	3p	4p	3p	4p
CE marking	CE	○	○	○	○

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
4. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
5. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-1 page
- Trip curves ▶ 8-2 page
- Drawings ▶ 9-10 page
- Connection and mounting ▶ 10-2 page

Ordering types

Breaker types

Instantaneous type

EBS103c / 100 / 30

Code	Frame size/ Pole
EBS103c	EBS 125AF 3P
EBS104c	EBS 125AF 4P
EBH103c	EBH 125AF 3P
EBH104c	EBH 125AF 4P

Code	Rated current
15	15A
20	20A
30	30A
40	40A
50	50A
60	60A
75	75A
100	100A
125	125A

Code	Rated residual current
30	30mA
100	100mA
100/200/500	100/200/500mA
100/300/500	100/300/500mA

Note) EBS103c/100/30: EBS103c, Rated current 100A, Rated residual current 30mA

Time delay type

EBS103c / 100 / 1A1s


Code	Frame size/ Pole
EBS103c	EBS 125AF 3P
EBS104c	EBS 125AF 4P
EBH103c	EBH 125AF 3P
EBH104c	EBH 125AF 4P

Code	Rated current
15	15A
20	20A
30	30A
40	40A
50	50A
60	60A
75	75A
100	100A
125	125A


Code	Rated residual current	Intentional time delay
1A1s	1A	1s
2A2s	2A	2s

Note) EBS103c/100/30: EBS103c, Rated current 100A, Time delay type 1A1s

Accessories

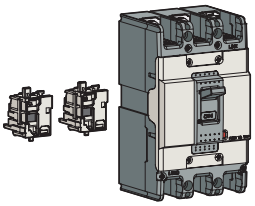

Electrical auxiliaries




AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch

Maximum possibilities

T-position	Not available
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

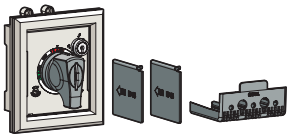

External accessories

EBS125c EBH125c	Name
IB23	Insulation barrier
TCL23	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS23	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-40c	Rotary handle (Direct)
DH125	Rotary handle (Direct)
DHK125	Rotary handle (Direct, key lock)
EH125	Rotary handle (Extended)
RTB2	Rear terminal (Bar)
RTR2	Rear terminal (Round)
Handle lock	

Note) For more detail see 7-9 ~ 7-23 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.

250AF ELCB
EBN250c, EBS250c, EBH250c




EBN203c



EBS203c

Ratings

Frame size			250AF		
Type and pole			**N-type**	**S-type**	**H-type**
		2-pole (2-sensor)	**EBN202c**	-	-
		3-pole (3-sensor)	**EBN203c**	**EBS203c**	**EBH203c**
		4-pole (3-sensor)	-	**EBS204c**	**EBH204c**
Rated current, In			100-125-150-175-200-225-250A		
Rated impulse withstand voltage, Uimp			6kV		
Instantaneous type	Rated residual current, I△n		30, 100, 100/200/500, 100/300/500mA (Adjustable)		
	Residual current off-time at I△n		≤0.1 sec		
	Rated operational voltage, Ue		AC: 220/460V		
Time delay type	Rated residual current		0.1/0.2/0.5/1A, 0.1/0.4/1/2A (Adjustable)		
	Intentional time delay		0/0.2/0.5/1s, 0.5/1/1.5/2s (Adjustable)		
Wiring system		2-pole (2-sensor)	1Ø2W		
		3-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W		
		4-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W, 3Ø4W		
Rated short-circuit breaking capacity, Icu			**N-type**	**S-type**	**H-type**
	AC	**460V**	**26kA**	**37kA**	**50kA**
		415V	26kA	37kA	50kA
		220/250V	**65kA**	**85kA**	**100kA**
Ics=%×Icu			100%	100%	100%
Protective function			Overload, short-circuit and ground fault		
Type of trip unit			Thermal-magnetic		
Magnetic trip range			12×In		
Life cycle Note5)	Mechanical		20,000 operations		
	Electrical		5,000 operations		
Connection	Standard		Front connection		
	Optional		Rear connection		
Mounting	Standard		Screw fixing		

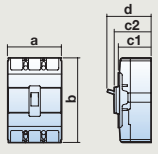Dimensions (mm)	Pole	2p	3p	3p	4p	3p	4p
	a	105	105	105	140	105	140
	b	165		165		165	
	c1 Note1)	60		60		60	
	c2 Note1)	64		64		64	
	d	87		87		87	
Weight, kg	Standard	1.1	1.2	1.2	1.5	1.2	1.5

Certification	Pole	2p	3p	3p	4p	3p	4p
CE marking	CE	○		○		○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
4. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
5. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

- Accessories ▶ 7-1 page
- Trip curves ▶ 8-3 page
- Drawings ▶ 9-11 page
- Connection and mounting ▶ 10-2 page

Ordering types

Breaker types

Instantaneous type

EBS203c / 250 / 30

Code	Frame size/ Pole
EBN202c	EBN 250AF 2P
EBN203c	EBN 250AF 3P
EBS203c	EBS 250AF 3P
EBS204c	EBS 250AF 4P
EBH203c	EBH 250AF 3P
EBH204c	EBH 250AF 4P

Code	Rated current
100	100A
125	125A
150	150A
175	175A
200	200A
225	225A
250	250A

Code	Rated residual current
30	30mA
100	100mA
100/200/500	100/200/500mA
100/300/500	100/300/500mA

Note) EBS203c/250/30: EBS203c, Rated current 250A, Rated residual current 30mA

Time delay type

EBS203c / 250 / 1A1s


Code	Frame size/ Pole
EBN202c	EBN 250AF 2P
EBN203c	EBN 250AF 3P
EBS203c	EBS 250AF 3P
EBS204c	EBS 250AF 4P
EBH203c	EBH 250AF 3P
EBH204c	EBH 250AF 4P

Code	Rated current
100	100A
125	125A
150	150A
175	175A
200	200A
225	225A
250	250A


Code	Rated residual current	Intentional time delay
1A1s	1A	1s
2A2s	2A	2s

Note) EBS203c/250/30: EBS203c, Rated current 250A, Time delay type 1A1s

Accessories

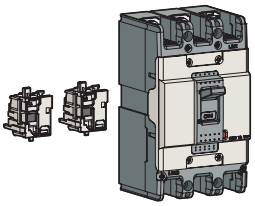

Electrical auxiliaries




AX	Auxiliary switch
AL	Alarm switch
AX+AL	Combination switch

Maximum possibilities

T-position	Not available
R-position	Option of AX or AL or AX+AL

Note) For more detail see 7-1 page

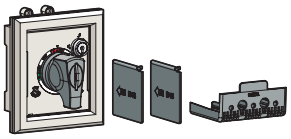

External accessories

EBN250c EBS250c EBH250c	Name
IB23	Insulation barrier
TCL33	Terminal cover (Long) - Single type, D-handle type, N-handle type
TCS33	Terminal cover (Short) - Single type, D-handle type, N-handle type
N-50c	Rotary handle (Direct)
DH250	Rotary handle (Direct)
DHK250	Rotary handle (Direct, key lock)
EH250	Rotary handle (Extended)
RTB3	Rear terminal (Bar)
RTR3	Rear terminal (Round)
Handle lock	

Note) For more detail see7-9 ~ 7-23 page
- Single type: This cover is used without auxiliary handle.
- D-handle type: This cover is used with D-handle.
- N-handle type: This cover is used with N-handle.

400AF ELCB
EBN400c, EBS400c, EBH400c, EBL400c



EBS403c


EBL404c

Ratings

Frame size			400AF			
Type and pole			**N-type**	**S-type**	**H-type**	**L-type**
		3-pole (3-sensor)	**EBN403c**	**EBS403c**	**EBH403c**	**EBL403c**
		4-pole (3-sensor)	**EBN404c**	**EBS404c**	**EBH404c**	**EBL404c**
Rated current, In			250-300-350-400A			
Rated impulse withstand voltage, Uimp			6kV			
Rated operational voltage, Ue			220/460V			
Instantaneous type	Rated residual current, I⊿n		30, 100/200/500mA (Adjustable)			
	Residual current off-time at I⊿n		≤0.1 sec			
Time delay type	Rated residual current		0.1/0.4/1/2A (Adjustable)			
	Intentional time delay		0.5/1/1.5/2s (Adjustable)			
Wiring system		3-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W			
		4-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W, 3Ø4W			
Rated short-circuit breaking capacity, Icu			**N-type**	**S-type**	**H-type**	**L-type**
	AC	**415V/460V**	**37kA**	**50kA**	**65kA**	**85kA**
		220/250V	**50kA**	**75kA**	**85kA**	**125kA**
Ics=%×Icu			100%	100%	100%	75%
Protective function			Overload, short-circuit and ground fault			
Type of trip unit			Thermal-magnetic			
Magnetic trip range			8~12In			
Life cycle Note5)	Mechanical		4,000 operations			
	Electrical		1,000 operations			
Connection	Standard		Front connection			
Mounting	Standard		Screw fixing			

Dimensions (mm)

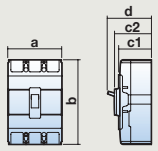

Pole	3p	4p	3p	4p	3p	4p	3p	4p
a	140	184	140	184	140	184	140	184
b	257		257		257		257	
c1 Note1)	109		109		109		109	
c2 Note1)	113		113		113		113	
d	145		145		145		145	
Weight, kg — Standard	7	8.4	7	8.4	7	8.4	7	8.4

Certification	Pole	3p	4p	3p	4p	3p	4p	3p	4p
CE marking	CE	○		○		○		○	

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. 4-pole product's ampacity on neutral conductor is equal to or less than 50% of the rated current.
4. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
5. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

• Accessories	▶ 7-2 page
• Trip curves	▶ 8-4 page
• Drawings	▶ 9-12 page
• Connection and mounting	▶ 10-3 page

Ordering types

Breaker types

Instantaneous type

EBS403c / 400 / 30

Code	Frame size/ Pole
EBN403c	EBN 400AF 3P
EBN404c	EBN 400AF 4P
EBS403c	EBS 400AF 3P
EBS404c	EBS 400AF 4P
EBH403c	EBH 400AF 3P
EBH404c	EBH 400AF 4P
EBL403c	EBH 400AF 3P
EBL404c	EBH 400AF 4P

Code	Rated current
250	250A
300	300A
350	350A
400	400A

Code	Rated residual current
30	30mA
100/200/500	100/200/500mA

Note) EBS403c/400/30: EBS403c, Rated current 400A, Rated residual current 30mA

Time delay type

EBS403c / 400 / 2A2s


Code	Frame size/ Pole
EBN403c	EBN 400AF 3P
EBN404c	EBN 400AF 4P
EBS403c	EBS 400AF 3P
EBS404c	EBS 400AF 4P
EBH403c	EBH 400AF 3P
EBH404c	EBH 400AF 4P
EBL403c	EBH 400AF 3P
EBL404c	EBH 400AF 4P

Code	Rated current
250	250A
300	300A
350	350A
400	400A

Code	Rated residual current	Intentional time delay
2A2s	2A	2s

Note) EBS403c/400/30: EBS403c, Rated current 400A, Time delay type 2A2s


Accessories

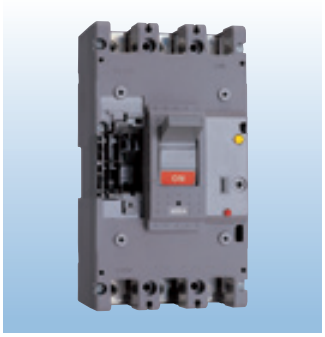



Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
SHT	Shunt trip
UVT	Undervoltage trip




Maximum possibilities

T-position	Not available
R-position	Option of 2AX, 2AL and SHT or UVT

Note) For more detail see 7-2 page

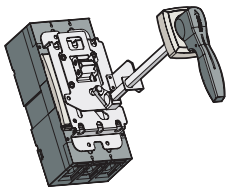

E-70U

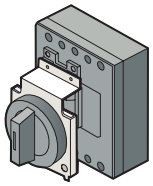

N-70

External accessories


B-43B	Insulation barrier
T1-43A	Terminal cover (Long) - 2, 3pole - Single type, N-handle type
T1-44A	Terminal cover (Long) - 4pole
N-70	Rotary handle (Direct)
E-70U	Rotary handle (Extended)
MI-43	Mechanical interlock - 2, 3pole
MI-44	Mechanical interlock - 4pole

Note) For more detail see7-9 ~ 7-23 page

800AF ELCB
EBN803c, EBS803c, EBL803c


EBS803c

Ratings

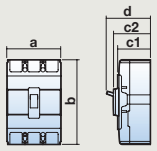Frame size			800AF		
Type and pole			**N-type**	**S-type**	**L-type**
		3-pole (3-sensor)	**EBN803c**	**EBS803c**	**EBL803c**
		4-pole (3-sensor)	-	-	-
Rated current, In			500-630-700-800A		
Rated impulse withstand voltage, Uimp			6 kV		
Rated operational voltage, Ue			220/460V		
Instantaneous type	Rated residual current, I∆n		30, 100/200/500mA (Adjustable)		
	Residual current off-time at I∆n		≤0.1 sec		
Time delay type	Rated residual current		0.1/0.4/1/2A (Adjustable)		
	Intentional time delay		0.5/1/1.5/2s (Adjustable)		
Wiring system		3-pole (3-sensor)	1Ø2W, 1Ø3W, 3Ø3W		
		4-pole (3-sensor)	-		
Rated short-circuit breaking capacity, Icu			**N-type**	**S-type**	**L-type**
	AC	**415/460V**	**37kA**	**65kA**	**85kA**
		220/250V	**50kA**	**85kA**	**125kA**
Ics=%×Icu			100%	100%	75%
Protective function			Overload, short-circuit and ground fault		
Type of trip unit			Thermal-magnetic		
Magnetic trip range			8~12In		
Life cycle Note4)		Mechanical	2,500 operations		
		Electrical	500 operations		
Connection		Standard	Front connection		
Mounting		Standard	Screw fixing		
Dimensions (mm)			Pole		3p
			a		210
			b		280
			c1 Note1)		109
			c2 Note1)		113
			d		145
Weight, kg			Standard		11.5
Certification			Pole		3p
	CE marking	CE	○		

Note) 1. Depth by door cut size: c1 for large cut, c2 for small cut
2. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
3. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
4. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information

• Accessories	▶ 7-2 page
• Trip curves	▶ 8-4 page
• Drawings	▶ 9-14 page
• Connection and mounting	▶ 10-3 page

Ordering types

Breaker types

Instantaneous type

EBS803c / 800 / 30

Code	Frame size/ Pole
EBN803c	EBN 800AF 3P
EBS803c	EBS 800AF 3P
EBL803c	EBH 800AF 3P

Code	Rated current
500	500A
630	630A
700	700A
800	800A

Code	Rated residual current
30	30mA
100/200/500	100/200/500mA

Note) EBS803c/800/30: EBS803c, Rated current 800A, Rated residual current 30mA

Time delay type

EBS803c / 800 / 2A2s

Code	Frame size/ Pole
EBN803c	EBN 800AF 3P
EBS803c	EBS 800AF 3P
EBL803c	EBH 800AF 3P

Code	Rated current
500	500A
630	630A
700	700A
800	800A

Code	Rated residual current	Intentional time delay
2A2s	2A	2s

Note) EBS803c/800/30: EBS803c, Rated current 800A, Time delay type 2A2s


Accessories





Electrical auxiliaries


AX	Auxiliary switch
AL	Alarm switch
SHT	Shunt trip
UVT	Undervoltage trip




Maximum possibilities

T-position	Not available
R-position	Option of 2AX, 2AL and SHT or UVT

Note) For more detail see 7-2 page

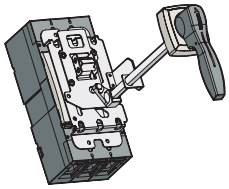

E-80U

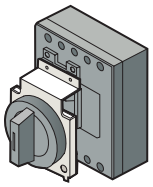

N-80

External accessories

B-33C	Insulation barrier
T1-63A	Terminal cover (Long) - 2, 3pole - Single type, N-handle type
T1-64A	Terminal cover (Long) - 4pole
N-80	Rotary handle (Direct)
E-80U	Rotary handle (Extended)
MI-83S	Mechanical interlock - 2, 3pole
MI-84S	Mechanical interlock - 4pole

Note) For more detail see 7-9 ~ 7-23 page

1000/1200AF ELCB
EBS1003b, EBS1203b



① Adjustable instantaneous for each phase

Ratings

Frame size			1000AF	1200AF
Type and pole			S-type	S-type
	3-pole (3-sensor)		EBS1003b	EBS1203b
	4-pole (3-sensor)		-	-
Rated current, In			1000A	1200A
Rated residual current, I∆n			100/200/500mA (Adjustable)	
Residual current off-time at I∆n			≤0.1 sec	
Rated operational voltage, Ue			AC: 460V	
Wiring system	3-pole (3-sensor)		1Ø2W, 1Ø3W, 3Ø3W	
Rated short-circuit breaking			S-Type	S-Type
capacity, Icu	AC	415/460V	85kA	
		220/250V	125kA	
Protective function			Overload, short-circuit and ground fault	
Type of trip unit			Thermal-magnetic	
Magnetic trip range			3~6×In ...①	
Life cycle Note3)	Mechanical		2,500 operations	
	Electrical		500 operations	
Connection	Standard		Front connection	
Mounting	Standard		Screw fixing	
Dimensions (mm)		Pole	3p	
		a	220	
		b	565	
		c	105	
		d	159	
Weight, kg		Standard	27.1	

Note) 1. Do not test withstand voltage or insulation resistance test between poles to avoid the damage of the PCB.
2. Rated non-trip current sensitivity is equal to or less than 50% of the rated current sensitivity.
3. Life cycle means not guarantee but limitation
(Quality guarantee: On/Off frequency on the basis of IEC60947-2 within the term of guarantee.)

For more information





- Trip curves ▶ 8-5 page
- Drawings ▶ 9-14 page

Ordering types

Breaker types

EBS type (85kA/460V)	
Rated current, In	3-pole
1000 A	**EBS1003b/1,000/100**
1200 A	**EBS1203b/1200/100**


Contact operation for auxiliary and alarm switches

MCCB	On	Off	Trip
AX			
AL			

Option of below items for T-position

AX1	Auxiliary switch (1c)
AL1	Alarm switch (1c)
AX1+AL1	Auxiliary (1c) + Alarm (1c) switch


Note) R-position is not available.



Contact rating for auxiliary and alarm switches

AC			DC		
Voltage (V)	Current (A)		Voltage (V)	Current (A)	
	Resistive load	Inductive load		Resistive load	Inductive load
125	20	20	30	6	5
250	20	20	125	0.4	0.05
500	10	5	250	0.2	0.03

Electrical auxiliaries of 100~250AF

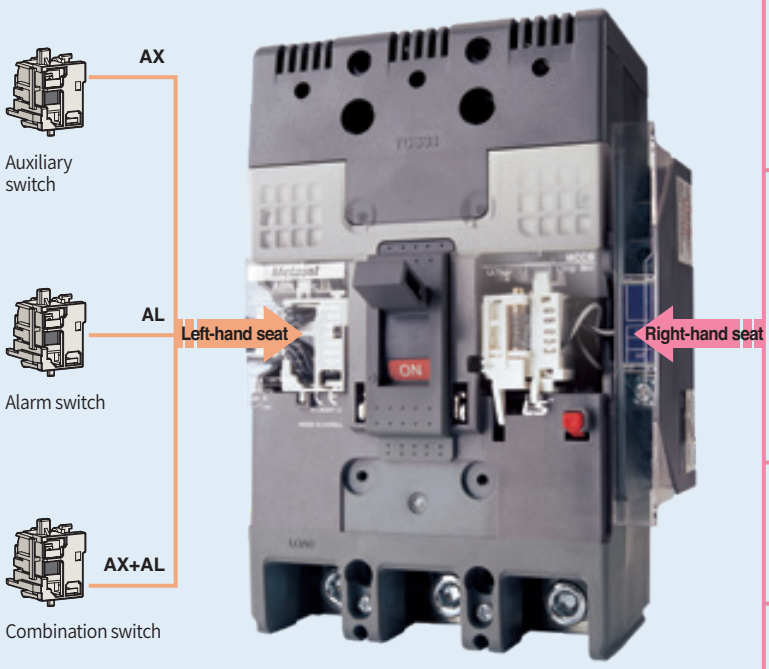


Option of connecting AX or AL or AX+AL
This seat is not available for 2-pole MCCB.


Option of connecting SHT or UVT
or AX or AL or AX+AL
This seat is not available for ELCB.

Maximum possibilities


Position	Type	ABN100c		ABH125c		ABH250c	EBN100c	EBH125c	EBH250c
		2P	3/4P	2P	3/4P	2/3/4p	2/3/4p	3/4p	2/3/4p
Left-hand seat	AX	-	1	-	1	1	1	1	1
	AL	-	1	-	1	1	1	1	1
	AX+AL	-	1	-	1	1	1	1	1
Right-hand seat	AX	1	1	1	1	1	-	-	-
	AL	1	1	1	1	1	-	-	-
	AX+AL	1	1	1	1	1	-	-	-
	SHT/UVT	1	1	1	1	1	-	-	-

Electrical auxiliaries of 400~800AF

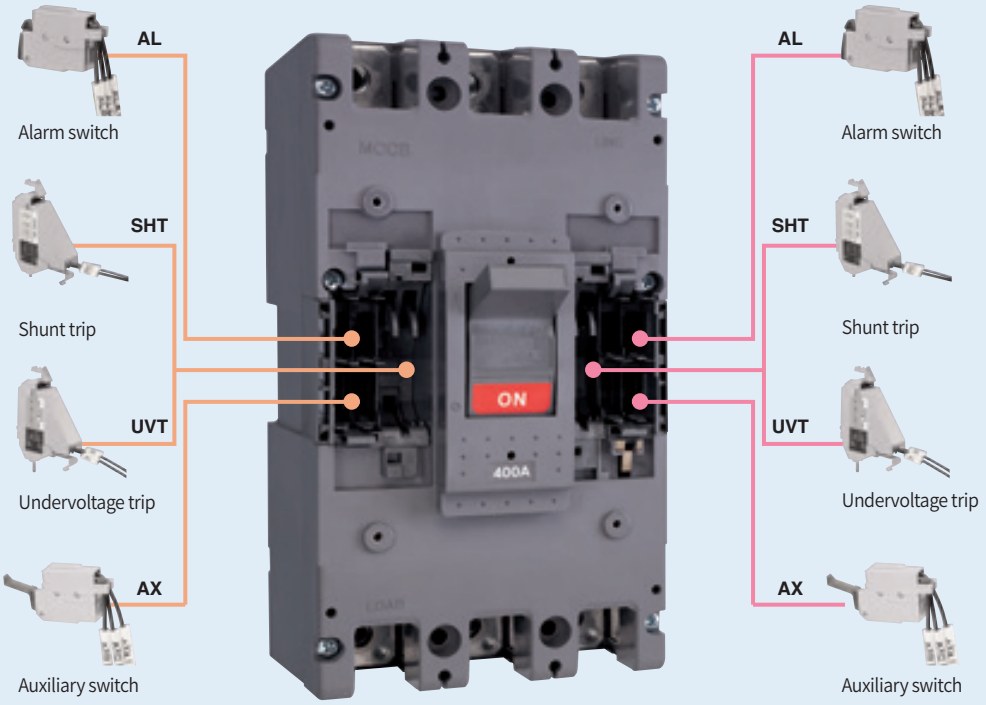



Option of connecting
AX or AL or AX+AL
This seat is not available for 2-pole breakers.




Option of connecting
SHT or UVT or AX or AL or AX+AL
This seat is not available for ELCB.











Maximum possibilities


Position	Type	MCCB (400~800AF)	ELCB (400~800AF)
Left-hand seat	AX	2	2
	AL	2	2
	SHT/UVT	1	1
Right-hand seat	AX	2	-
	AL	2	-
	SHT/UVT	1	-

Combinations of accessories




















○ Auxiliary switch (AX)
● Alarm switch (AL) □ Shunt trip (SHT) / Undervoltage trip (UVT)


Series		MCCB (30~250AF)				MCCB (400~800AF)	MCCB (1,000~1200AF)
Type	N-type	ABE 32b	ABE 33b	ABN 52c ABN 62c ABN 102c/102e	ABN 53c/54c ABN 63c/64c ABN 103c/104c, ABN 103e/104e ABN 202c/203c/204c	ABN 402c/403c/404c ABN 802c/803c/804c	-
	S-type	-	-	ABS 32c ABS 52c ABS 62c ABS 102c	ABS 33c/34c ABS 53c/54c ABS 63c/64c ABS 103c/104c ABS 202c/203c/204c	ABS 402c/403c/404c ABS 802c/803c/804c	ABS 1003b ABS 1004b ABS 1203b ABS 1204b ABS 1203bE
	H-type	-	-	ABH 52c ABH 102c	ABH 53c/54c ABH 103c/104c ABH202c/203c/204c	ABH 402c/403c/404c	-
	L-type	-	-	ABL 102c	ABL 103c/104c ABL 202c/203c/204c	ABL 402c/403c/404c ABL 802c/803c/804c	ABL 1003b ABL 1004b ABL 1203b ABL 1204b
Pole		2 pole	3 pole	2 pole	2, 3, 4 pole	2, 3, 4 pole	3, 4 pole
AX							
AX2							
AX3 (4)							
AL							
AL2							
AL3 (4)							
SHT (UVT)							
SHT (UVT) 2							
AX+AL							
AX+AL2							
AX+AL3 (4)							
AX2+AL							
AX2+AL2							
AX2+AL3 (4)							
AX3 (4) +AL							
AX3 (4) +AL2							
AX3 (4) +AL3 (4)							
AX+SHT (UVT)							



○ Auxiliary switch (AX)
● Alarm switch (AL) □ Shunt trip (SHT) / Undervoltage trip (UVT)


Series		MCCB (30~250AF)				MCCB (400~800AF)	MCCB (1,000~1200AF)
Type	N-type	ABE 32b	ABE 33b	ABN 52c ABN 62c ABN 102c/102d/102e	ABN 53c/54c ABN 63c/64c ABN 103c/104c, ABN 103e/104e ABN 202c/203c/204c	ABN 402c/403c/404c ABN 802c/803c/804c	-
	S-type	-	-	ABS 32c ABS 52c ABS 62c ABS 102c	ABS 33c/34c ABS 53c/54c ABS 63c/64c ABS 103c/104c ABS 202c/203c/204c	ABS 402c/403c/404c ABS 802c/803c/804c	ABS 1003b ABS 1004b ABS 1203b ABS 1204b ABS 1203bE
	H-type	-	-	ABH 52c ABH 102c	ABH 53c/54c ABH 103c/104c ABH202c/203c/204c	ABH 402c/403c/404c	-
	L-type	-	-	ABL 102c	ABL 103c/104c ABL 202c/203c/204c	ABL 402c/403c/404c ABL 802c/803c/804c	ABL 1003b ABL 1004b ABL 1203b ABL 1204b
Pole		2 pole	3 pole	2 pole	2, 3, 4 pole	2, 3, 4 pole	3, 4 pole
AX+SHT (UVT) 2							
AX2+SHT (UVT)							
AX2+SHT (UVT) 2							
AX3 (4)+SHT (UVT)							
AX3 (4)+SHT (UVT) 2							
AL+SHT (UVT)							
AL+SHT (UVT) 2							
AL2+SHT (UVT)							
AL2+SHT (UVT) 2							
AL3 (4) +SHT (UVT)							
AL3 (4) +SHT (UVT) 2							
AX+AL+SHT (UVT)							
AX+AL+SHT (UVT) 2							
AX2+AL2+SHT (UVT)							
AX2+AL2+SHT (UVT) 2							
AX3 (4)+AL3 (4)+SHT (UVT)							
AX3 (4)+AL3 (4)+SHT (UVT) 2							

Test lead wire (30~250AF)

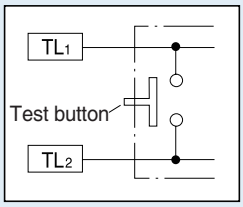


Note) 1. When you touch the lead wire under energized condition, you will be in danger of electric shock.
2. Do not energize on both ends of lead wire.
3. Do not pull out the lead wire excessively or impact on the product.









Terminal block type

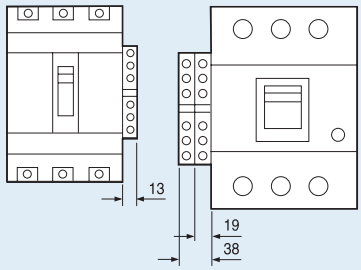

Combinations of accessories



○ Auxiliary switch (AX)
● Alarm switch (AL) ☐ Shunt trip (SHT) / Undervoltage trip (UVT)

Series		ELCB (30~250AF)	ELCB (400~800AF)	ELCB (1,000~1200AF)
Type	N-type	EBN 52c/53c/54c EBN 63c EBN 102c/103c/104c EBN 202c/203c	EBN 403c/404c EBN 803c	-
	S-type	EBS 32c/33c/34c EBS 53c/54c EBS 63c/64c EBS 103c/104c EBS 203c/204c	EBS 403c/404c EBS 803c	EBS 1003b EBS 1203b
	H-type	EBH 53c/54c EBH 53c/54c EBH 103c/104c	EBH 403c/404c	-
	L-type	-	EBL 403c/404c EBL 803c	-
Pole		3, 4 pole	3 pole	3 pole
AX				
AX2				
AL				
AL2				
SHT (UVT)				
AX+AL				
AX+AL2				
AX2+AL				
AX2+AL2				
AX+SHT (UVT)				
AX2+SHT (UVT)				
AL+SHT (UVT)				
AL2+SHT (UVT)				
AX+AL+SHT (UVT)				
AX2+AL2+SHT (UVT)				

Auxiliary and alarm switch

Auxiliary switch (AX)




Auxiliary switch is for applications requiring remote "On" and "Off" indication.
Each switch contains two contacts having a common connection.
One is open and the other closed when the circuit breaker is open, and viceversa.

Alarm switch (AL)







Alarm switches offer provisions for immediate audio or visual indication of a tripped breaker due to overload, short circuit, shunt trip, or undervoltage release conditions.
They are particularly useful in automated plants where operators must be signaled about changes in the electrical distribution system. This switch features a closed contact when the circuit breaker is tripped automatically. In other words, this switch does not function when the breaker is operated manually.
Its contact is open when the circuit breaker is reset.

Combination switch (AX+AL)

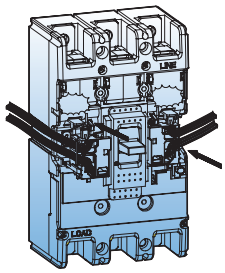

It consists of one auxiliary switch (AX) and one alarm switch (AL) in a body to connect into the same position of the breaker.


Contact (AX+AL)

MCCB	On	Off	Trip
AX			
AL			

Rating (AX+AL)

Conventional thermal current, Ith		5A			
Rated operational current, Ie		Voltage, Ue	Current, Ie		
			Resistive load	Inductive load	Minimum laod current	Applicable MCCB/ELCB
	AC 50/60Hz	125V 250V 500V	5 3 -	3 2 -	5V DC 160mA 30V DC 30mA	Metasol MCCB/ELCB 30~250AF 400~800AF
	DC	30V 125V 250V	4 0.4 0.2	3 0.4 0.2		

Shunt trip, SHT

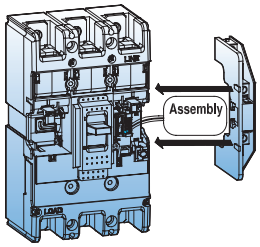


The shunt trip opens the mechanism in response to an externally applied voltage signal. The releases include coil clearing contacts that automatically clear the signal circuit when the breaker has tripped. This is not available for ELCBs of 30~250AF.





Terminal block type (TBT)

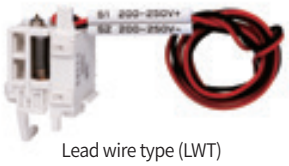


Lead wire type (LWT)

Rating for 30~250AF

Control voltage, Ue		Power consumption		Applicable MCCB/ELCB
		AC (VA)	DC (W)	
Voltage	DC 12V	-	1.5	Metasol MCCB ABN100c ABH125c ABH250c
	AC/DC 24~30V	1.5	1.5	
	AC/DC 48~60V	1.5	1.5	
	AC/DC 100~130V	1.5	1.5	
	AC/DC 200~250V	1.5	1.5	
	AC 380~440V	1.5	-	
	AC 440~500V	1.5	-	
Max.opening time		50ms (max.)		
Tightening torque of terminal screw		8.2 kgf·cm		

Note: 1. Range of operational voltage: 0.7 ~ 1.1Vn
Frequency (Only AC) : 45Hz ~ 65Hz

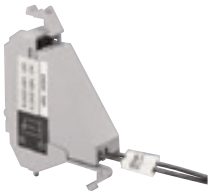

Lead wire type (LWT)


Rating for 400~800AF

Control voltage, Ue
AC/DC 24~48V
AC 100~240/DC 100~220V
AC 380~550V

Note: Range of operational voltage
AC: 0.85 ~ 1.1Vn
DC: 0.75 ~ 1.25Vn

Power consumption		
V	mA	W
AC 24	14	0.3
DC 24	15.4	0.4
AC 48	14	0.7
DC 48	16	0.8
AC 110	6	0.7
DC 110	6.6	0.7
AC 220	6.8	1.5
DC 200	7.6	1.5
AC 440	4.3	1.9
AC 480	4.4	3.3
AC 550	4.6	2.4

Undervoltage release, UVT

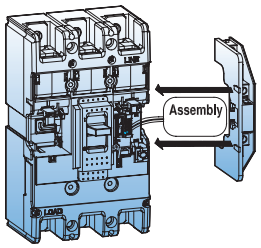

The undervoltage release automatically opens a circuit breaker when voltage drops to a value ranging between 20% to 70% of the line voltage. The operation is instantaneous, and after tripping, the circuit breaker cannot be re-closed again until the voltage returns to 85% of line voltage.
Continuously energized, the undervoltage release must be operating before the circuit breaker can be closed.
This is not available for ELCBs of 30~250AF.

- Range of tripping voltage: 0.2 ~ 0.7Vn
- Reset and closing of a breaker is possible when the control voltage is over 0.85Vn
- Frequency (Only AC: 45Hz ~ 65Hz)

Rating for 30~250AF



Terminal block type (TBT)

Control voltage, Ue		Power consumption		
		AC (VA)	DC (W)	mA
Voltage	AC/DC 24V	0.64	0.65	27
	AC/DC 48V	1.09	1.1	23
	AC/DC 100~110V	0.73	0.75	5.8
	AC/DC 200~220V	1.21	1.35	5.4
	AC 380~440V	1.67	-	3.8
	AC 440~480V	1.68	-	3.5
Max.opening time		50ms (max.)		
Tightening torque of terminal screw		8.2 kgf·cm		
Operating voltage range	Trip	20~70% Vn		
	Reset/Closing	≥ 0.85Vn		





Rating for 400~800AF



Lead wire type (LWT)


Control voltage, Ue	Trip voltage	Reset/closing voltage	Time rating
AC/DC 48	·AC: 85~1.1Vn ·DC: 85~1.25Vn	·AC: 0.2~0.7Vn ·DC: 0.2~0.7Vn	Continuous
AC/DC 100~125			
AC 200~240 / DC 200~240			
AC 380~440			
AC 440~480			

Terminal numbering

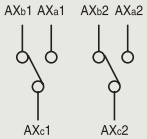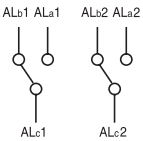Auxiliary switch (AX)	Alarm switch (AL)	Shunt trip (SHT)	Undervoltage trip (UVT)
			

External accessories

Wide range of external accessories provides user-friendly solution for mounting, cable connection, insulation, safety lock and remote control.

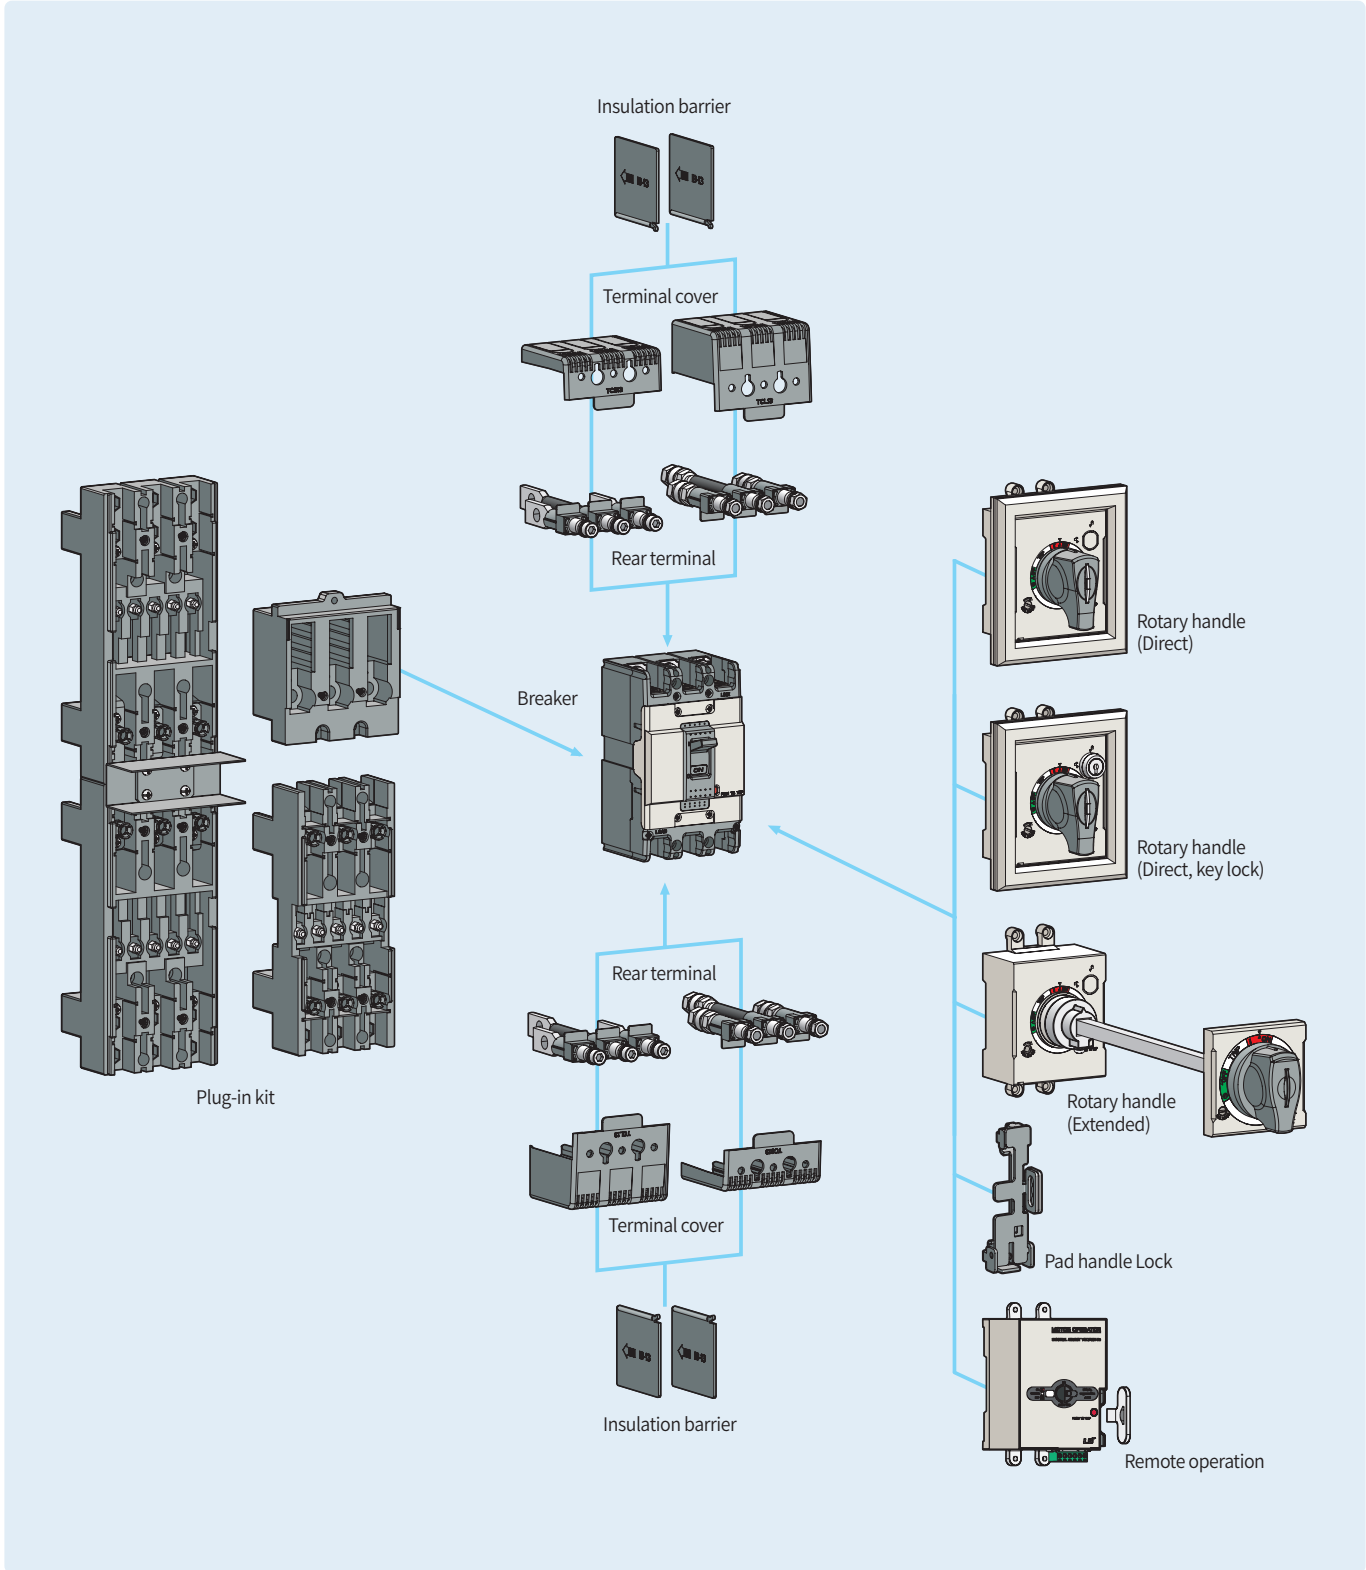

Rotary handles

Direct type




Direct type
(DH 30~250AF)



Key lock
(DH 30~250AF)



(N 30~250AF)

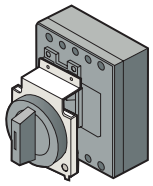

(N 400~800AF)

The rotary handle operating mechanism is available in either the direct version or in the extended version on the compartment door. It is always fitted with a compartment door lock and on a request it can be supplied with a key lock in the open position.

Direct type , D-handle and N-handle

- D-handle: Directly mountable to a circuit breaker. Trip button is built as standard. Key lock type is optional.
- N-handle: Directly mountable to a circuit breaker. Door is locked in the Off state. handle size is greater than D-handle.

Extended type, E-handle


It is used in case direct type handle can not be applied because of the longer distance between the breaker and the panel door.

Type


Direct type	Direct type (Key lock)	Extended type	Breaker type	
			MCCB	ELCB
N-30c	-	-	ABN50c/60c/100c/100e*	EBN50c/60c/100c
DH100	DHK100	EH100	ABS30c/50c/60c*	EBS30c/50c/60c
N-40c	-	-	ABS125c*	EBS125c
DH125	DHK125	EH125	ABH50c/125c* ABL125c*	EBH50c/125c
N-50c	-	-	ABN/S/H/L250c	EBN/S/H250c
DH250	DHK250	EH250		
N-70	-	E-70U	ABN/S/H/L400c	EBN/S/H/L400c
N-80	-	E-80U	ABN/S/L800c	EBN/S/L800c

Note: Padlock type for N-handle
- On or Off state type - Only Off state type
* DH100 and DH125 cannot be mounted on 2-pole products.

Extended type

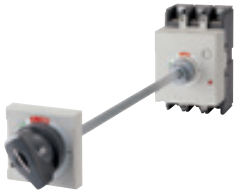

(30~250AF)

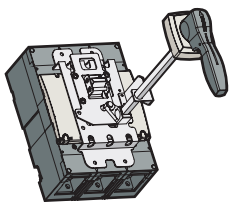


(400~800AF)


Type suffix according to the mounting position

S-type

Line




Load

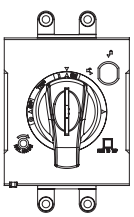


L-type

Line Load

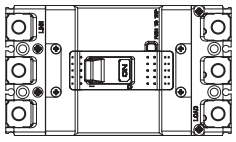


On

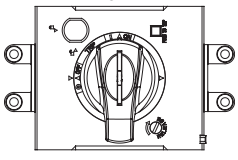


L-type

Load



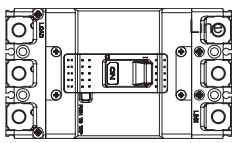



On

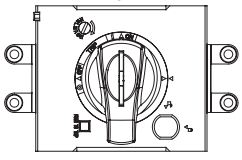


D-handle


MCCB and D-handle

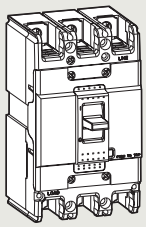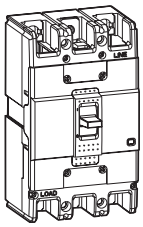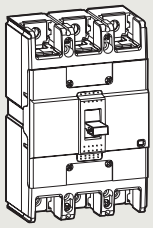
ABN100c	ABH125c	ABH250c
		

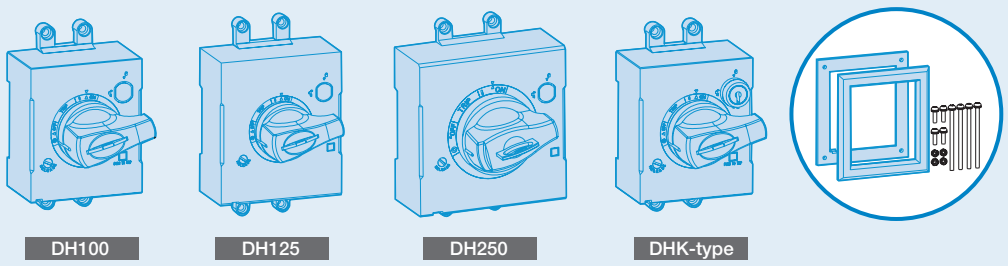


Tripping MCCB & install type



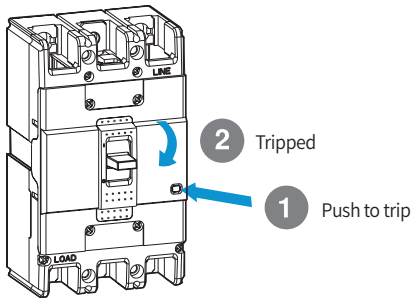


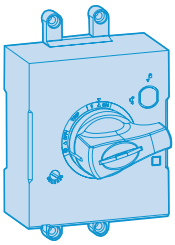

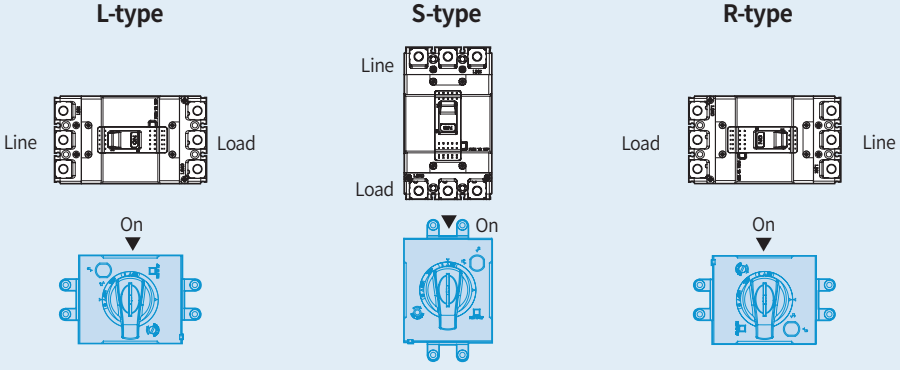


Installing the D-handle

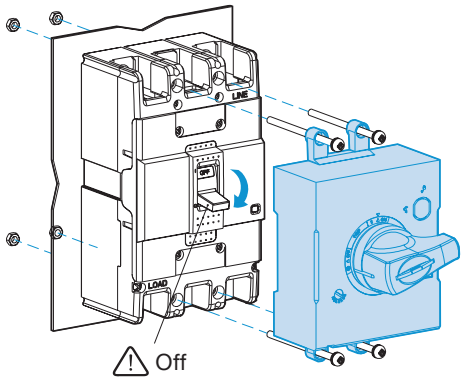

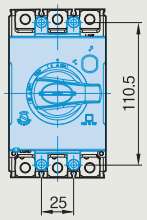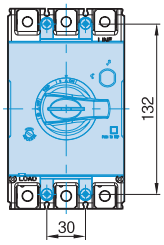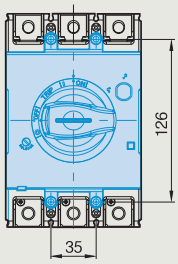ABN100c, EBN100c	ABH125c, EBH125c	ABH250c, EBH250c
		

Cutting panel

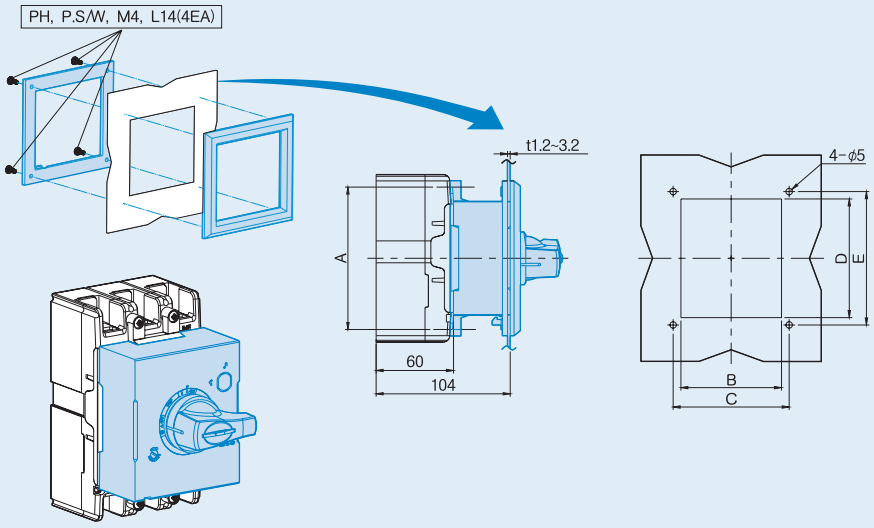

Direct type	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	Breaker
DH100	110.5	78	90	92	103.4	100AF
DH125	132	94	105	108	120	125AF
DH250	126	108	121	110	122	250AF


D-handle

Operating test


⚠ CAUTION

If the door is opened with much pressure when the position of handle is On or trip, the handle lock lever will be demaged.

Trip position: Panel door can't be opened



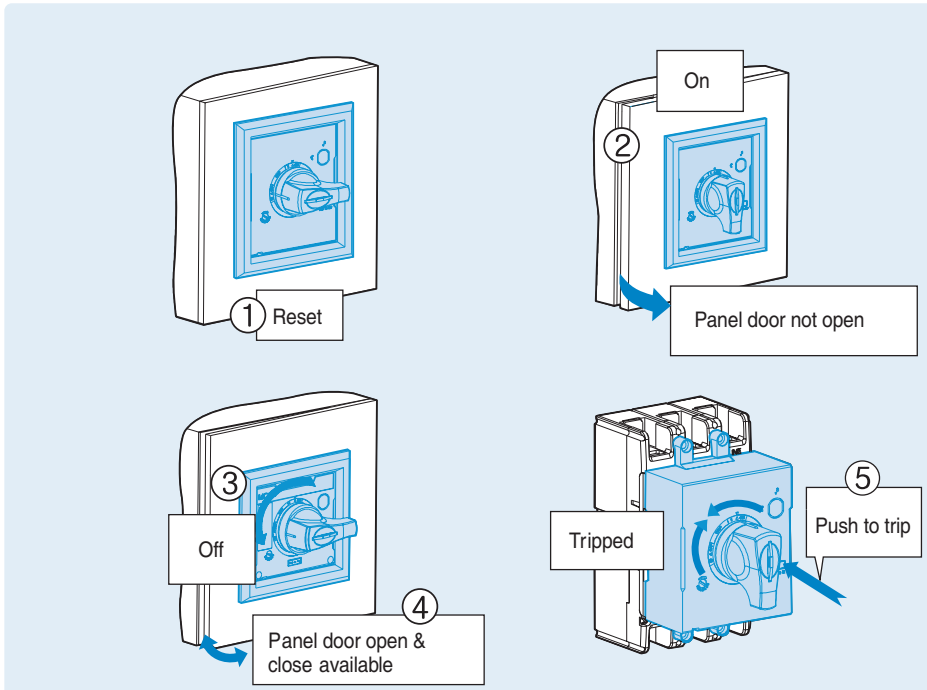



Locking system

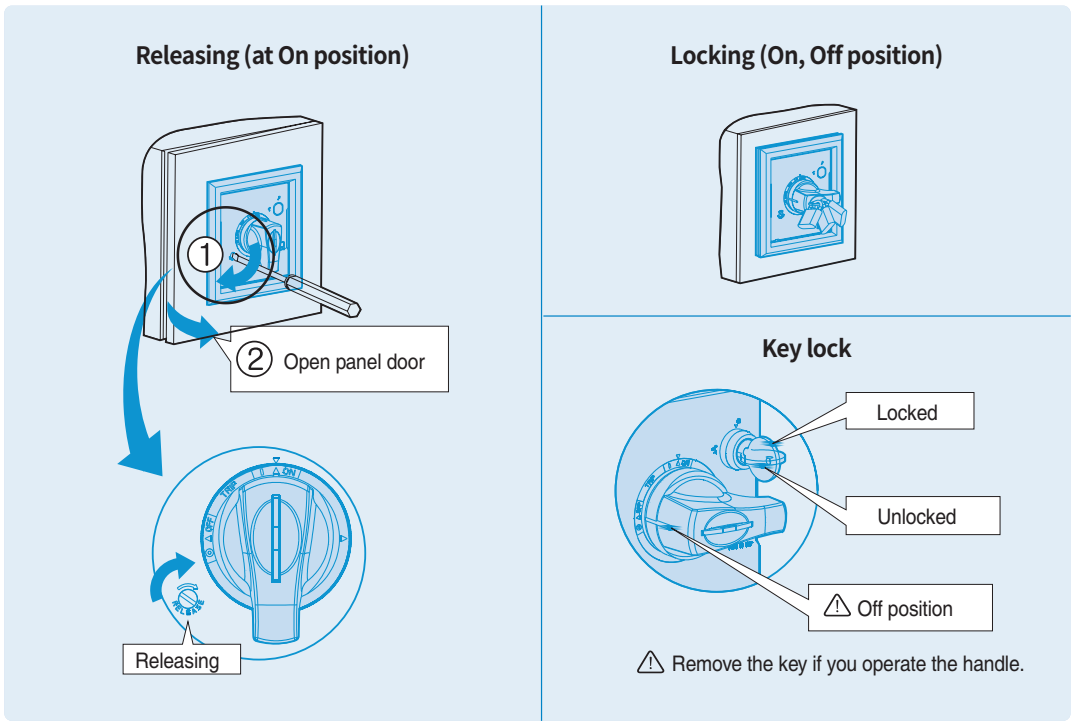



E-handle


MCCB and E-handle

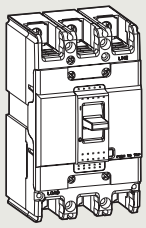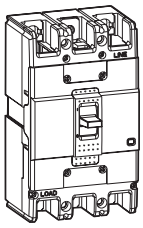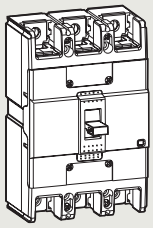ABN100c	ABH125c	ABH250c
		

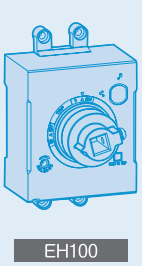


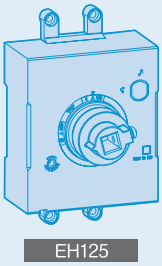


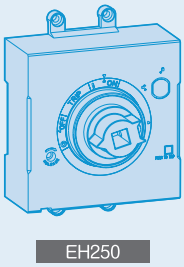


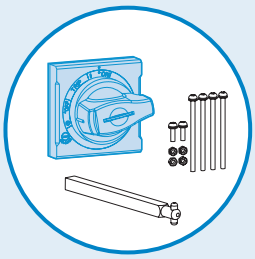

Tripping MCCB & install type

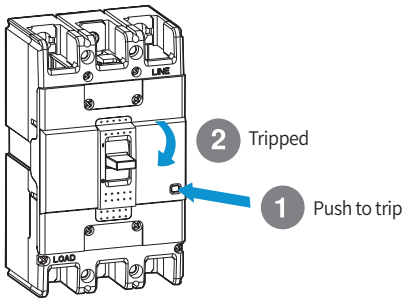




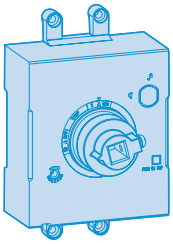


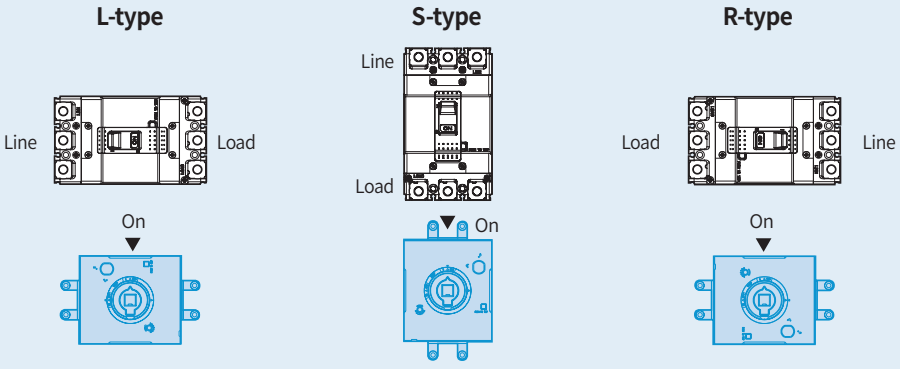


E-handle

Installing the E-handle

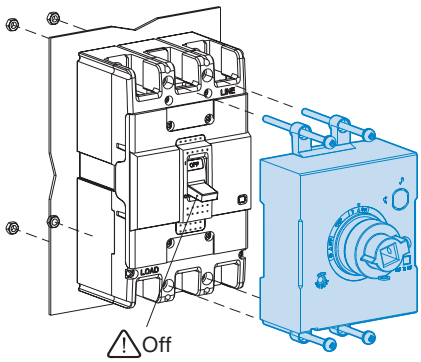

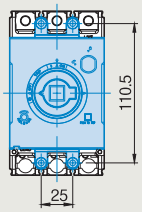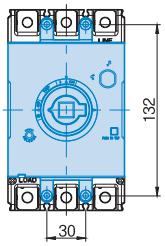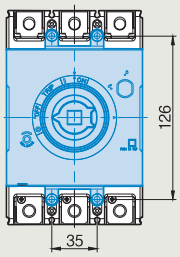ABN100c, EBN100c	ABH125c, EBH125c	ABH250c, EBH250c
		

Cutting panel

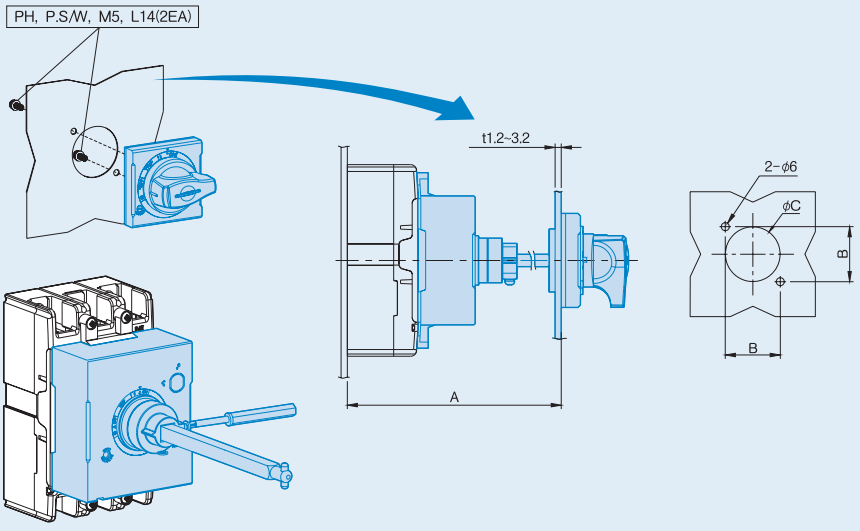

E-handle	A (mm)	B (mm)	C (mm)	Breaker
EH100	min 150, max 573.5 (Shaft469mm)	47	Ø53	100AF
EH125	min 150, max 573.5 (Shaft469mm)	47	Ø53	125AF
EH250	min 150, max 571.5 (Shaft469mm)	47	Ø53	250AF


Note: An extension shaft that must be adjusted to the distance between back of circuit breaker and door

Operating test

⚠ CAUTION


If the door is opened with much pressure when the position of handle is On or trip, the handle lock lever will be demaged.


Trip position: Panel door can't be opened

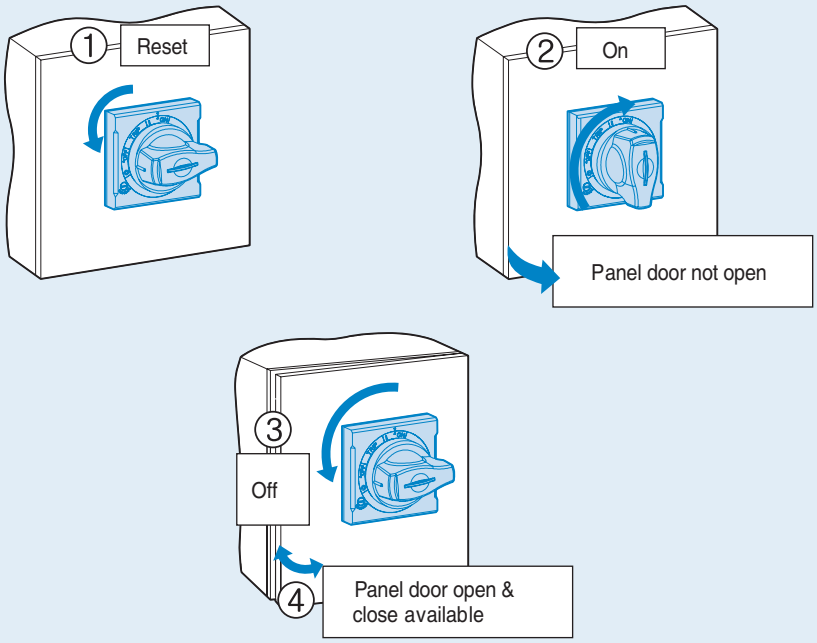

Locking system


Releasing (at On position)

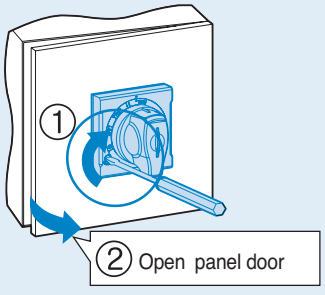

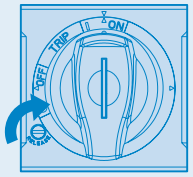

Releasing

Locking (On, Off position)

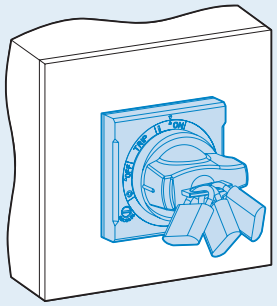

⚠ Use lock with 6mm diameter.

Note : In case of EH100/125/250 Semi Type, it is possible to lock E-handle only in the condition of OFF.


N-handle

How to mount

1) Drilling on the panel door

① All the N handles require the same size of mounting hole.

② Drill the holes according to the Fig. 1

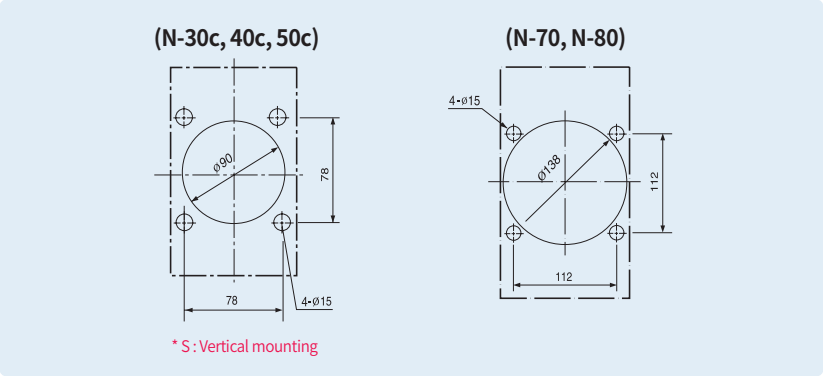


<Fig 1>

(2) Mounting base

① Prepare a mounting base according to the Fig. 2. The distance between the door panel and the mounting base should be A+2. Dimension A is shown in the Fig.

② In the case of horizontal mounting turn the breaker mounting holes by 90 degrees

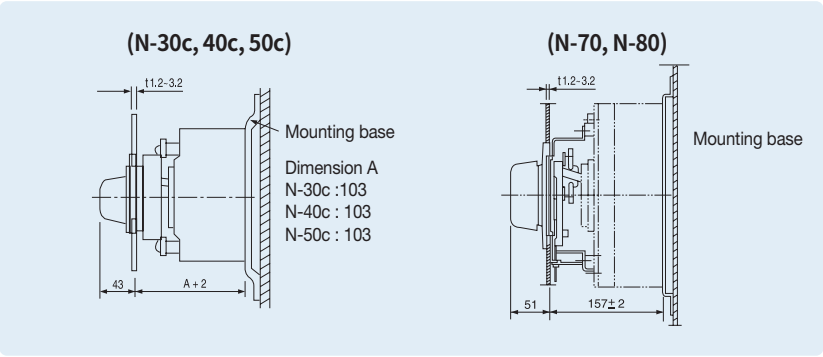


<Fig 2>

(3) Fixing


① Fixing a breaker and a handle at the same time.

a) As shown in the Fig. 3 a breaker and a handle can be fixed at the same time on a mounting base with the 4 (long) screws enclosed.

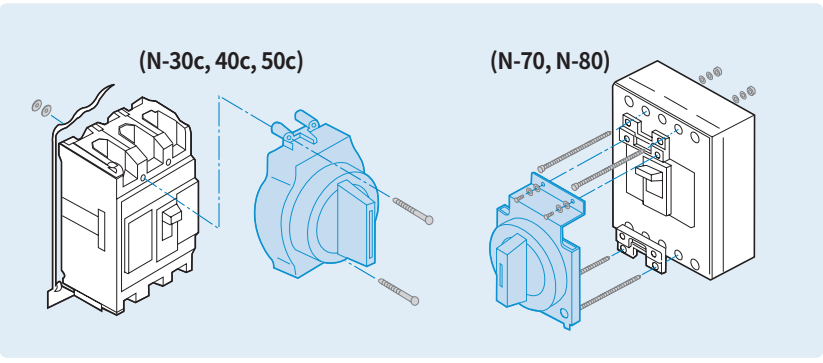


<Fig 3>

b) Have the breaker handle and the lever of N handle be located in the position shown in Fig. 4.

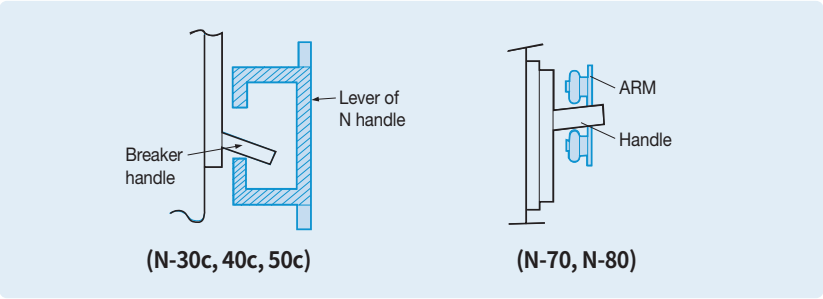

<Fig 4>


② Fixing a handle and a breaker step by step
a) Check if there is any thin membrane in the mounting hole of the breaker cover and remove it, If exists.
b) Have the breaker handle and the lever of N handle be located in the position shown in Fig. 4.
c) Fix the N handle on the breaker with the 2 (Short) screws enclosed.
d) Fix the breaker on a mounting base with the 2 (Long) screws

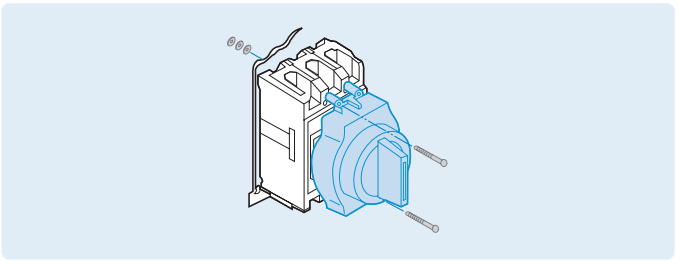

<Fig 5>


(4) Fixing front plate and lock plate

① Set the front plate and the locking plate on the door as shown in Fig. 6 fix them with screws.

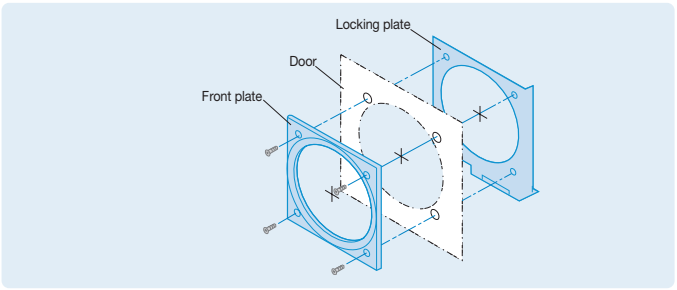


<Fig 6>

② Adjust if front plate or handle is at tilt against the breaker .

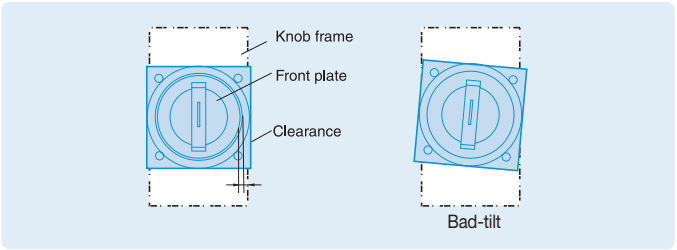


<Fig 7>

③ Verify that locking plate and locking lever interact on each other properly when the panel door is closed.
If necessary adjust them by following instructions.

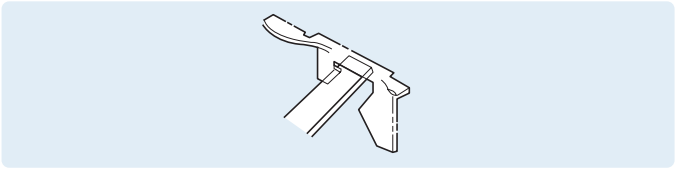


<Fig 8>

a) In the event the panel door is not fully closed
This happens if the distance between the door panel and the mounting base the panels of the door is short.
Loosen the adjusting screw in the lock plate and move the platein the direction of the arrow as shown in Fig. 9.

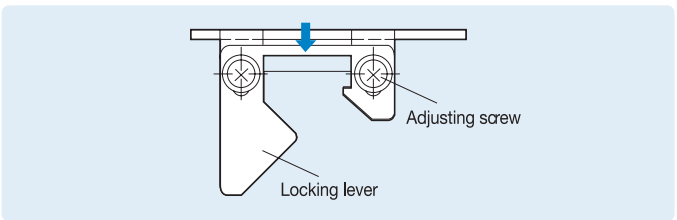


<Fig 9>

b) In the event the door does not lock after closing the door
This happens if the distance between the door panel and the mounting base the panels of the door is long.
Loosen the adjusting screw in the lock plate and move the plate in the direction of the arrow as shown in Fig. 10.

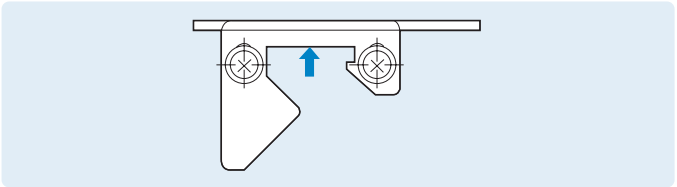


<Fig 10>

N-handle

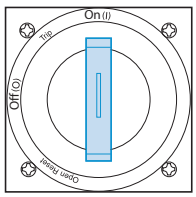


<Fig 11>

(1) Operation in the door closed
① To have the breaker On turn the handle to be vertical. <Fig. 11>
② To have the breaker Off turn the handle to be horizontal. <Fig. 12>
③ If the breaker is tripped, the handle points to the Trip position.
④ To reset the breaker turn the handle to Reset position.

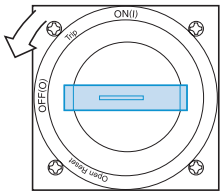

<Fig 12>

(2) Unlocking the panel door
① The door is locked and will not open at On, Off and Trip status.
② To unlock the door from Off or Trip status turn the handle toward OPEN direction. (Unlocked after taking the hand off the handle.)
③ To unlock the door from on state turn the Release screw clockwise <Fig. 13>

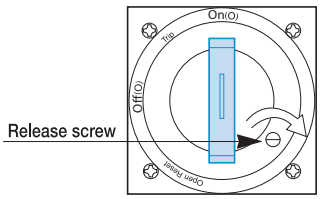


<Fig 13>

(3) Operation of the breaker in the door open
① When the door is open the breaker will not be on as the lock lever operates.
② To release the locking pull the lock lever to be nearly horizontal position. Then the breaker can be closed. <Fig. 14>
③ If the door is closed the lock lever will be reset automatically.


Padlocking

① Lockable at On or Off state with a padlock. (Padlock is not supplied)
- Lockable at Off state with a padlock is an optional spec.
② Pull the lock plate on the front of the handle and fasten the lock. <Fig. 15>
③ If the breaker is tripped after padlocking at on state, the handle will point to the trip.
④ Padlock diameter should be 3.5 ~ 6mm


(N-30, 40, 50)

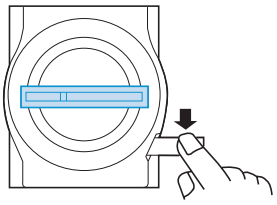

(N-70, N-80)

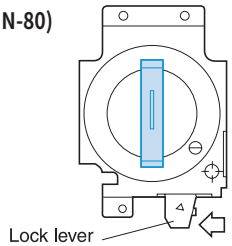


<Fig 14>

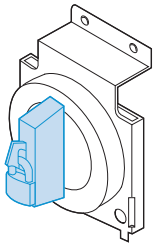

<Fig 15>

Dimensions for N-handle hinges

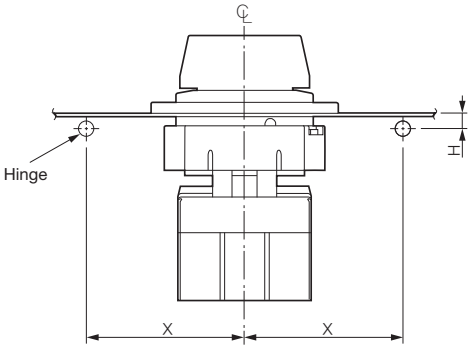

Unit: mm

Handle types	Hinge dimensions	
	H	X
N-30c N-40c N-50c	0 or more	5H + 110 or more
N-70 N-80	0 or more	5H + 100 or more

Locking device

It is a handle locking device which is used by being fixed on a breaker.
You can use the padlock in the On or Off position of the breaker handle


Fixed locking device

Locking device types	MCCB	ELCB
Handle Lock, ABN100c	ABS30c, ABS50c, ABS60c, ABN50c, ABN60c, ABN100c, ABN100d, ABN100e	EBS30c, EBS50c, EBS60c, EBN50c, EBN60c, EBN100c
Handle Lock, ABH125c	ABS125c, ABH50c, ABH125c, ABL125c	EBS125c, EBH50c, EBH125c
Handle Lock, ABH250c	ABN250c, ABS250c, ABH250c, ABL250c	EBN250c, EBS250c, EBH250c
Handle Lock, ABE/S/H/L400b~800b	ABN400c, ABS400c, ABH400c, ABL400c, ABN800c, ABS800c, ABL800c	EBN400c, EBS400c, EBH400c, EBL400c, EBN800c, EBS800c, EBL800c


How to use

The handle lock is designed to be easily attached to the front of the breaker.
(1) Set the breaker handle to the Off position. (Figures 1 and 2)
(2) Secure the locking device on the cover of the circuit breaker. (Figures 1 and 2)
(3) Use the padlock in the On or Off position. (Figures 3, 4 and 5)

• For 100AF/125AF/250AF MCCBs

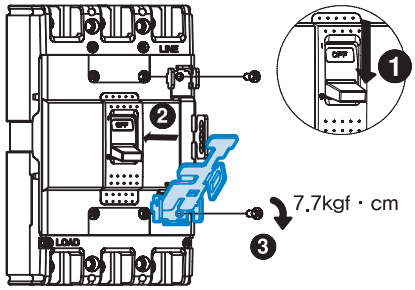


<Fig. 1>

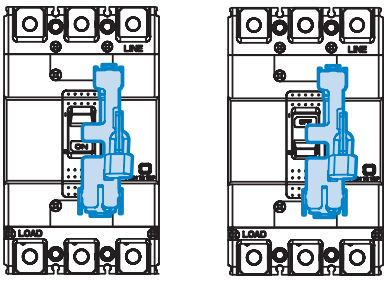


<Fig. 3>


• For 400AF / 800AF MCCBs

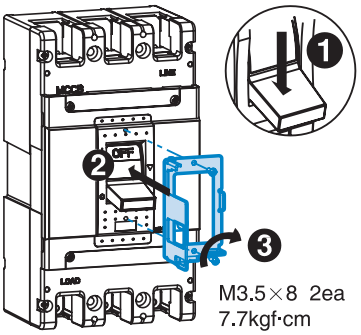

<Fig. 2>

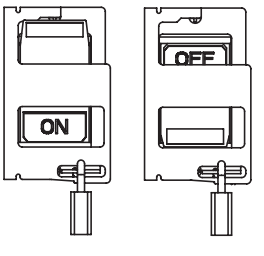

<Fig. 4>

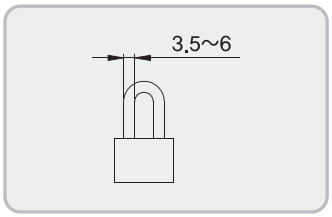

<Fig. 5>


Terminal covers

The terminal covers are applied to the circuit-breaker to prevent accidental contact with live parts and thereby guarantee protection against direct contacts.
Two types by length are available and provide IP20 degree of protection.
Also, covers ara classified in to 2 different type: Independent, Attachable and detachable with D or N handle


- Short type covers, TCS:
  For fixed circuit-breakers with rear terminals and for moving parts of plug-in.
- Long type covers, TCL:
  For fixed circuit-breakers with front, front extended, front for cables terminals.

Terminal covers						Pole	Applied breaker		Size extended (A), mm	
Short type			Long type							
Inde	D-handle	N-handle	Inde	D-handle	N-handle		MCCB	ELCB	Short type	Long type
TBS22	-	-	-	-	-	2P	ABE30b	-	10	-
TBS23	-	-	-	-	-	3P				
TCS12	-	-	TCL12	-	-	2P	ABN50c/60c/100c/100e ABS30c/50c/60c	-	5.5	30
TCS/T-12	-	-	TCL/T-12							
TCS13	TCS13	TCS13	TCL13	TCL13	TCL13	3P		EBN50c/60c/100c EBS30c/50c/60c		
TCS/T-13	TCS/T-13	TCS/T-13	TCL/T-13	TCL/T-13	TCL/T-13					
TCS14	TCS14	TCS14	TCL14	TCS14	TCS14	4P				
TCS/T-14	TCS/T-14	TCS/T-14		TCL/T-14	TCL/T-14					
TCS22	-	-	TCL22	-	-	2P	ABS125c ABH50c/125c ABL125c	-	5.5	40
TCS/T-22	-	-	TCL/T-22	-	-					
TCS23	TCS23		TCL23	TCL23		3P		EBS125c EBH50c/125c		
TCS/T-23	TCS/T-23		TCL/T-23	TCL/T-23						
TCS24	TCS24		TCL24	TCL24		4P				
TCS/T-24	TCS/T-24			TCL/T-24						
TCS33	TCS33		TCL33	TCL33		2, 3P	ABN250c, ABS250c ABH250c, ABL250c	EBN250c, EBS250c EBH250c	5.5	50
TCS/T-33	TCS/T-33		TCL/T-33	TCL/T-33						
TCS34	TCS34		TCL34	TCL34		4P				
TCS/T-34	TCS/T-34			TCL/T-34						
-	-	-	T1-43A	-	T1/T-43A	2, 3P	ABN/S/H/L400c	EBN/S/H/L400c	-	120
-	-	-	T1-44A	-	-	4P				
-	-	-	T1-63A	-	T1/T-63A	2, 3P	ABN/S/L630c/800c	EBN/S/L630c/800c	-	141
-	-	-	T1-64A	-	-	4P				

Note: Terminal covers for 400AF and 800AF MCCBs are in acrylic.

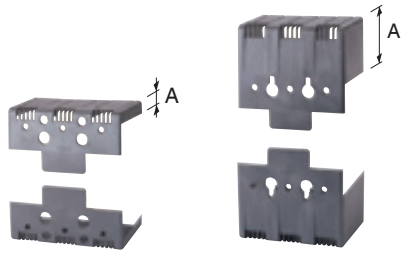

TCS (Short type) TCL (Long type)

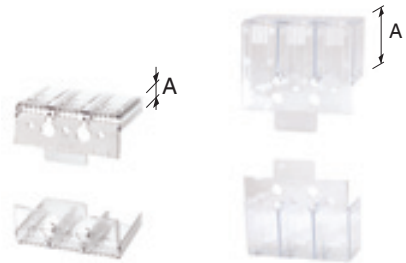

TCS/T (Short type) TCL/T (Long type)




Short type construction




Long type construction

Insulation barriers

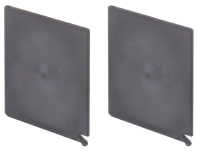

Insulation barrier allows the insulation characteristics between the phases at the connections to be increased.
They are mounted from the front, even with the circuit-breaker already installed, inserting them into the corresponding slots.
They are incompatible with both the insulating terminal covers.
It is possible to mount the phase separating partitions between two circuit-breakers side by side.

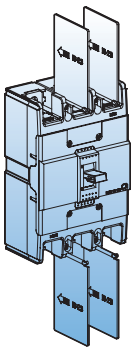

Type	Breaker	
	MCCB	ELCB
IB-13	ABN50c/60c/100c/100e ABS30c/50c/60c	EBN50c/60c/100c EBS30c/50c/60c
IB-23	ABS125c ABH50c/125c ABN250c, ABS250c ABH250c ABL125c, ABL250c	EBS125c EBH50c/125c EBN250c, EBS250c EBH250c
B-43B	ABN/S/H/L400c	EBN/S/H/L400c
B-33C	ABN/S/L800c	EBN/S/L800c




Insulation barriers for line side are provided as standard.

Rear connection terminals

Rear connection terminals are used to adapt the circuit breakers to switchboards or other applications that require rear connection.
There are two kinds of rear connection terminals.


- Flat type
- Round type

Round type terminals






Breaker	For 2-pole	For 3-pole	For 4-pole
ABN100c 50AF	RTR1-52	RTR1-53	-
ABN100c 100AF	RTR1-102	RTR1-103	RTR1-104
ABH125c	RTR2-102	RTR2-103	RTR2-104
ABH250c	RTR3-202	RTR3-203	RTR3-204

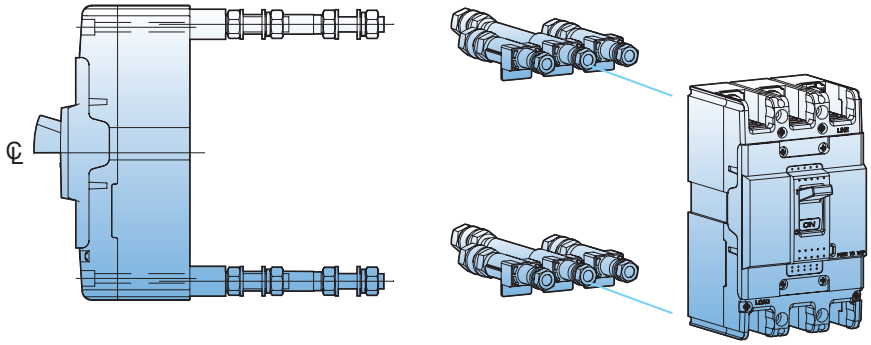


Flat type terminals





Breaker	For 2-pole	For 3-pole	For 4-pole
ABN100c	RTB1-102	RTB1-103	RTB1-104
ABH125c	RTB2-102	RTB2-103	RTB2-104
ABH250c	RTB3-202	RTB3-203	RTB3-204

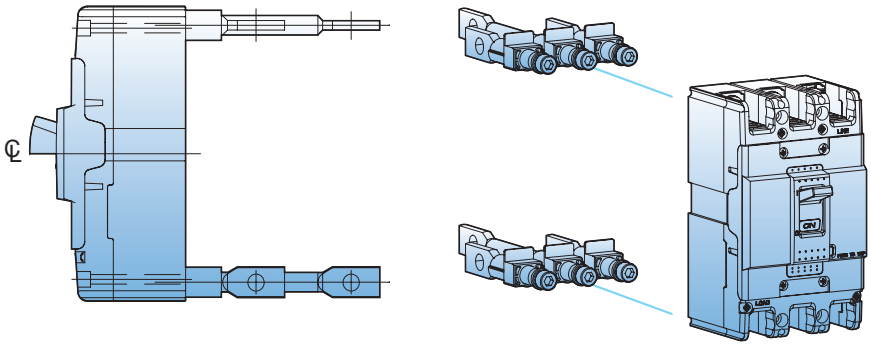

Mechanical interlock

The mechanical interlock is installed on the front of two breakers mounted side by side, in either the 3-pole or 4-pole version and prevents simultaneous closing of the two breakers. So it is suitable for consisting of manual sourcechangeover system.

Type numbering system

MI — **4** **3**

Type
Mechanical interlock

AF	
1	100AF
2	125AF
3	250AF
4	400AF
5	800AF


Pole	
3	3P
4	4P

Types and applicable breakers

Type	MCCB	ELCB
MI-13, 14	ABS30c, ABS50c, ABS60c, ABN50c, ABN60c, ABN100c, ABN100e	EBS30c, EBS50c, EBS60c, EBN50c, EBN60c, EBN100c
MI-23, 24	ABS125c, ABH50c, ABH125c, ABL125c	EBS125c, EBH50c, EBH125c
MI-33, 34	ABN/S/H/L250c	EBN/S/H250c
MI-43, 44	ABN/S/H/L400c	EBN/S/H/L400c
MI-83, 84	ABN/S/L800c	EBN/S/L800c


Note) MI is not applicable to 2-pole version breakers of 100AF and 125AF.


Layout

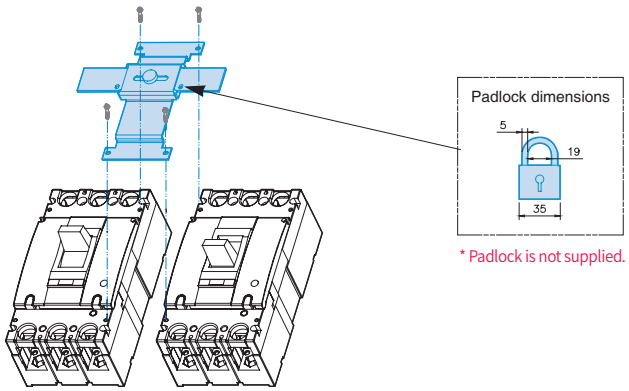

* Padlock is not supplied.

MCCB panel cutting

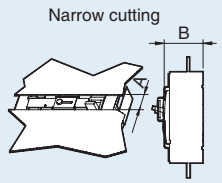


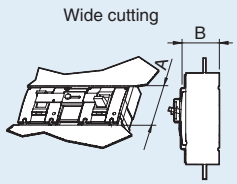

(Unit in: mm)

Cutting	MI-13, 14		MI-23, 24		MI-33, 34		MI-43, 44		MI-83, 84	
	A	B	A	B	A	B	A	B	A	B
Narrow	52	66	52	66	52	66	100	111	100	111
Wide	86	62	102	62	104	62	152	97	152	97

MCCB panel drilling

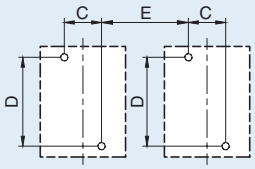

(Unit in: mm)

Breaker	C		D		E	
	3P	4P	3P	4P	3P	4P
100AF	25	25	110.5	110.5	70	95
125AF	30	30	132	132	84	114
250AF	35	35	126	126	99	134
400AF	44	44	215	215	166	210
800AF	70	70	243	243	210	280

Plug-in devices




Plug-in base

Plug-in device makes it possible to extract and/or rapidly replace the circuit breaker without having to touch connections for ship and important installations.
The plug-in base is the fixed part of the plug-in version of the circuit-breaker.
It will be installed directly on the back plate of panel.
The circuit-breaker is racked out by unscrewing the top and bottom fixing screws.

Normal type plug-in MCCB
- MCCB current rating upto 250A
- Generally used in switchgears

Double-row type plug-in MCCB
- For 125AF MCCB
- Generally used in branch circuits

Type names of blocks

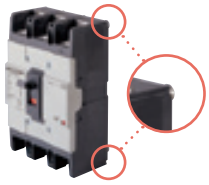

Plug-in type MCCB
(Plug-in terminal built)




ABH103c plug-in type




ABH203c plug-in type

Breaker	Arrangement	Plug-in block	Remark
ABN100c	Normal	PB-A3-FR	
	Single-row	PB-A3-1DB	
	Double-row	PB-A3-2DB	
	Line-only	PB-A3-FRL	
ABH125c	Normal	PB-C3-FR	
	Single-row	PB-C3-1DB	
	Double-row	PB-C3-2DB	
	Line-only	PB-C3-FRL	
ABH250c	Normal	PB-D3-FR	
400AF	Normal/Line-only	PB-I3-FR/PB-I3-FRL	
800AF	Normal	PB-J3-FR	

Normal

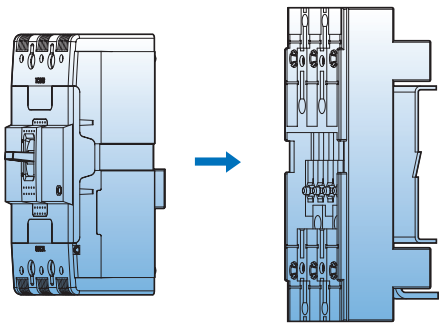

Double-row

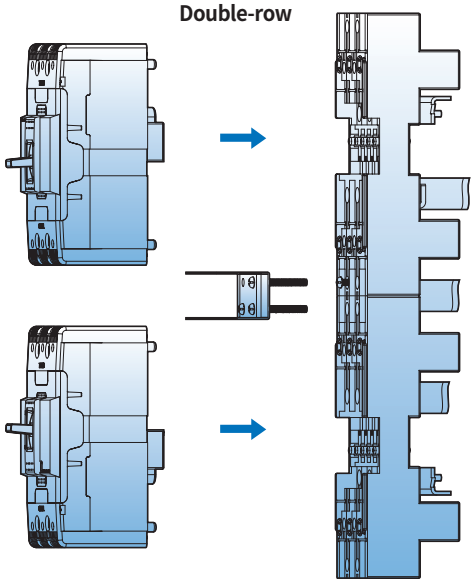

Remote operation


Motor operator



Motor operators can also be operated by manual. The motor drives a mechanism which switches Metasol toggle handle to the "On" and “Off/Reset” positions.
- The manual actuator handle is located on the front of the cover.
- Manual or Automatic operation can be selected.
- Applicable to 2, 3 and 4-pole breakers.


MCCB			Type	Control voltage	Actuation current (A)	Response time (ms)		Mechanical service life (operations)	No. of operations per hour
2P	3P	4P				Closing	Opening		
-	ABN53c, ABN63c, ABN103c, ABN103e, ABS33c, ABS53c, ABS63c	ABN54c, ABN64c, ABN104c, ABN104e, ABS34c, ABS54c, ABS64c	MOP-M1	① DC24V ② AC110V~DC110V ③ AC230V/DC220V	≤3A (DC24V) ≤0.5A (AC)	700	700	10,000	120
-	ABS103c, ABH53c, ABH103c ABL103c	ABS104c, ABH54c, ABH104c ABL104c	MOP-M2	① DC24V ② AC110V~DC110V ③ AC230V/DC220V	≤3A (DC24V) ≤0.5A (AC)	840	840	10,000	120
ABN202c, ABS202c, ABH202c ABL202c	ABN203c, ABS203c, ABH203c ABL203c	ABN204c, ABS204c, ABH204c ABL204c	MOP-M3	① DC24V ② AC110V~DC110V ③ AC230V/DC220V	≤3A (DC24V) ≤0.5A (AC)	840	840	10,000	120
ABN402c, ABS402c, ABH402c, ABL402c	ABN403c, ABS403c, ABH403c, ABL403c	ABN404c, ABS404c, ABH404c, ABL404c	MOP-M4	① DC24V ② AC110~DC110V ③ AC230V/DC220V	≤6A (DC24V) ≤0.8A (AC)	1,200	1,200	4,000	60
ABN802c, ABS802c, ABL802c	ABN803c,, ABS803c,, ABL803c	ABN804c, ABS804c, ABL804c	MOP-M5	① DC24V ② AC110~DC110V ③ AC230V/DC220V	≤6A (DC24V) ≤0.8A (AC)	1,200	1,200	2,500	60
-	ABS1003b, ABS1203b ABL1003b, ABL1203b	ABS1004b, ABS1204b ABL1004b, ABL1204b	MOP-M6	① AC230V/DC220V	≤6A (DC24V) ≤0.8A (AC)	1,500	1,500	2,500	20

Wiring connection

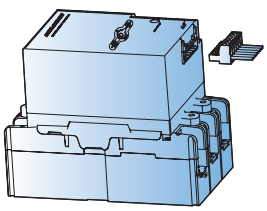


Standard connection

1) Remote On and Off of MCCB and manual operation
2) Be careful not to change the polarity at DC24V




Connection with alarm switch (AL)

1) The connection diagram is the method of using a alarm switch (AL) without shunt or undervoltage trip.
   A trip due to a fault or trip button prevent a remote reset.
2) The fault must be cleared surely and reset it with manual operation.

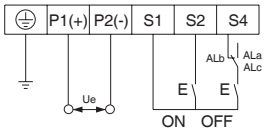

Remote operation

Manual operation

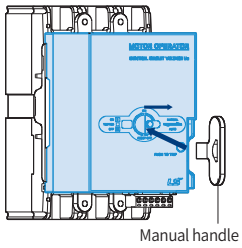

1) Insert the manual handle into the slot of Motor operator surface and rotate it clockwise.
2) It must be rotated just 180° clockwise for safe operation of micro switch in the motor operator.
3) Return the manual handle after the manual operation
4) Turn the slide switch back to the position of Auto.

CAUTION: When the circuit breaker is tripped by trip button in the Off status,
it is impossible to operate motor operator automatically It must be reset by manual operation.


Automatic operation

1) Set the slide switch to Auto, then internal power is closed automatically.
2) Operating frequency should be less than these below regulated values.
   MOP-M1~M3, M7 (120 operations per hour) , MOP-M4 (60 operations per hour) ,
   MOP-M5, M6 (20 operations per hour)
3) Use the On/Off switch in the range of regulated values.
4) It may interfere near communication equipments because of internal switching power supply.
   It's recommended that a noise filter be installed to power supply.
5) Please do not input On/Off signals at the same time during the automatic operation.
6) If the circuit breaker has a UVT attached inside, charge a UVT on the rated voltage before performing Motor operator.


Motor operator

Feature


① On position indication (Red color)
② Trip position indication (White color)
③ Off position indication (Green color)
④ Button for push to trip
⑤ On/Off/Reset selection lever
⑥ Manual/Auto selection lever

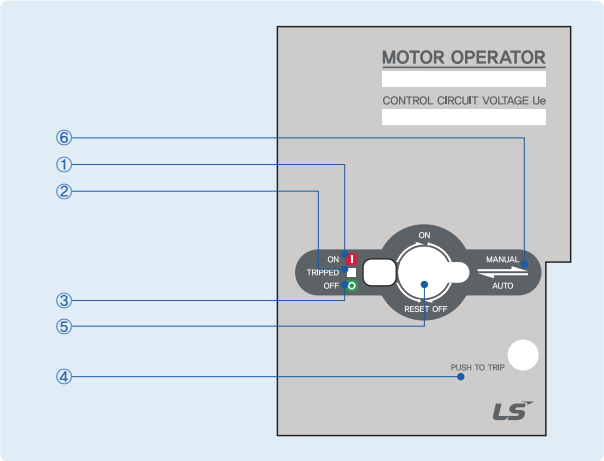


MOP-M1

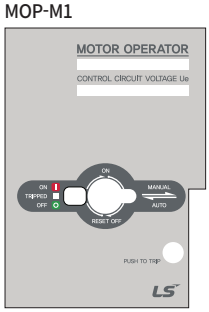

MOP-M2, M3

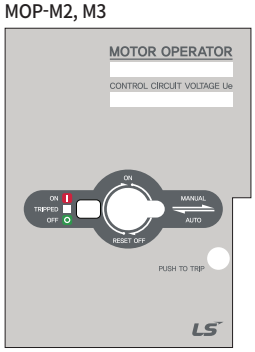

MOP-M4/M5/M6

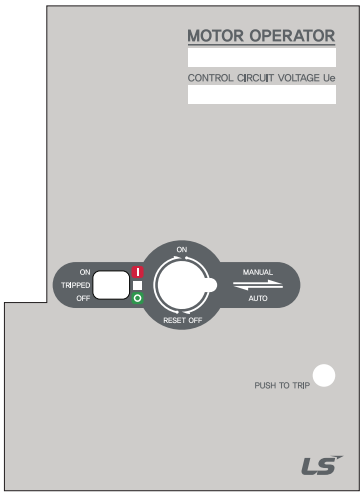


Characteristics curves

Breaker types


MCCB
ABE30b

Compensation curves

ABE30b

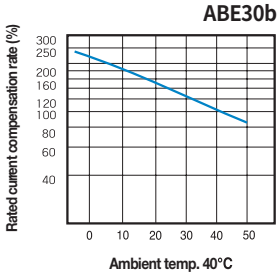

Rated current: 3~30A (ABE)

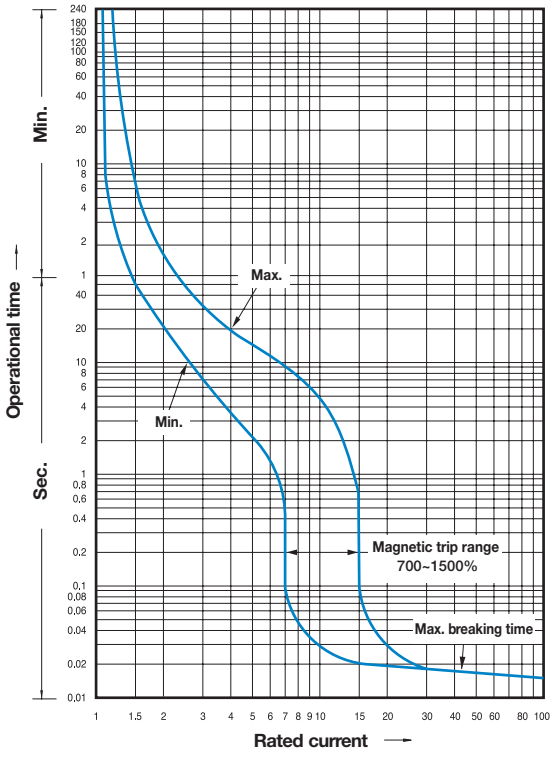


Breaker types


MCCB
ABN50c/60c/100c/100e
ABS30c/50c/60c
ELCB
EBN50c/60c/100c
EBS30c/50c/60c

Compensation curves


ABN/S, EBN/S

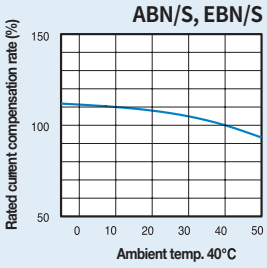

Rated current: 3~30A (ABN/S,EBN/S)

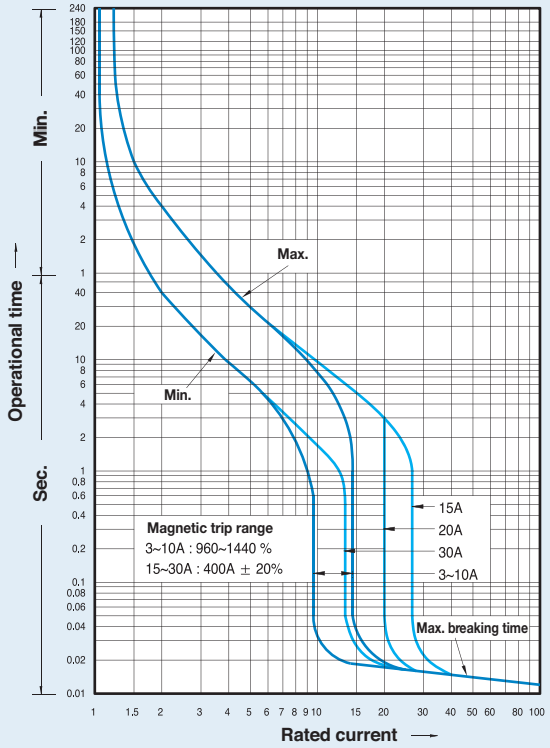

Rated current: 40~100A (ABN/S,EBN/S)

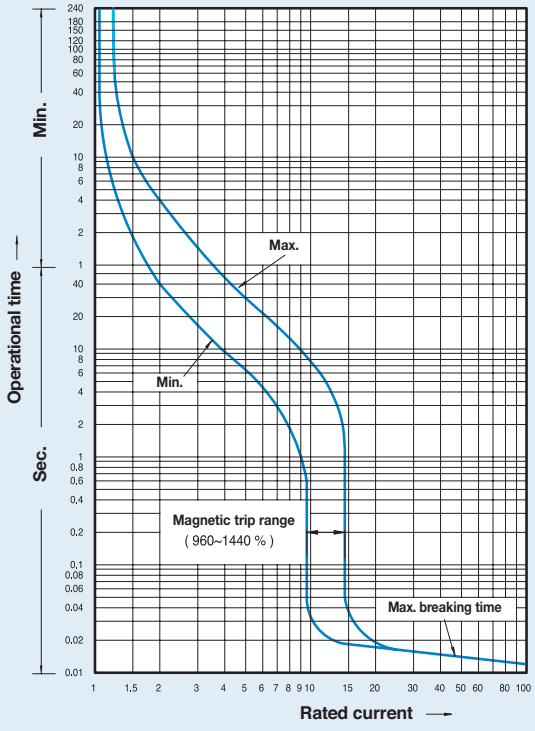

8


Characteristics curves

Breaker types


MCCB
ABS125c
ABH50c/125c
ABL125c
ELCB
EBS125c
EBH50c/125c

Compensation curves


Rated current: 15~100A

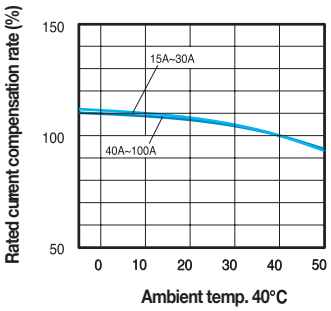


Rated current: 125A

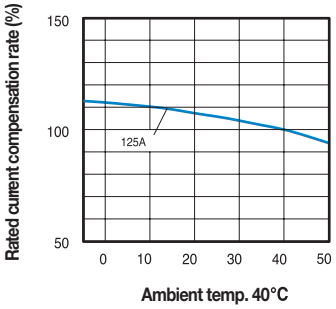

Rated current: 15~30A, 40~100A

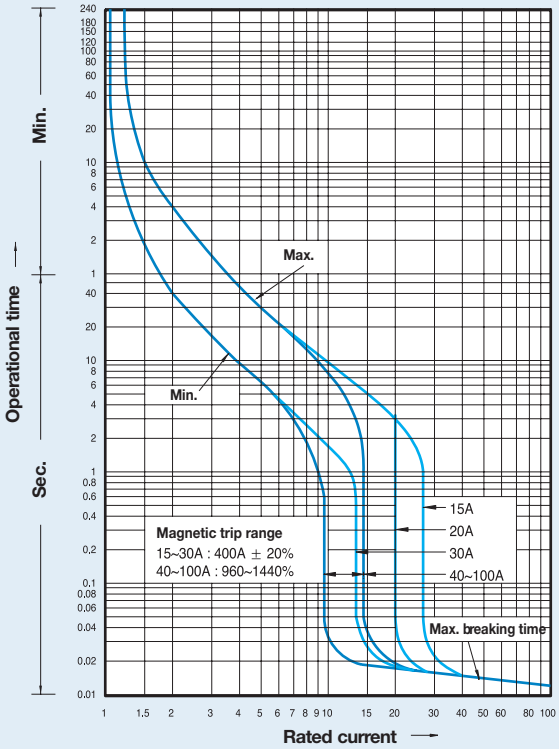


Rated current: 125A

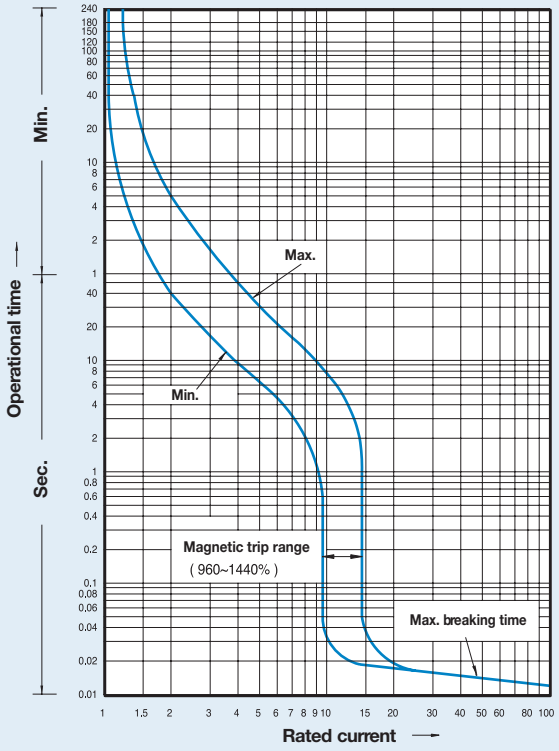


Breaker types

MCCB
ABN250c, ABS250c
ABH250c, ABL250c
ELCB
EBN250c, EBS250c
EBH250c

Rated current: 100~225A

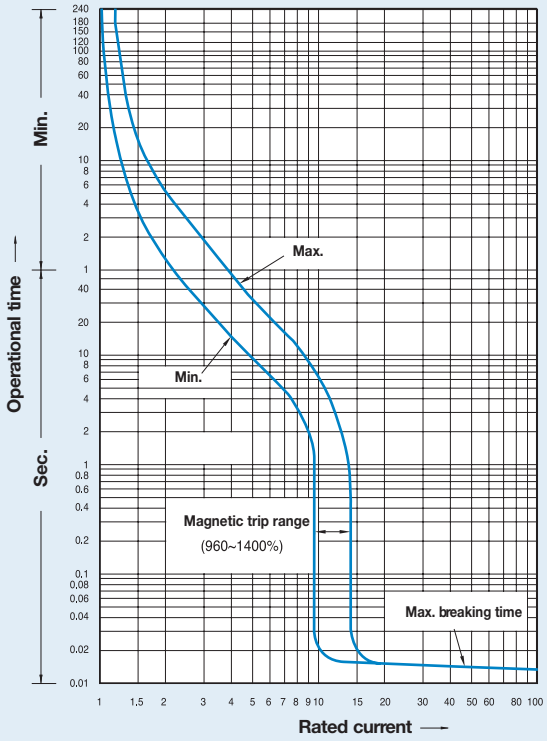


Rated current: 250A

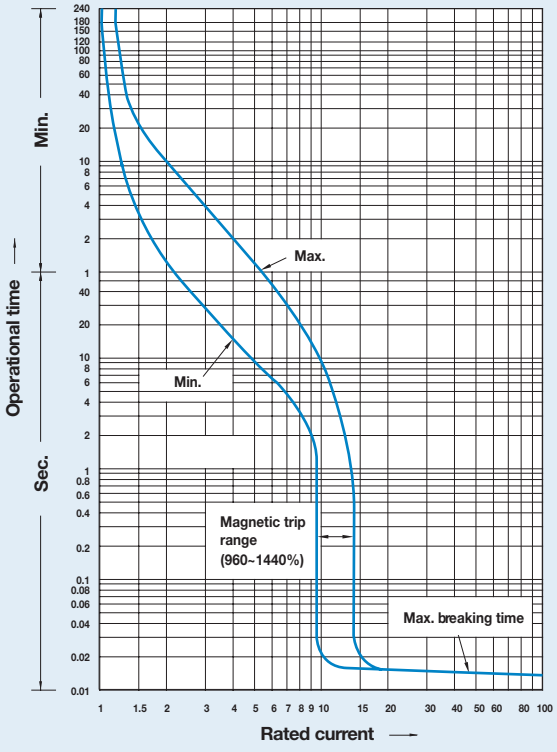


Compensation curves

Rated current: 100~225A

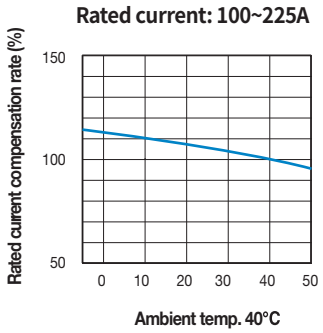

Rated current: 250A

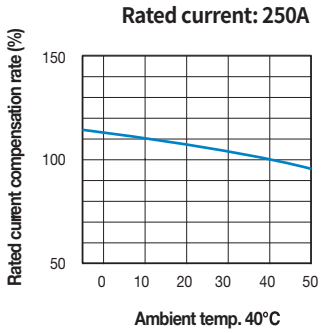


Characteristics curves


Breaker types

MCCB
ABN400c, ABS400c, ABH400c, ABL400c
ABN800c, ABS800c, ABL800c
ELCB
EBN400c, EBS400c, EBH400c, EBL400c
EBN800c, EBS800c, EBL800c

Rated current: 250~400A

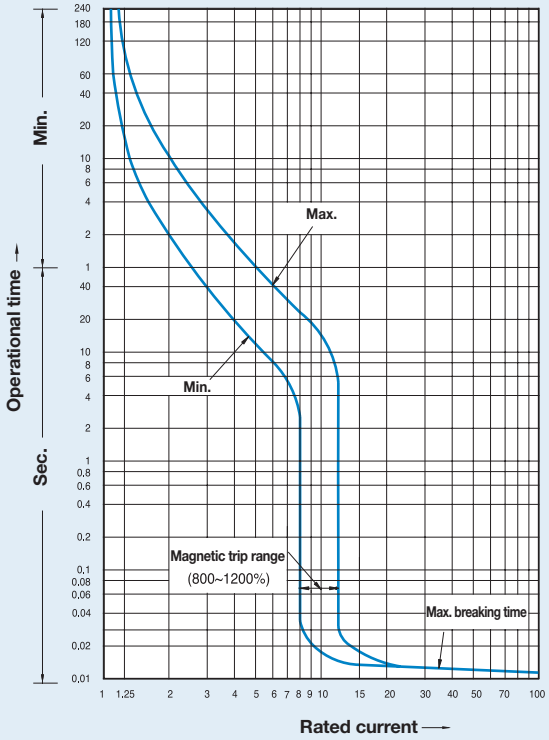


Rated current: 500~800A

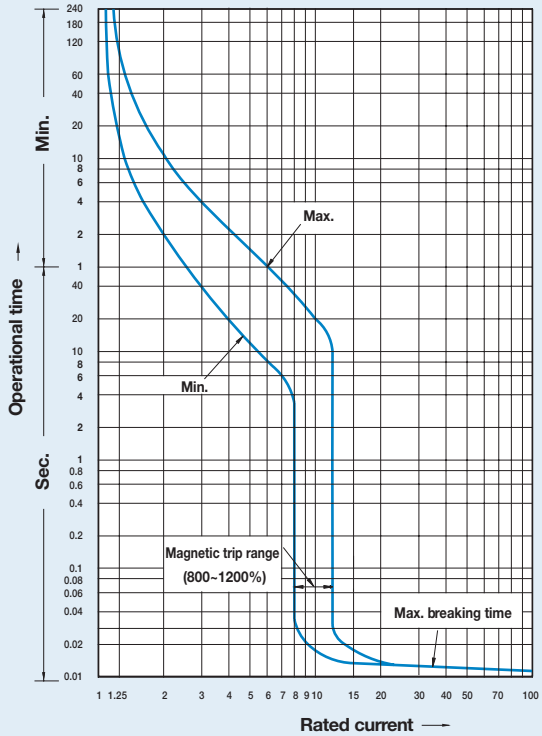


Compensation curves

Rated current: 250~400A

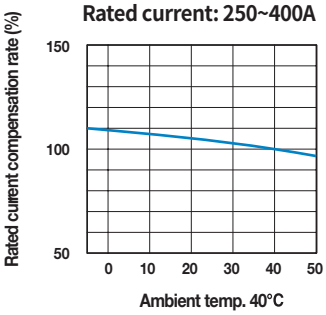


Rated current: 500~800A

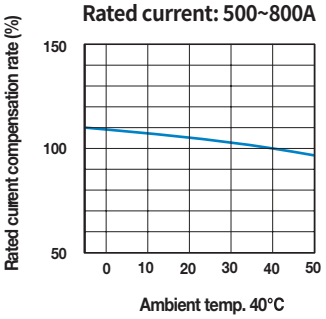

Breaker types

MCCB
ABS1000b, ABL1000b
ABS1200b, ABL1200b
ELCB
EBS1003b, EBS1203b


Compensation curves

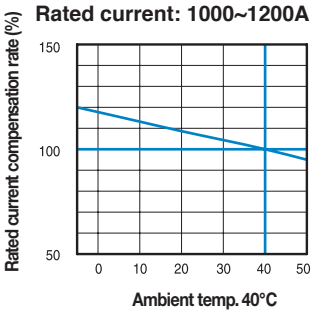


Breaker types

MCCB
ABS1200bE

Rated current: 1000~1200A

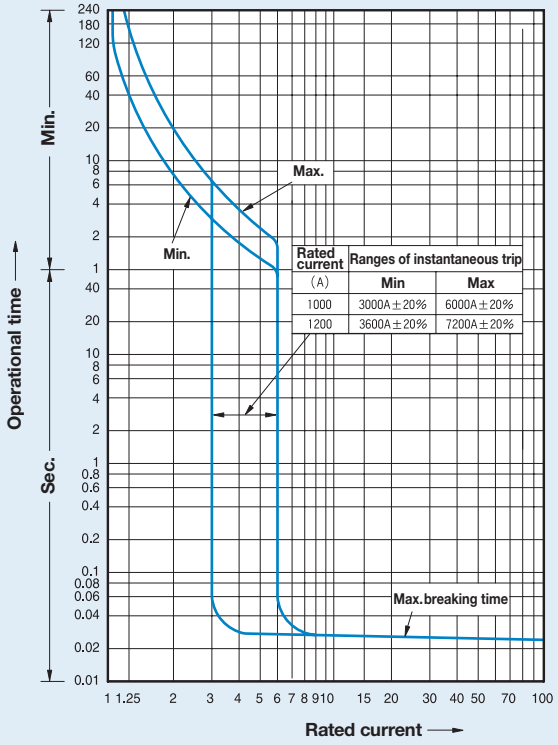

Rated current: 1200A

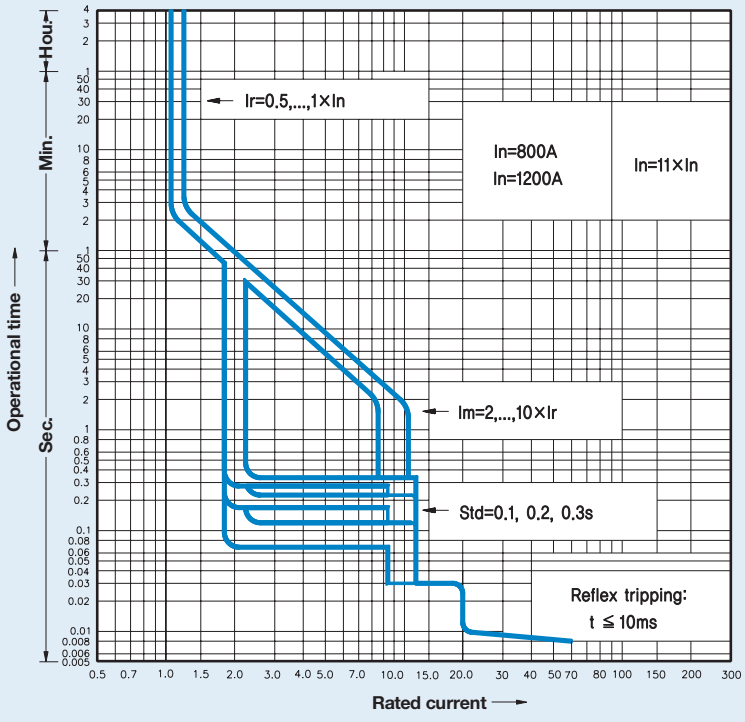


Characteristics curves (ELCB Adjustable)


Breaker types

ELCB
EBN 50c/60c/100c/250c
EBS 30c/50c/60c/125c/250c
EBH 50c/125c/250c

1A, 1s

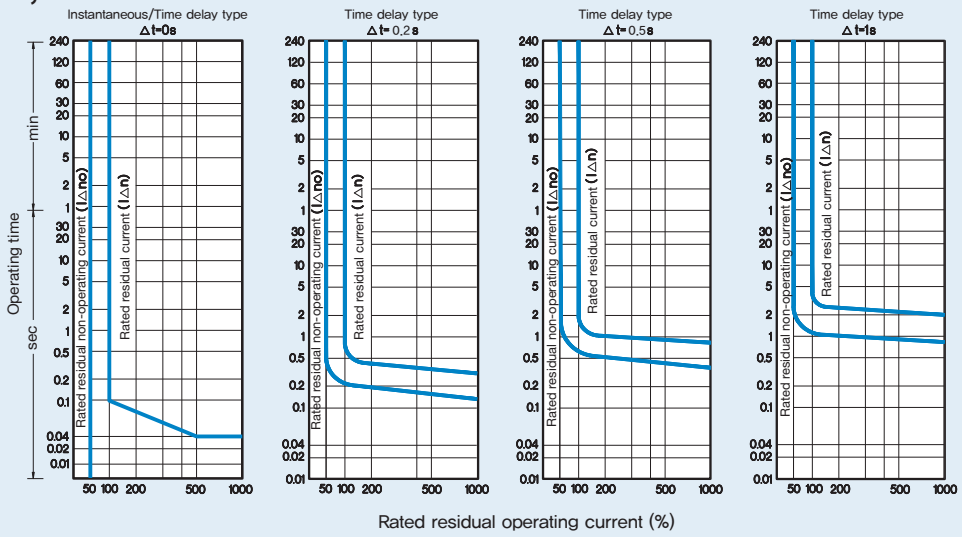


2A, 2s

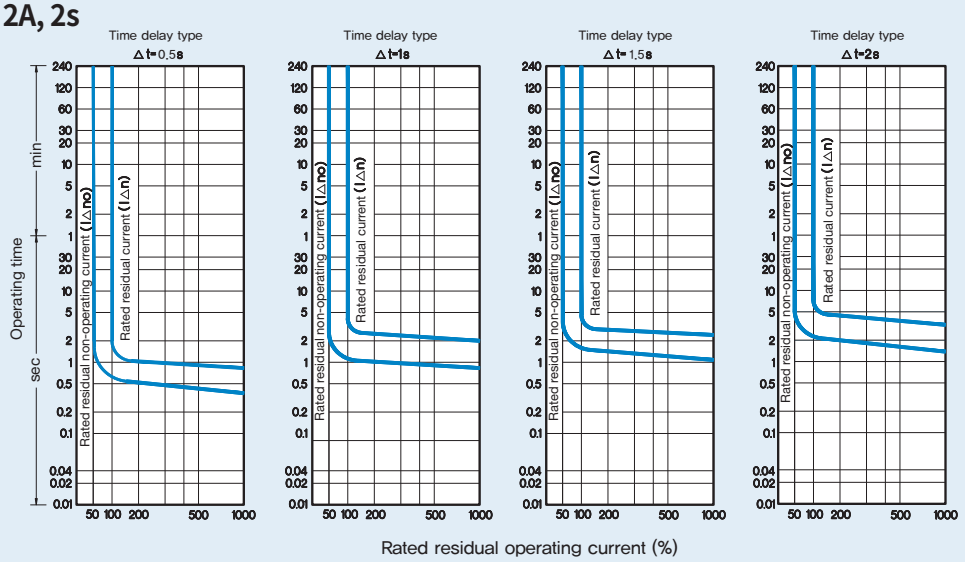

Breaker types

ELCB
EBN400c, EBS400c
EBH400c, EBL400c
EBN800c, EBS800c, EBL800c


2A, 2s

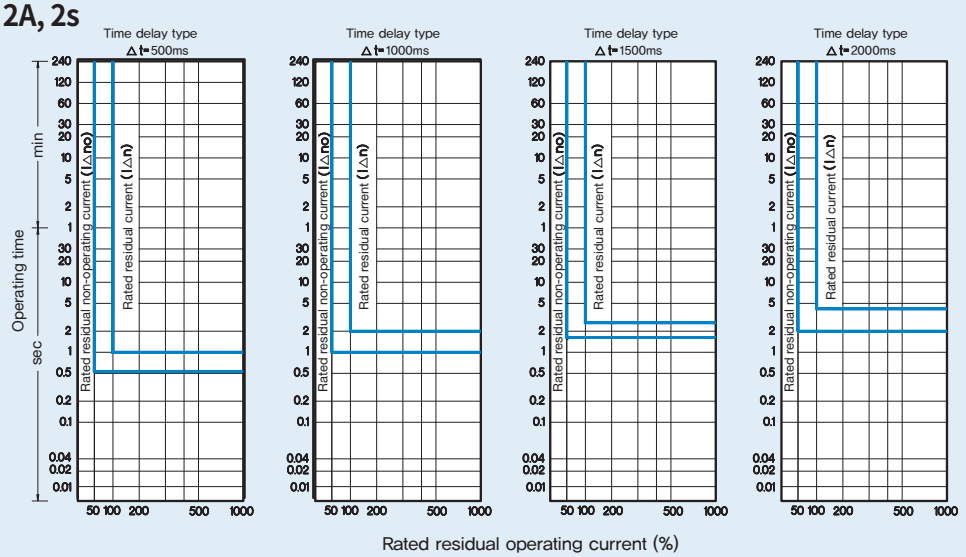


Characteristics curves (Motor protection type)

Breaker types

Rated current: 16~32A

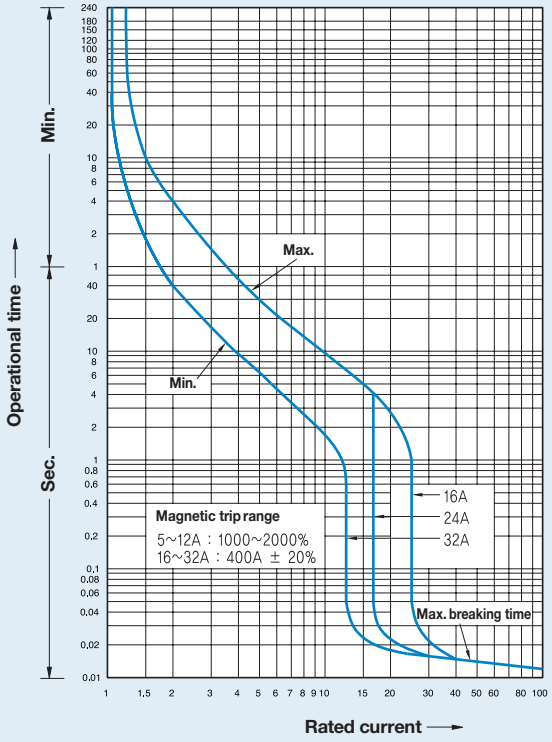


Rated current: 45~90A

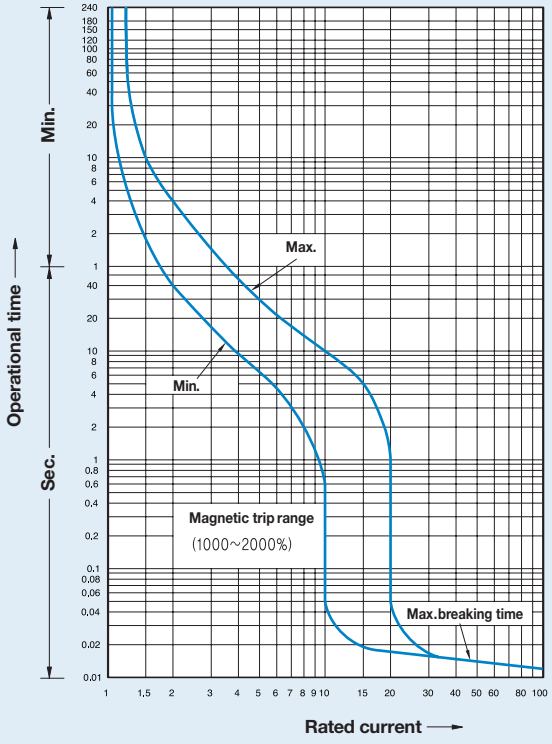


Compensation curves

Rated current: 16~32A

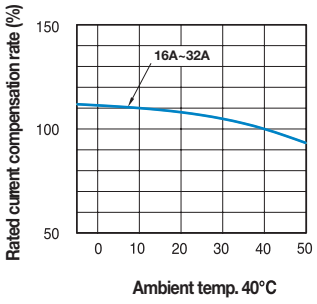

Rated current: 45~90A

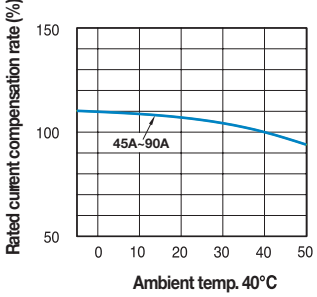


8

Characteristics curves (Motor protection type)

Breaker types

MCCB
ABS125cM
ABH50cM/125cM


Compensation curves

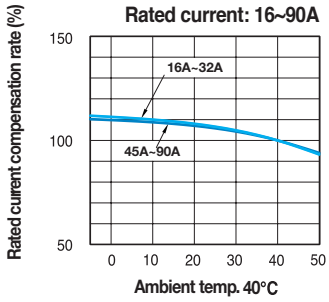


Breaker types

MCCB
ABN250cM, ABS250cM
ABH250cM


Compensation curves

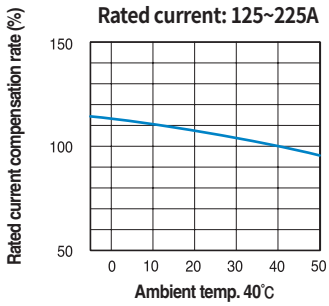

Rated current: 16~90A

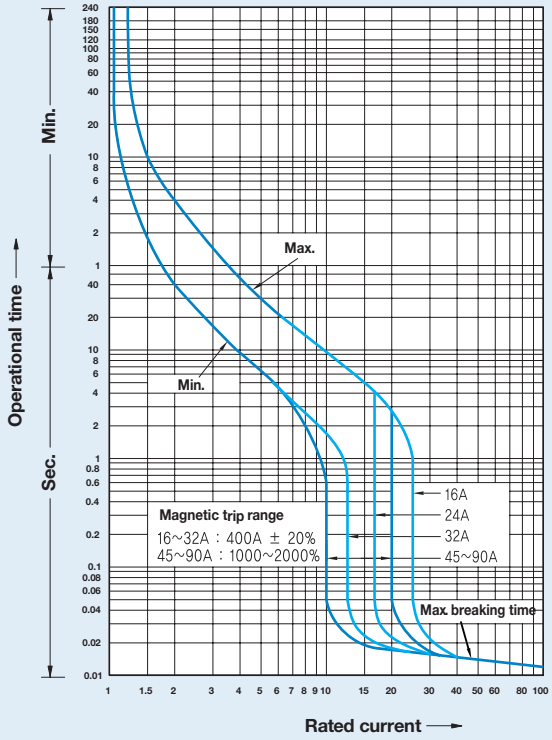


Rated current: 125~225A

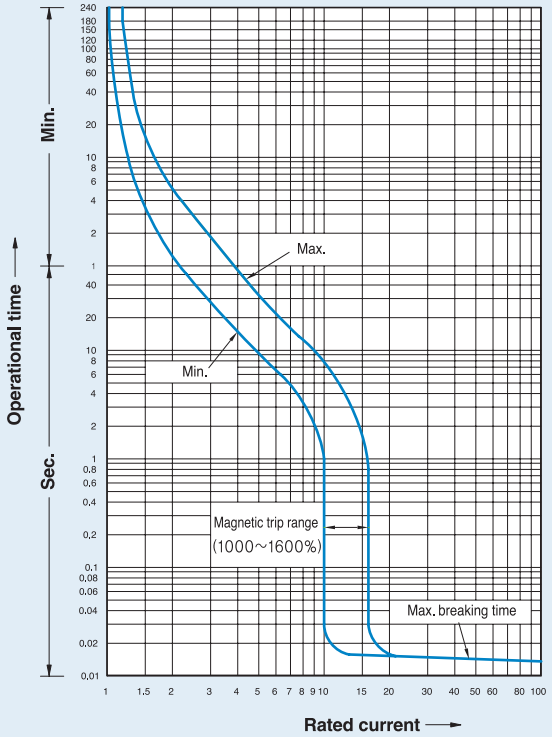


MCCB

ABE30b


(Unit: mm)

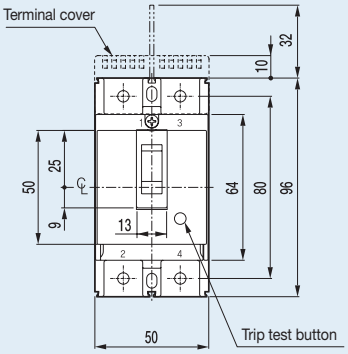


2P

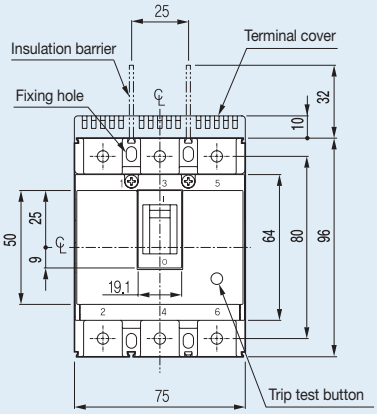


3P

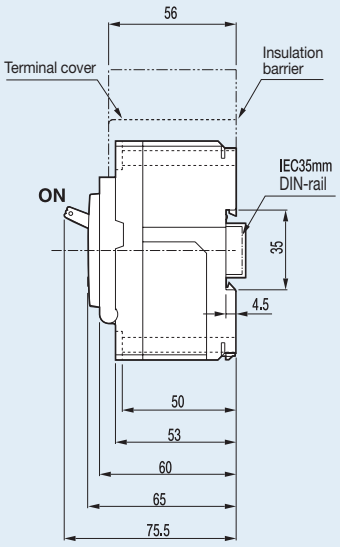


Terminal details

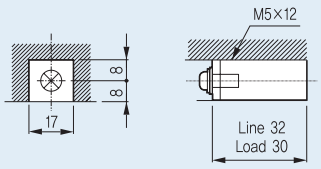


Panel drilling

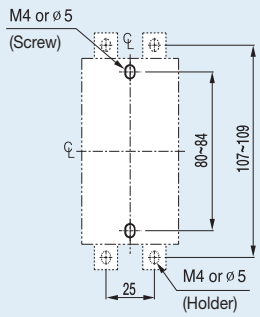


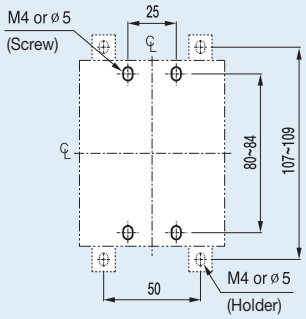

Front panel cutting

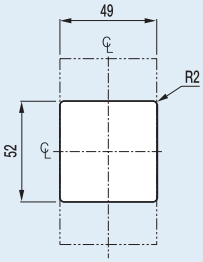

2P

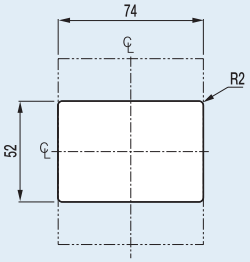

3P


9

Dimensions


MCCB

ABN50c | ABS30c
ABN60c | ABS50c
ABN100c/100e | ABS60c


(Unit: mm)

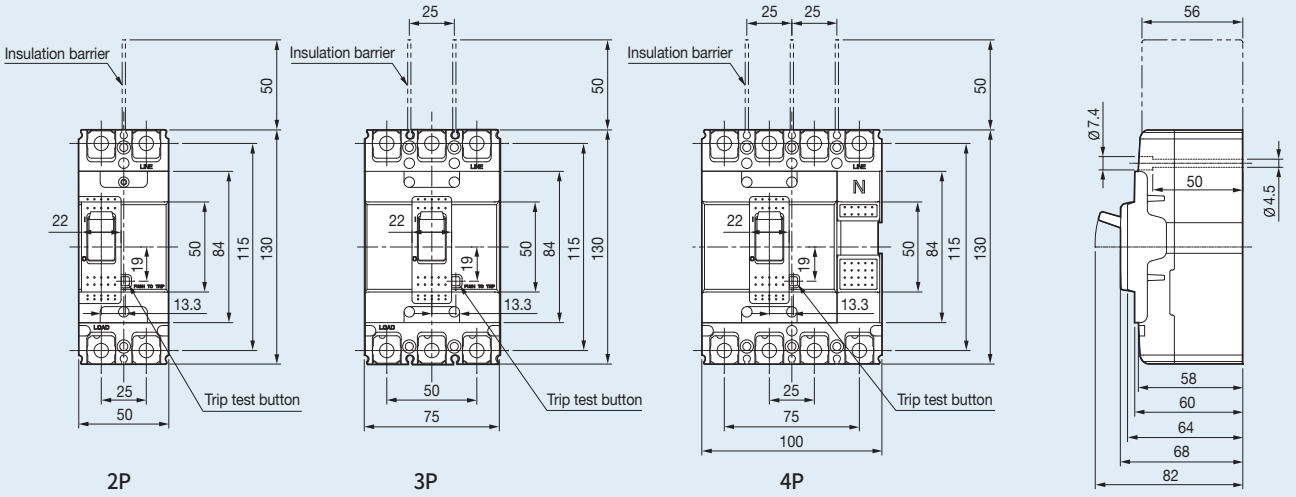

Terminal details

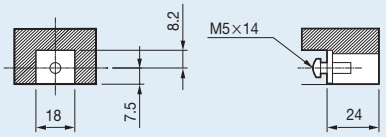


(≤ 50A)

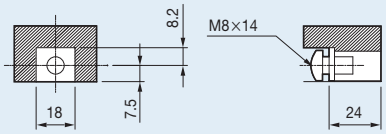


(≥60A)

Connecting

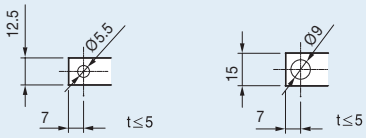


(≤ 50A) (≥60A)

Panel drilling

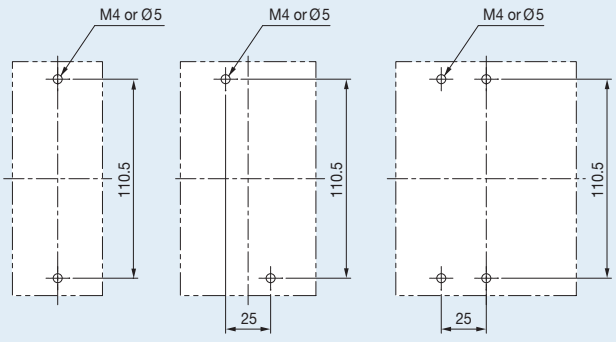


Front panel cutting

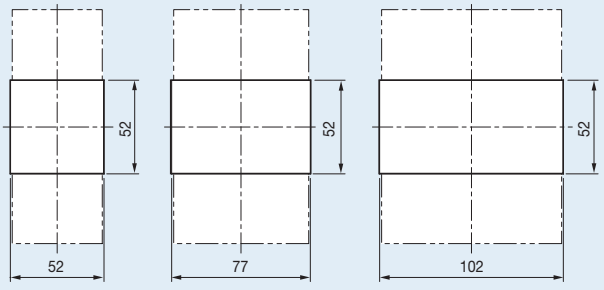


MCCB

ABS125c | ABH50c | ABH125c | ABL125c


(Unit: mm)

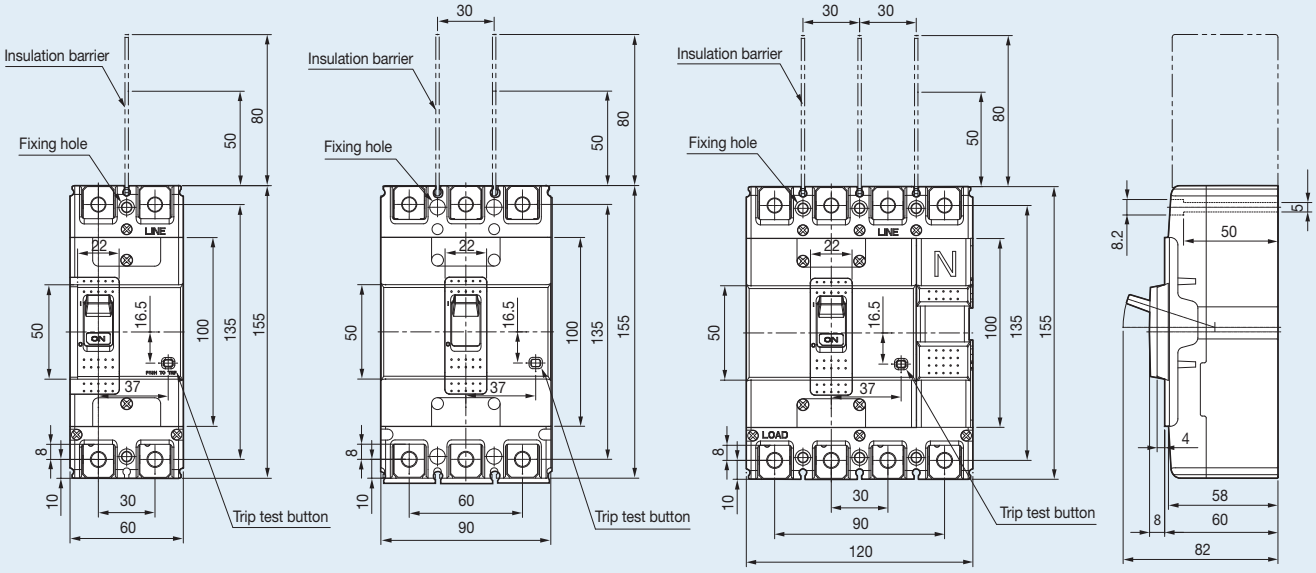


Terminal details

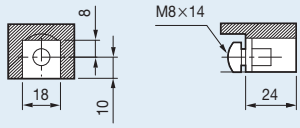


Connecting



Panel drilling

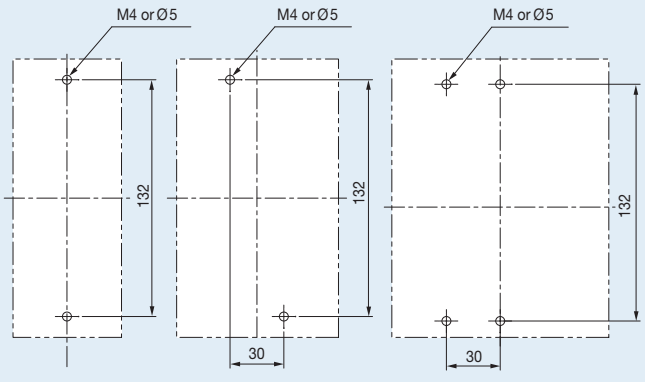

Front panel cutting

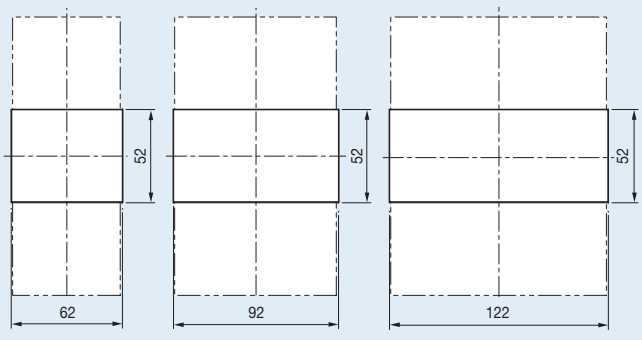


9

Dimensions


MCCB

ABN250c | ABS250c | ABH250c | ABL250c


(Unit: mm)

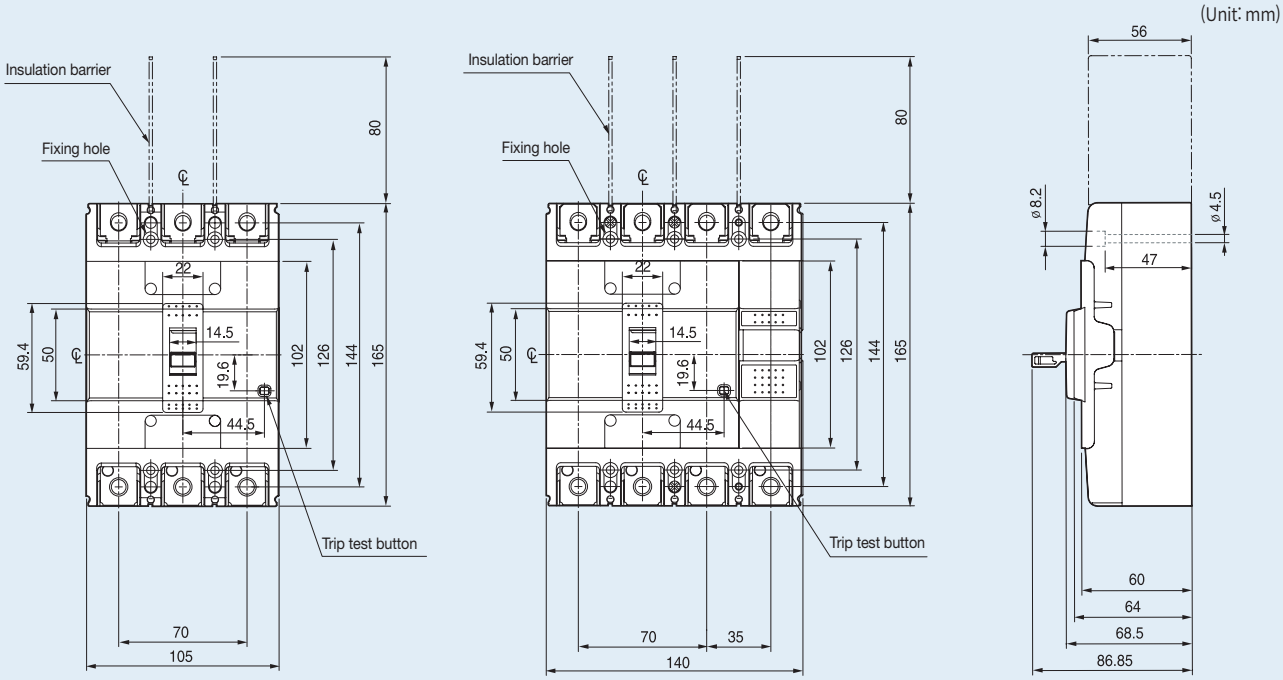


Terminal details




Connecting



Panel drilling

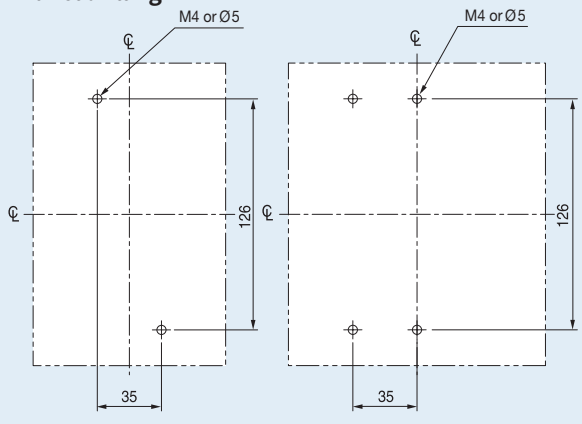


Front panel cutting

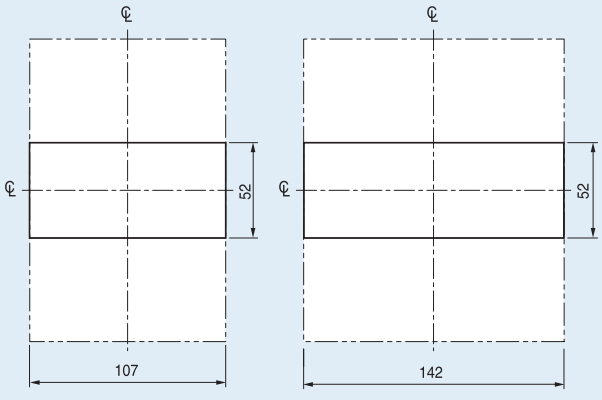


MCCB

ABN400c | ABS400c | ABH400c | ABL400c


(Unit: mm)

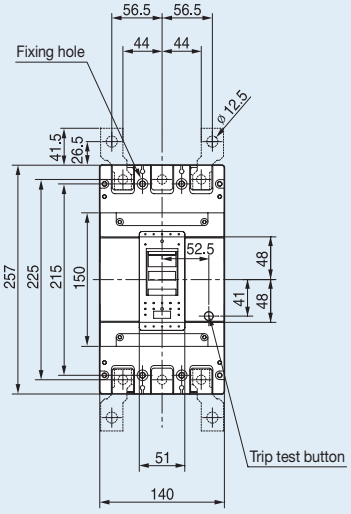


2P

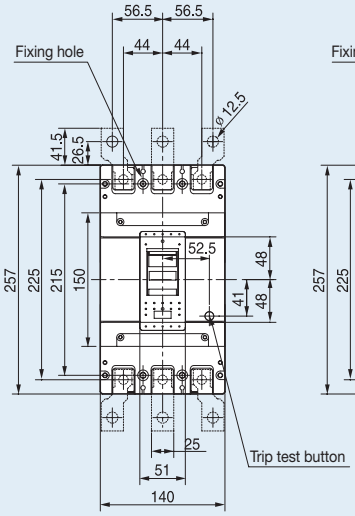


3P

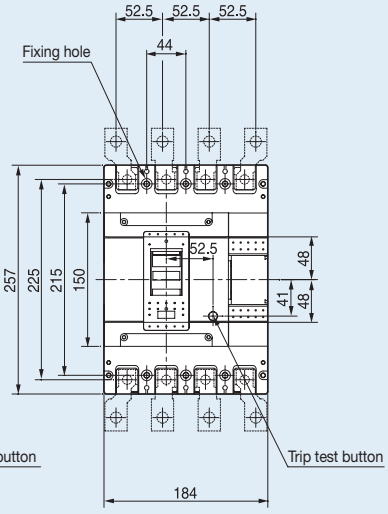


4P

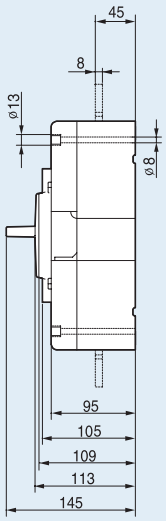


Terminal details



Connecting

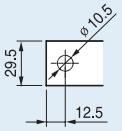


Panel drilling

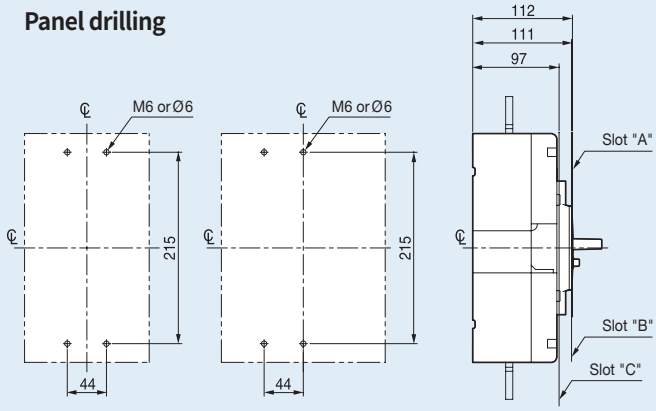

2, 3P | 4P

Front panel cutting

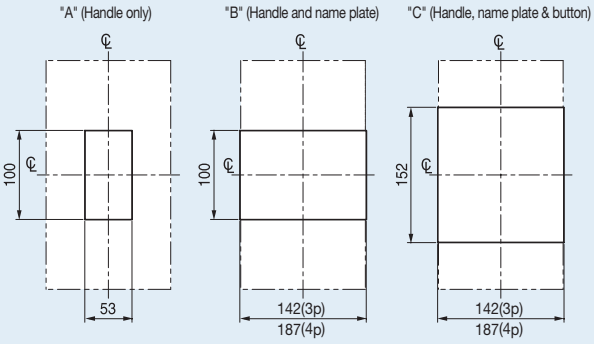

2, 3, 4P | 3, 4P | 3, 4P


9

Dimensions


MCCB

ABN800c | ABS800c | ABL800c


(Unit: mm)

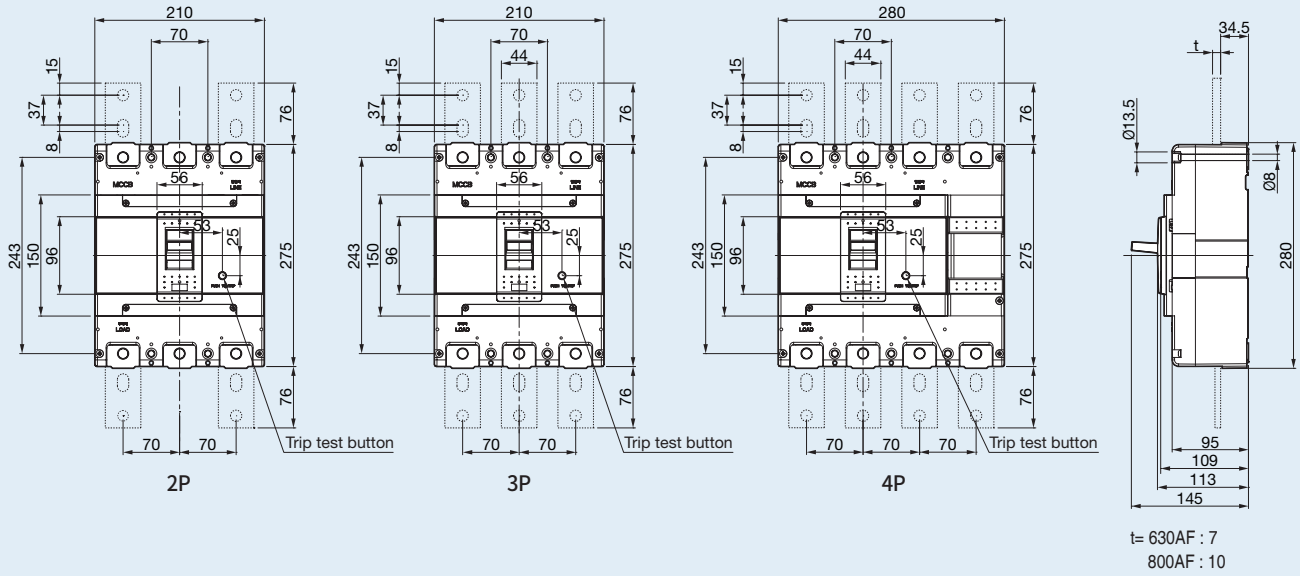


Terminal details




Connecting



Panel drilling

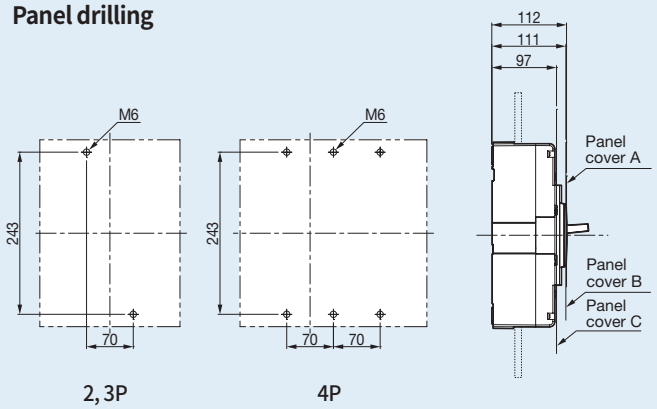


Front panel cutting

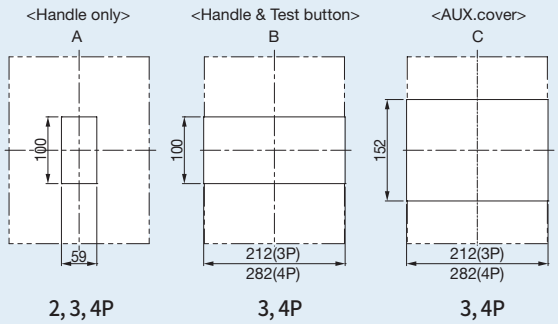


MCCB

ABS1000b ABL1000b
ABS1200b ABL1200b


(Unit: mm)

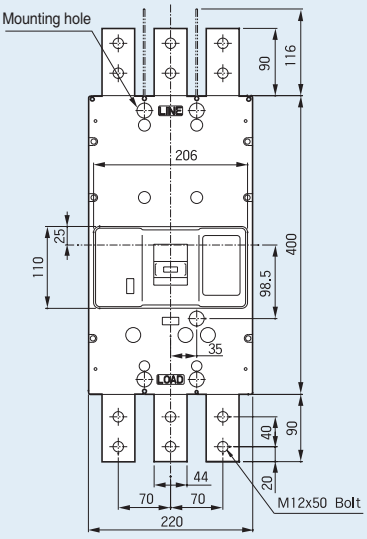


3P

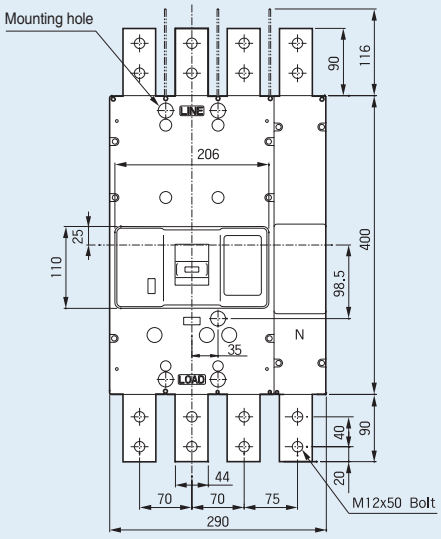


4P

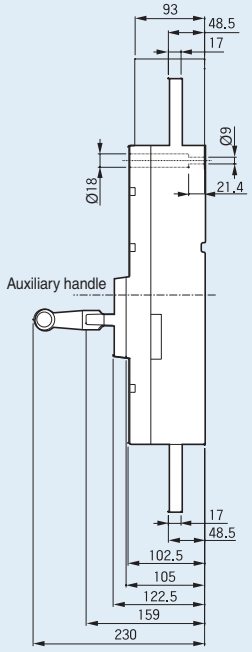

Panel drilling

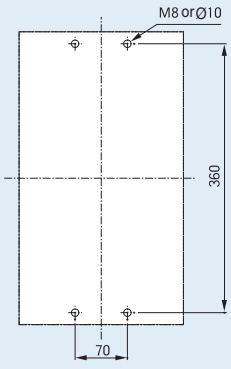


3P

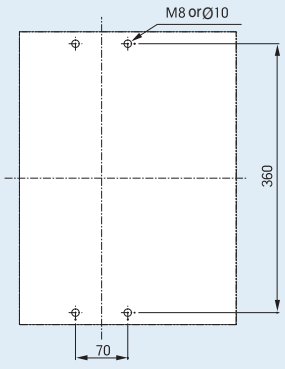


4P

Front panel cutting

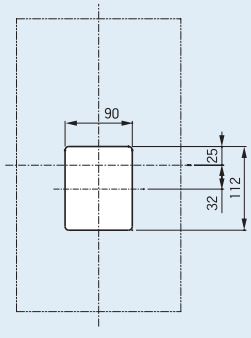

3P

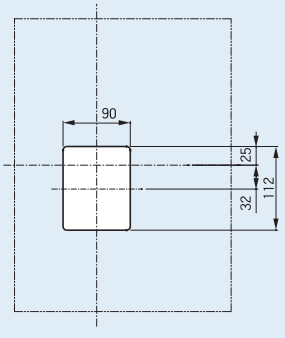

4P


9

Dimensions


MCCB

ABS1203bE


(Unit: mm)

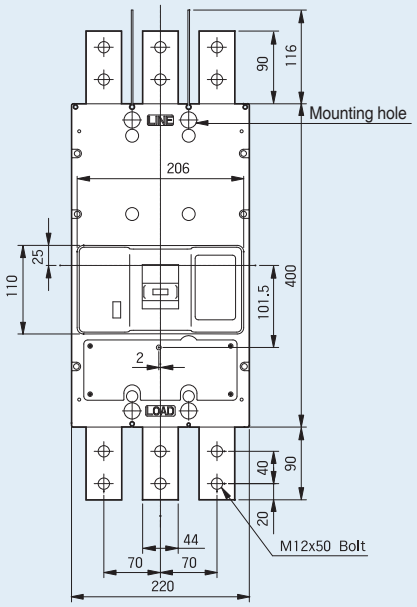

3P

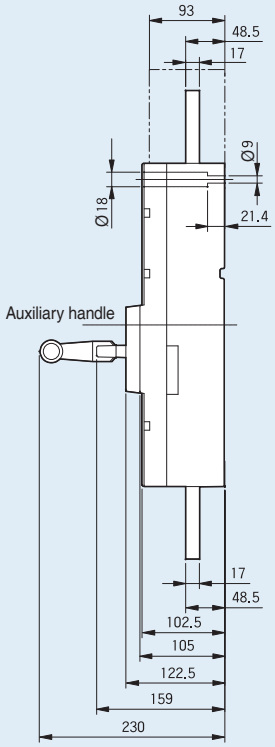


Panel drilling

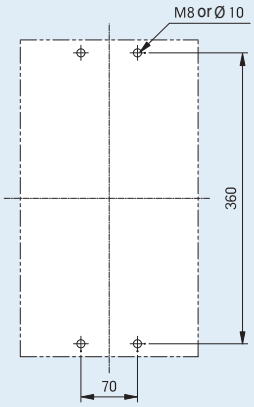

3P

Front panel cutting

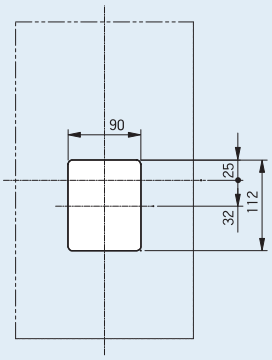



3P

ELCB


EBN50c EBS30c
EBN60c EBS50c
EBN100c EBS60c

(Unit: mm)

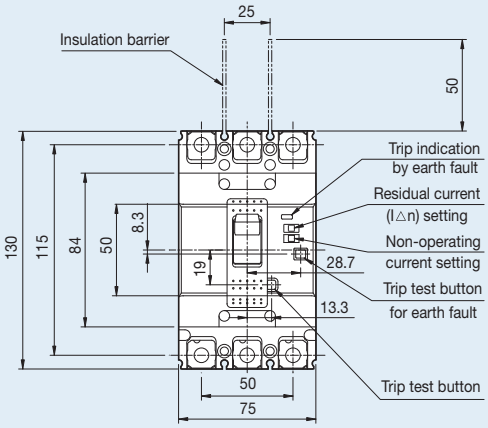


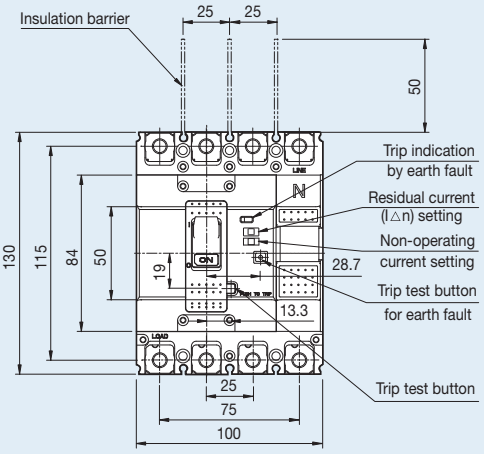


4P

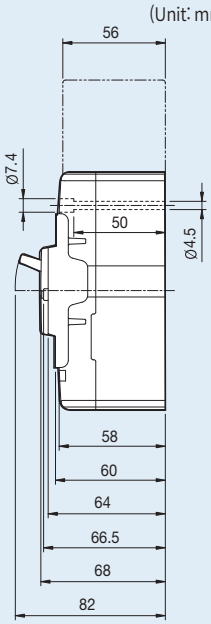

Terminal details

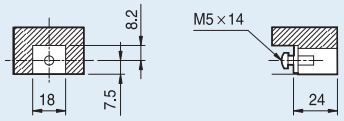


(≤ 50A)

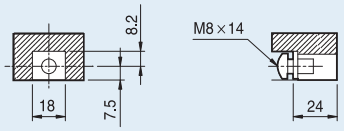


(≥60A)

Connecting




(≤ 50A)




(≥60A)


Panel drilling

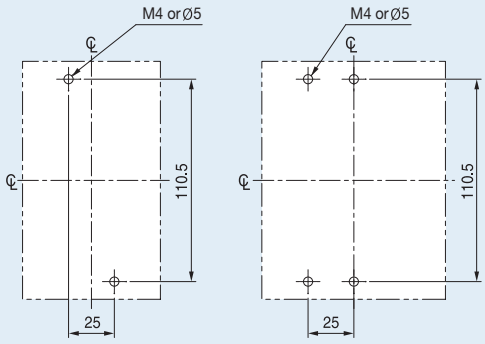


4P

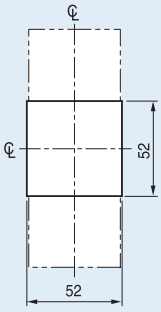

2P

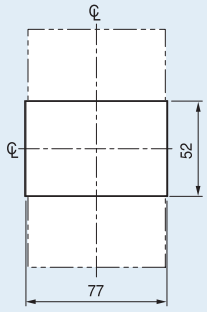

3P

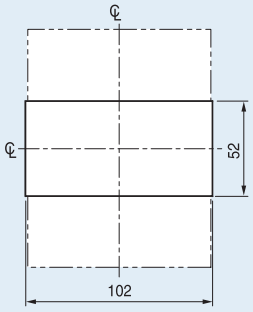

4P

Front panel cutting


9

Dimensions

ELCB


EBS125c | EBH50c | EBH125c

(Unit: mm)

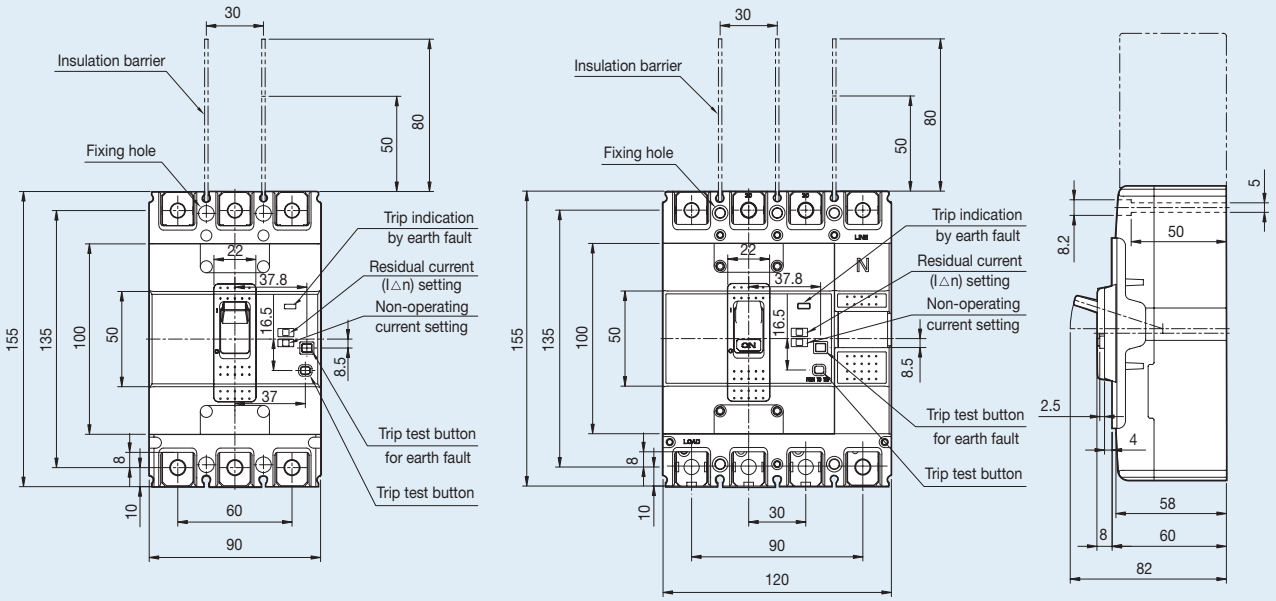


3P 4P


Terminal details

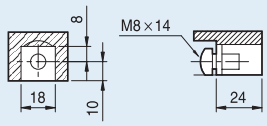

Connecting




Panel drilling

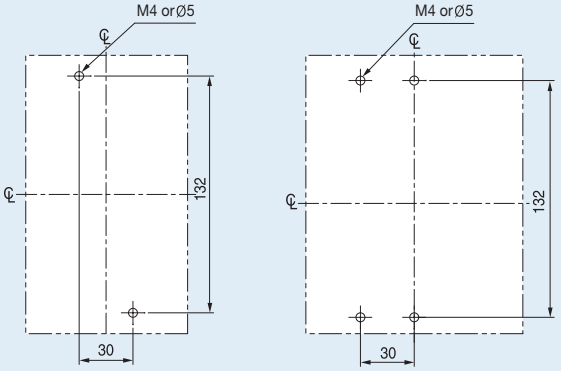

3P 4P

Front panel cutting

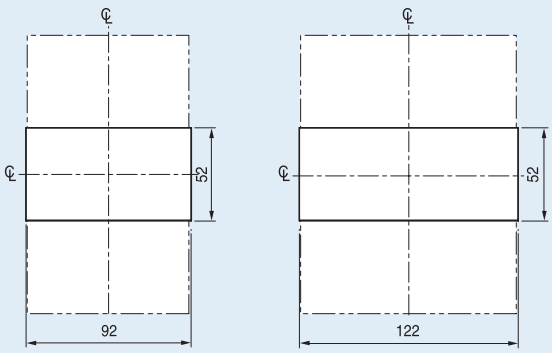


3P 4P


ELCB

EBN250c | EBS250c | EBH250c


(Unit: mm)

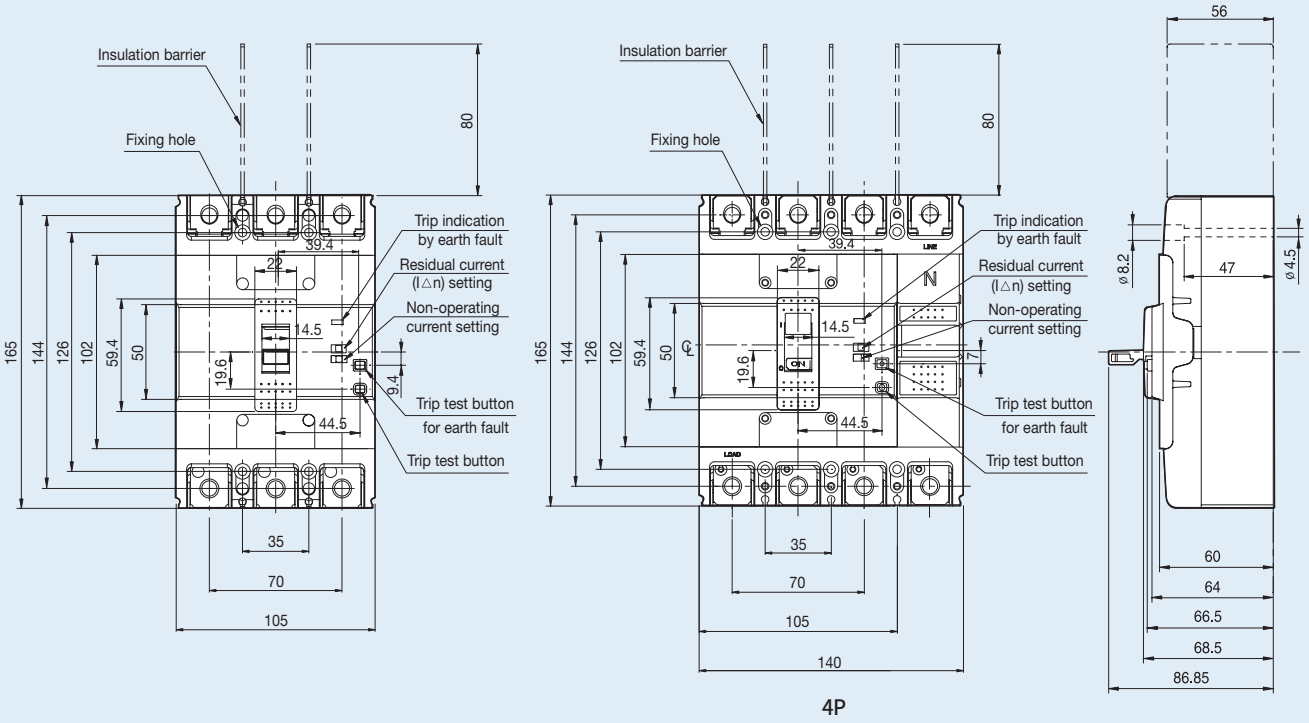


Terminal details




Connecting



Panel drilling

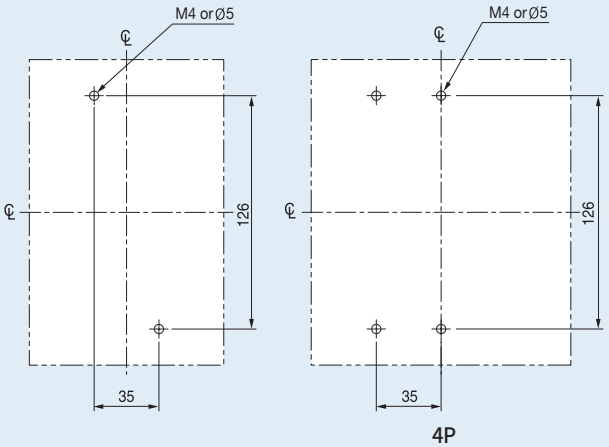

Front panel cutting

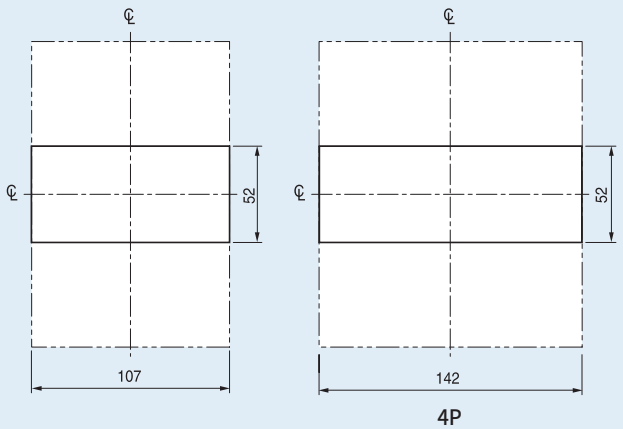


Dimensions


ELCB (Instantaneous type)

EBN400c | EBS400c | EBH400c | EBL400c


(Unit: mm)

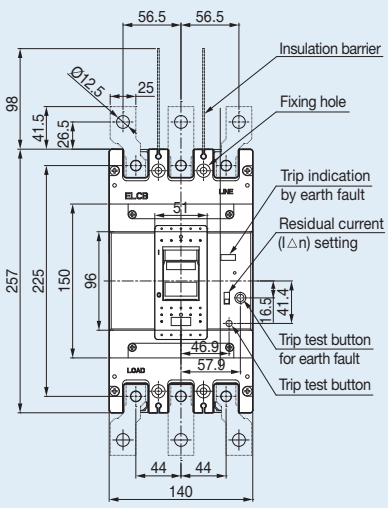


3P

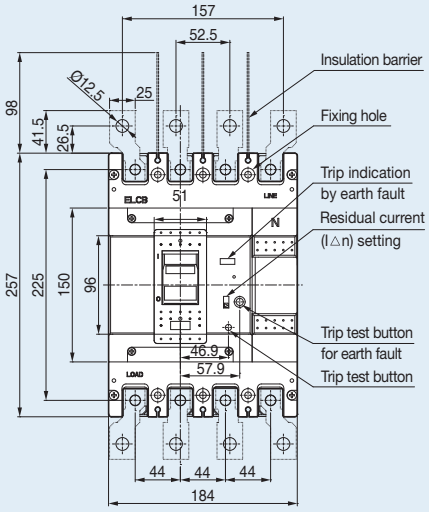


4P

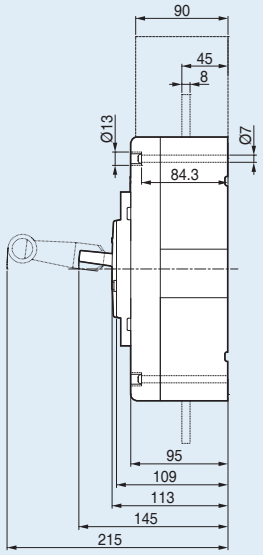


Terminal details

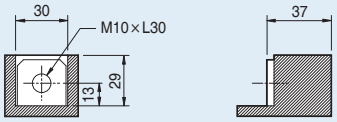

Connecting

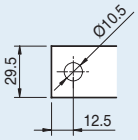


Panel drilling

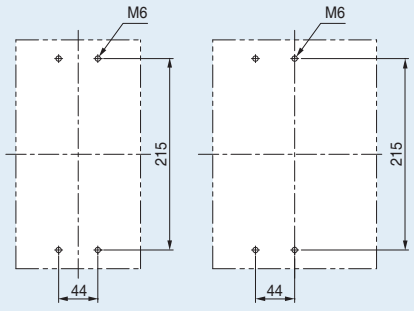


2, 3P

4P

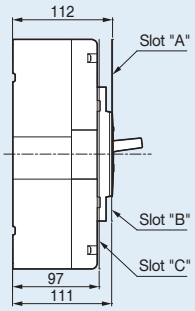

Front panel cutting

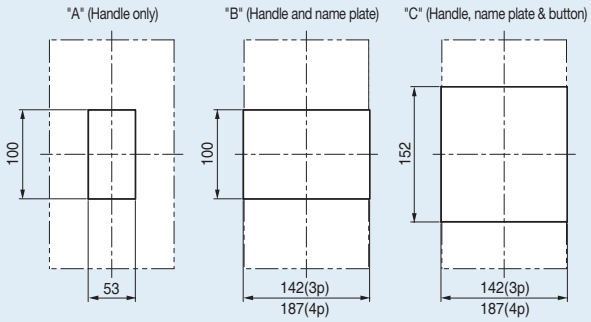

2, 3, 4P


3, 4P

3, 4P


ELCB (Time delay type)

EBN400c | EBS400c | EBH400c | EBL400c


(Unit: mm)

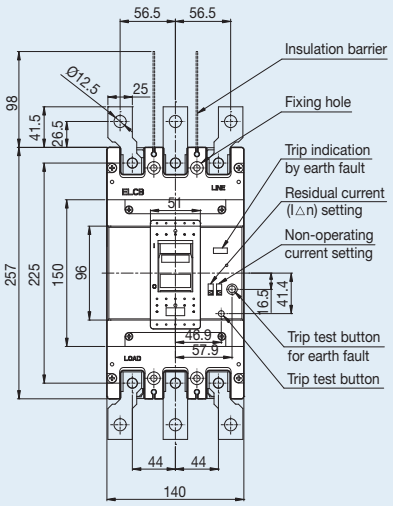


3P

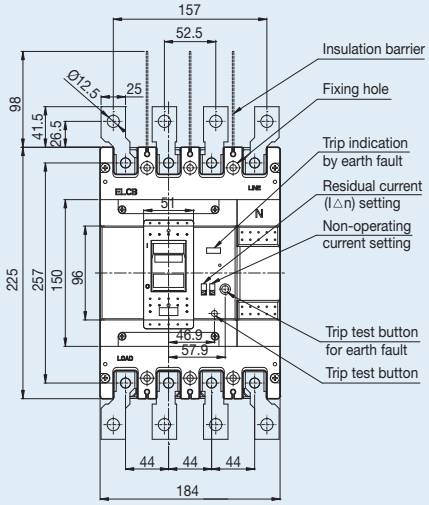


4P

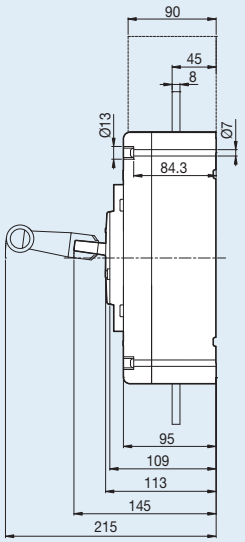


Terminal details

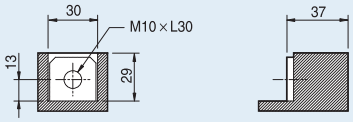

Connecting

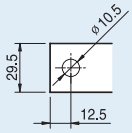


Panel drilling

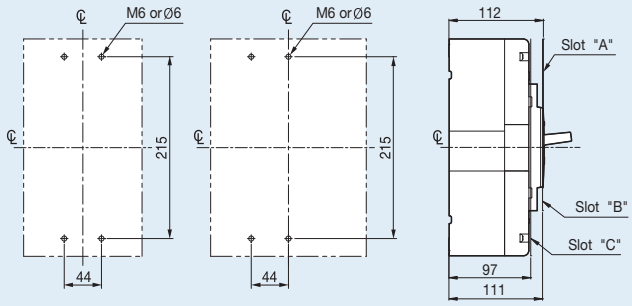

2, 3P | 4P

Front panel cutting

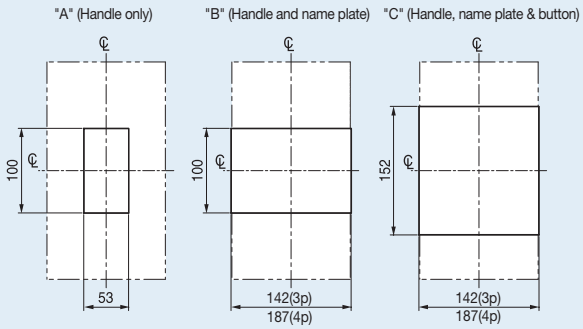

2, 3, 4P | 3, 4P | 3, 4P


9

Dimensions


ELCB (Instantaneous type)

EBN800c | EBS800c | EBL800c


(Unit: mm)

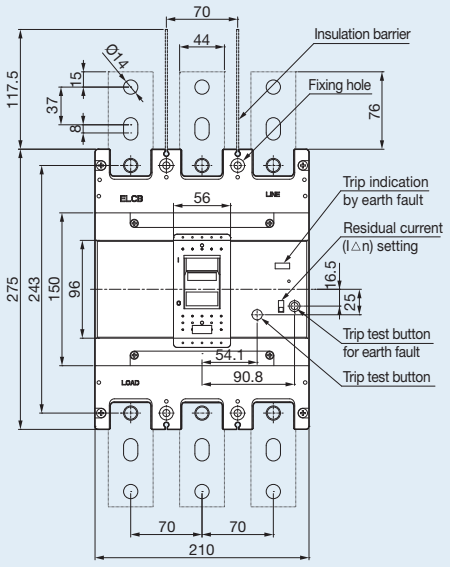

3P

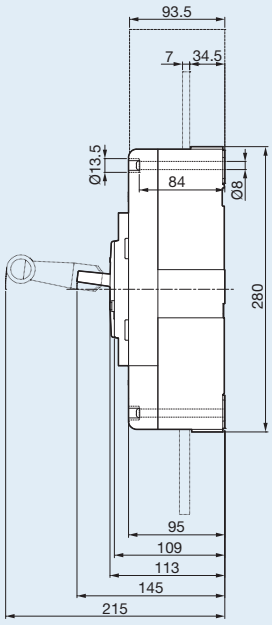


630AF

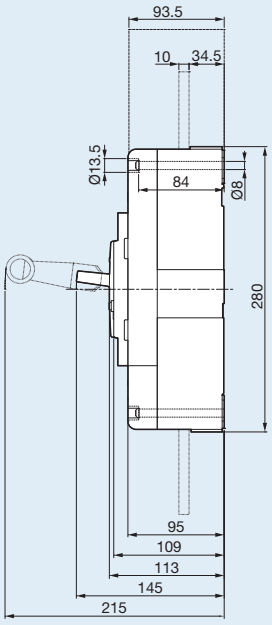


800AF


Terminal details



Connecting

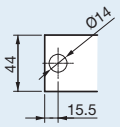


Panel drilling

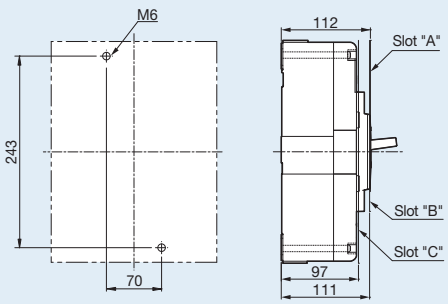

3P


Front panel cutting

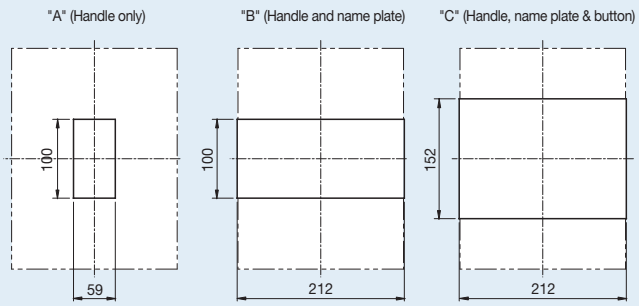


ELCB (Time delay type)

EBN800c | EBS800c | EBL800c


(Unit: mm)

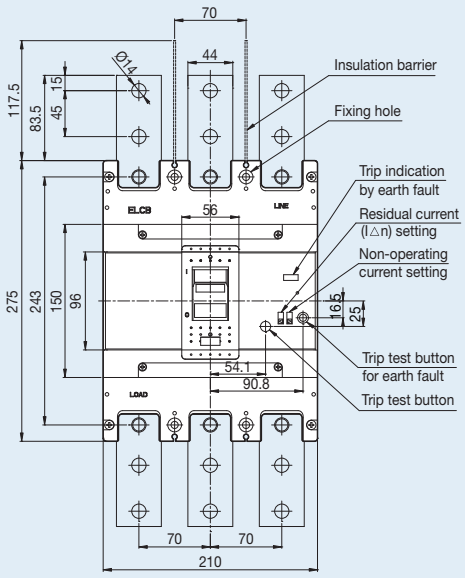

3P

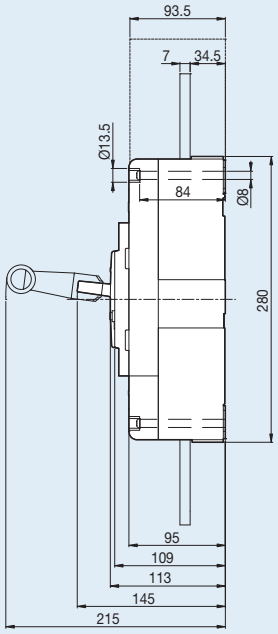


630AF

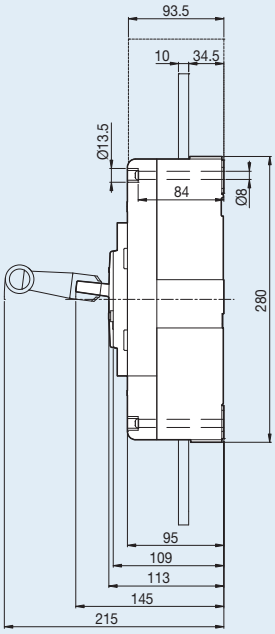


800AF


Terminal details



Connecting




Panel drilling

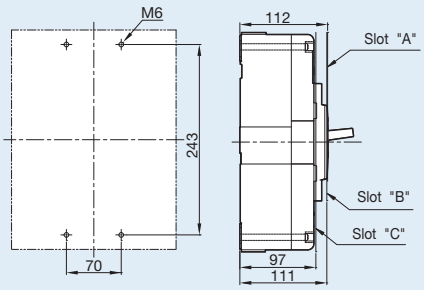

3P

Front panel cutting

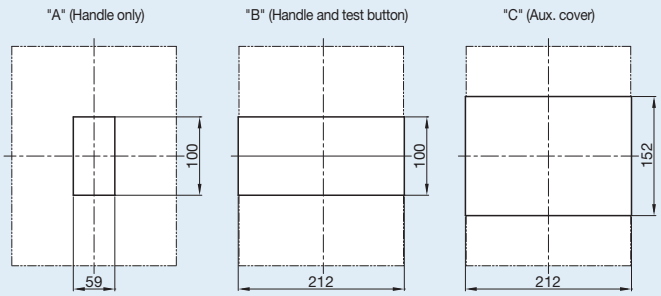


Dimensions


ELCB

EBS1000b
EBS1200b


(Unit: mm)

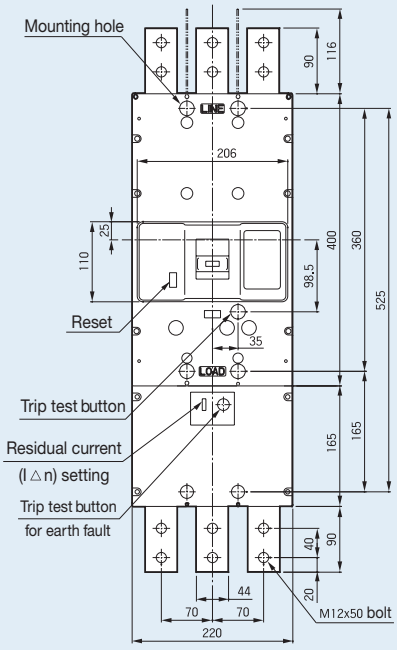

3P

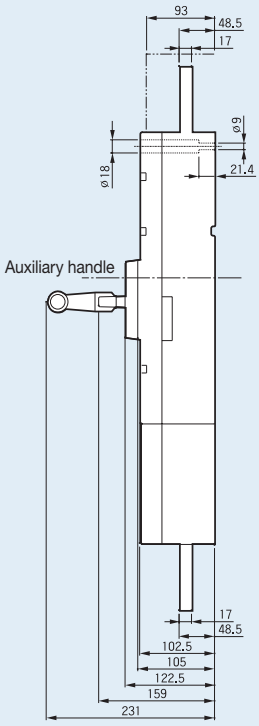


Panel drilling

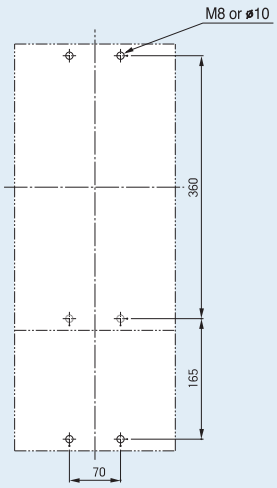

3P


Front panel cutting

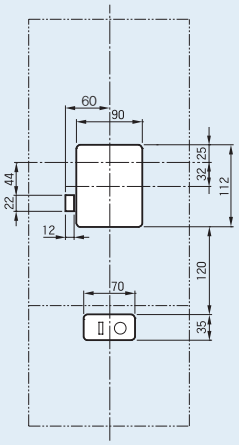

3P


Rear connection terminals

Bar type

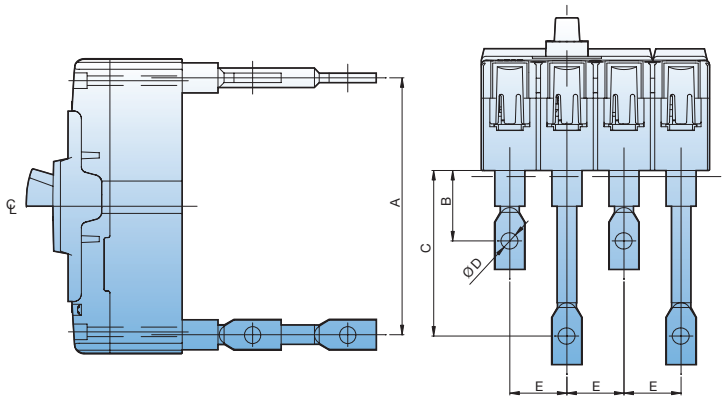

MCCB	A	B	C	D	E
ABN100c	115	37	87	Ø8.5	25
ABH125c	135	37	87	Ø8.5	30
ABH250c	144	57.5	93.5	Ø8.5	35

Round type

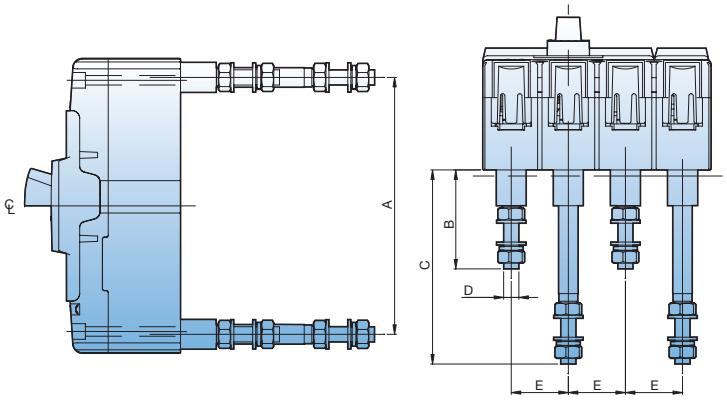


MCCB	A	B	C	D	E
ABN100c 50AF	115	42	92	M6	25
ABN100c 100AF	115	52	102	M8	25
ABH125c	135	52	102	M8	30
ABH250c	144	70	106	M8	35

Dimensions

Rotary handles


Direct mounting type (D-handle, 30~250AF)

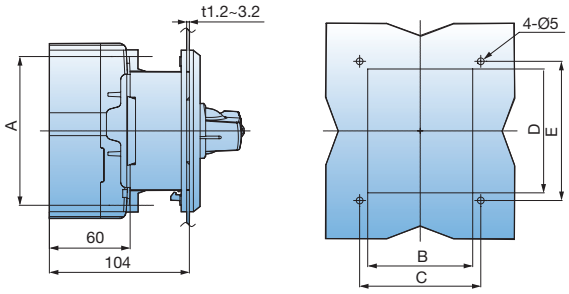

Type	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	Remarks
DH100	110.5	78	90	92	103.4	100AF
DH125	132	94	105	108	120	125AF
DH250	126	108	121	110	122	250AF

Direct mounting type (N-handle, 30~250AF)


N-30c, 40c, 50c

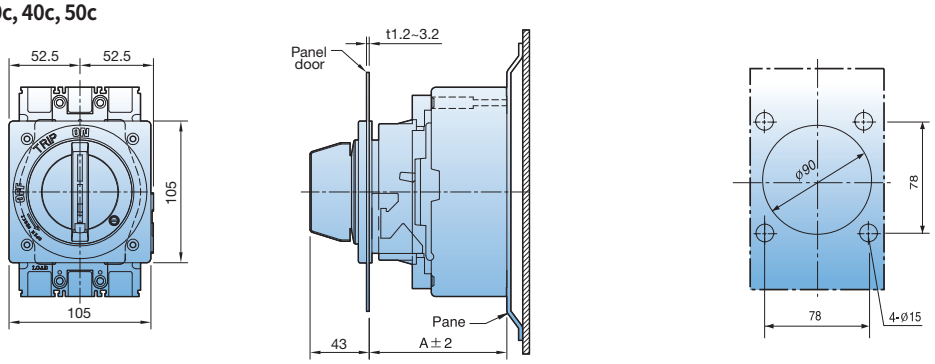

N-handle	N-30c	N-40c	N-50c
Note	100AF	125AF	250AF
A (mm)	103	103	103


Direct mounting type (N-handle, 400~800AF)

N-70, N-80

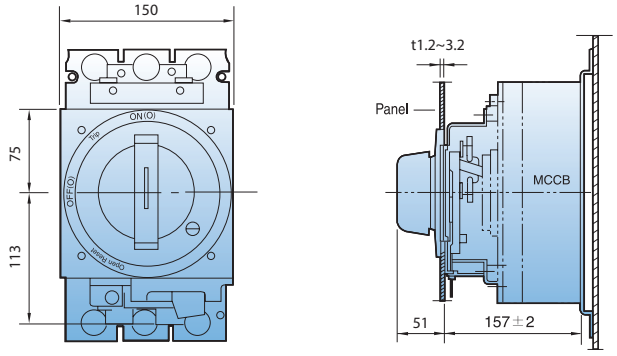

Rotary handles


Extended mounting type (E-handle) (30~250AF)

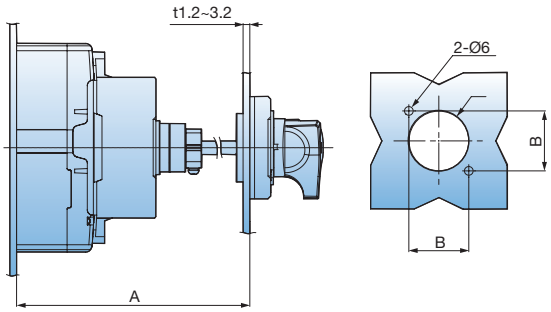


Type	A (mm)	B (mm)	C (mm)	Remarks
EH100	min 150, max 573.5 (Shaft 469mm)	47	Ø53	100AF
EH125	min 150, max 573.5 (Shaft 469mm)	47	Ø53	125AF
EH250	min 150, max 571.5 (Shaft 469mm)	47	Ø53	250AF

Extended mounting type (E-handle, 400~800AF)

E-70U (400AF)

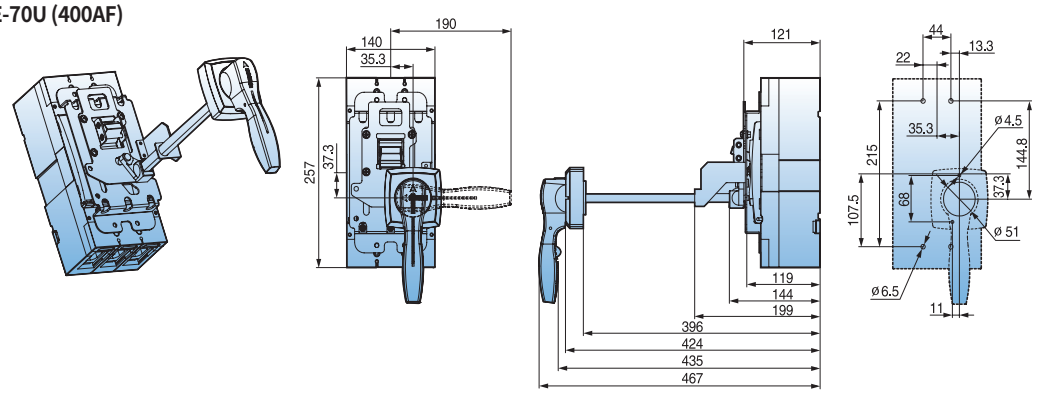


E-80U (800AF)

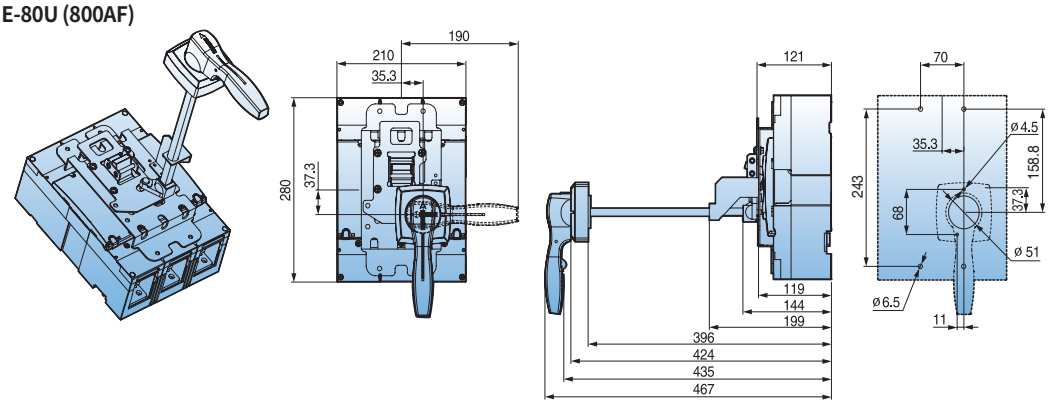


Plug-in MCCB (ABN100c)


Normal type (PB-A3-FR)

(Unit: mm)

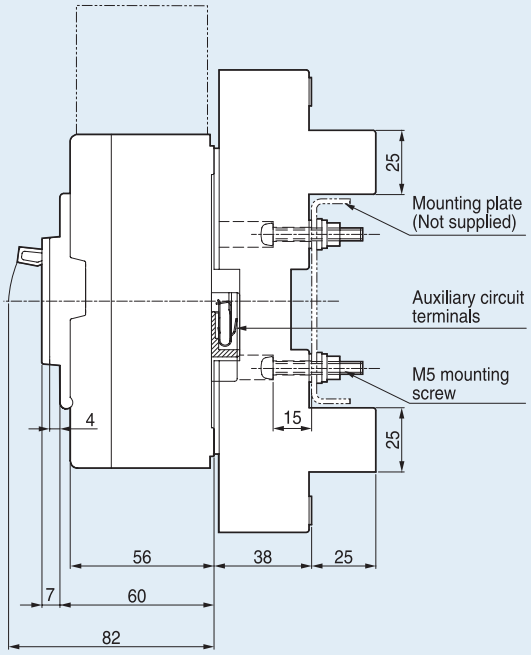


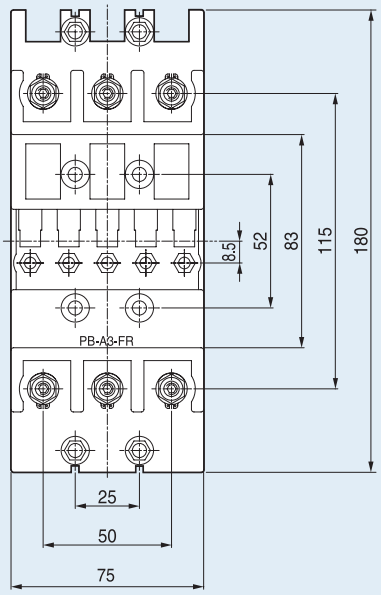


Detail for conductor

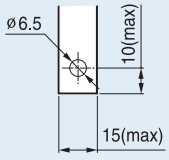

Mounting dimensions

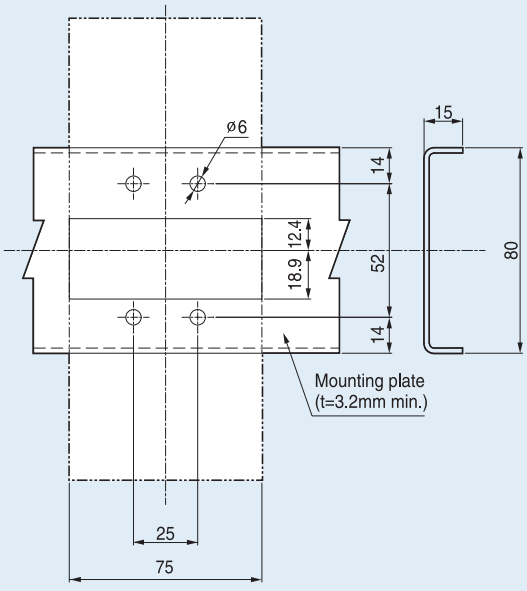


Detail for connection

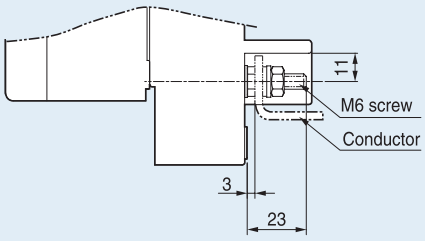


Plug-in MCCB (ABN100c)

Single-row type (PB-A3-1DB)

(Unit: mm)

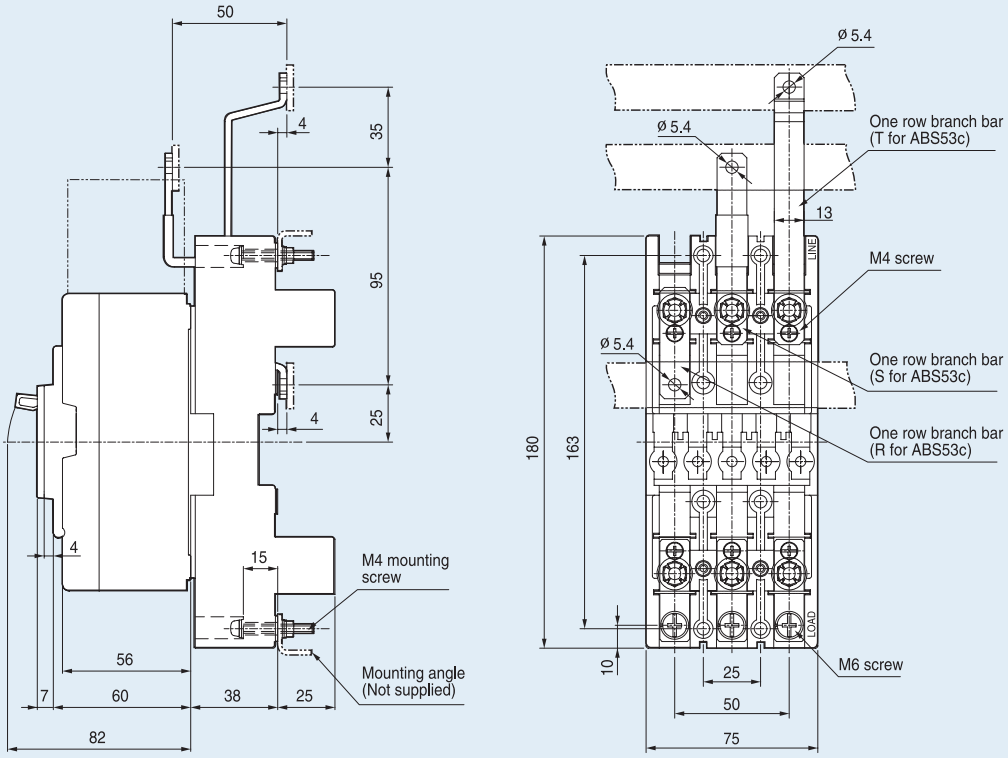


Mounting dimensions

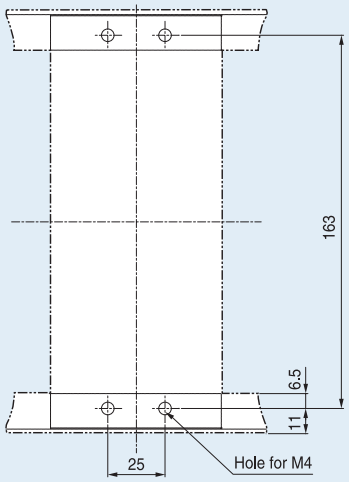


Plug-in MCCB (ABN100c)

Double-row type (PB-A3-2DB)

(Unit: mm)

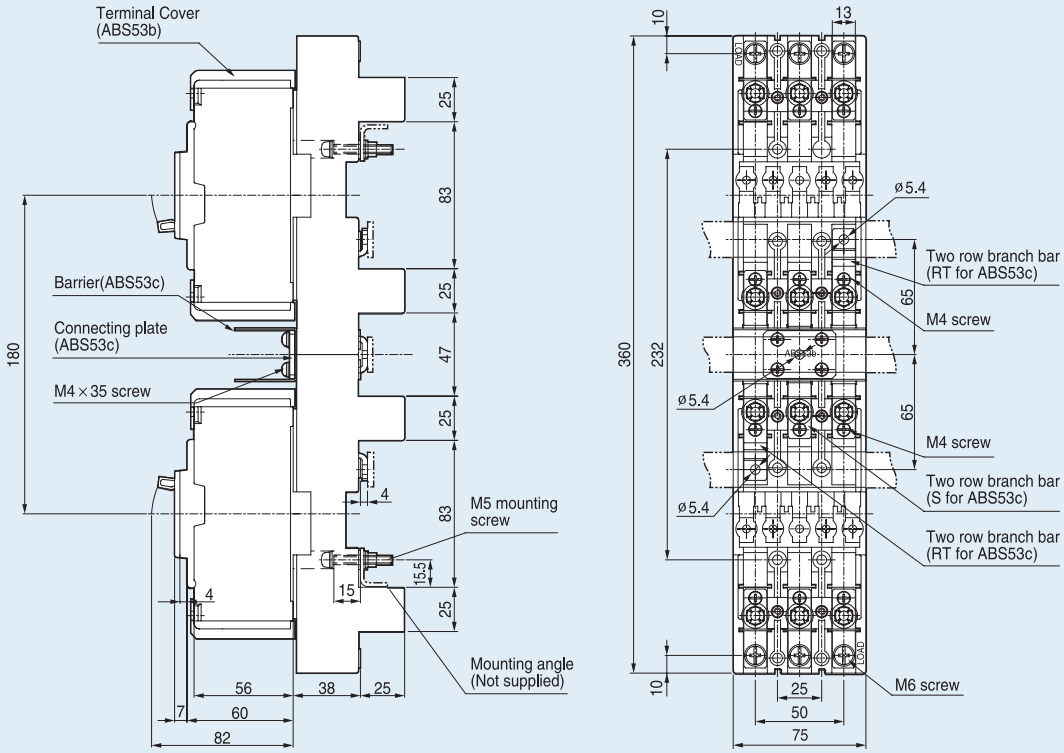


Mounting dimensions

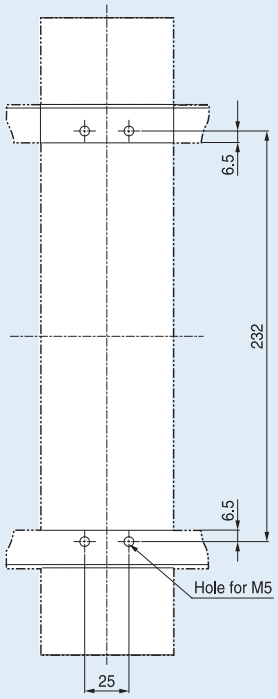


Plug-in MCCB (ABN100c)

Line-only type (PB-A3-FRL)

(Unit: mm)

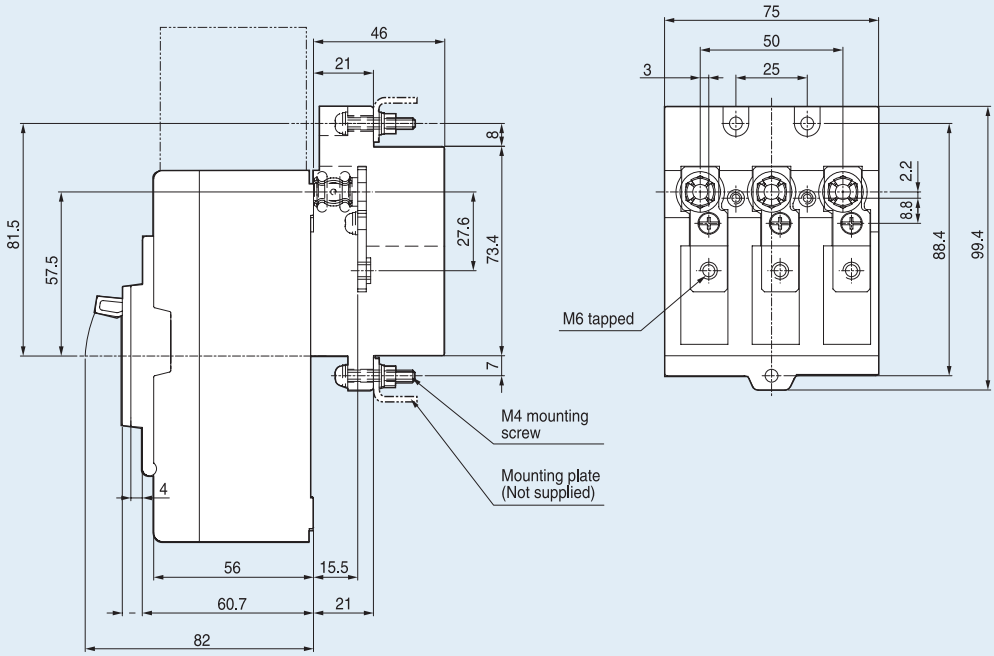


Mounting dimensions

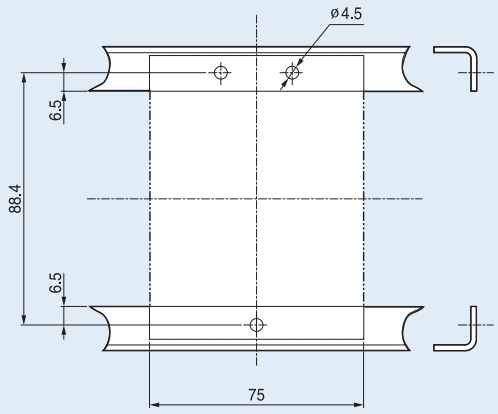


Plug-in MCCB (ABH125c)


Normal type (PB-C3-FR)

(Unit: mm)

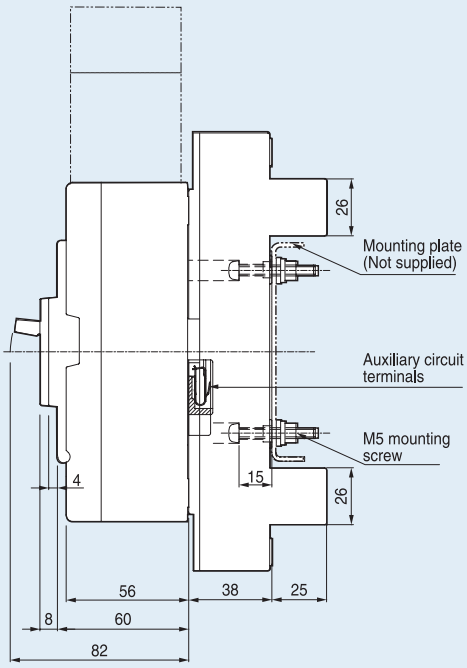


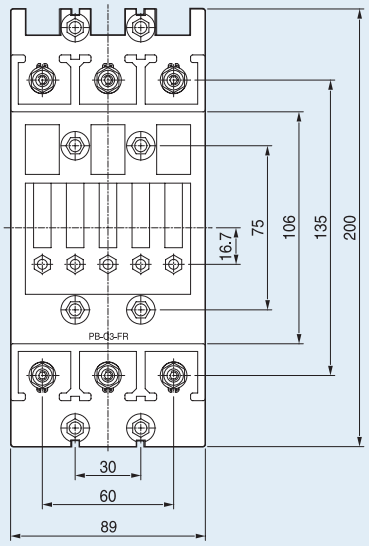


Detailed conductor

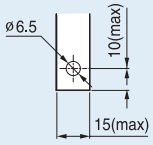

Detailed connection

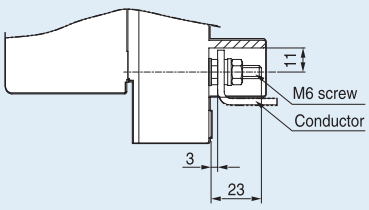


Mounting dimensions

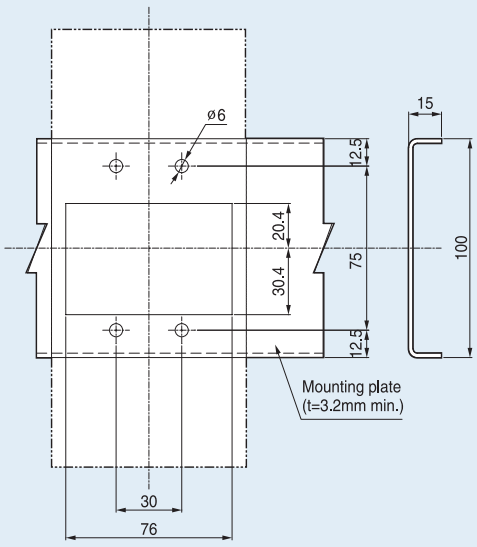


Plug-in MCCB (ABH125c)

Single-row type (PB-C3-1DB)

(Unit: mm)

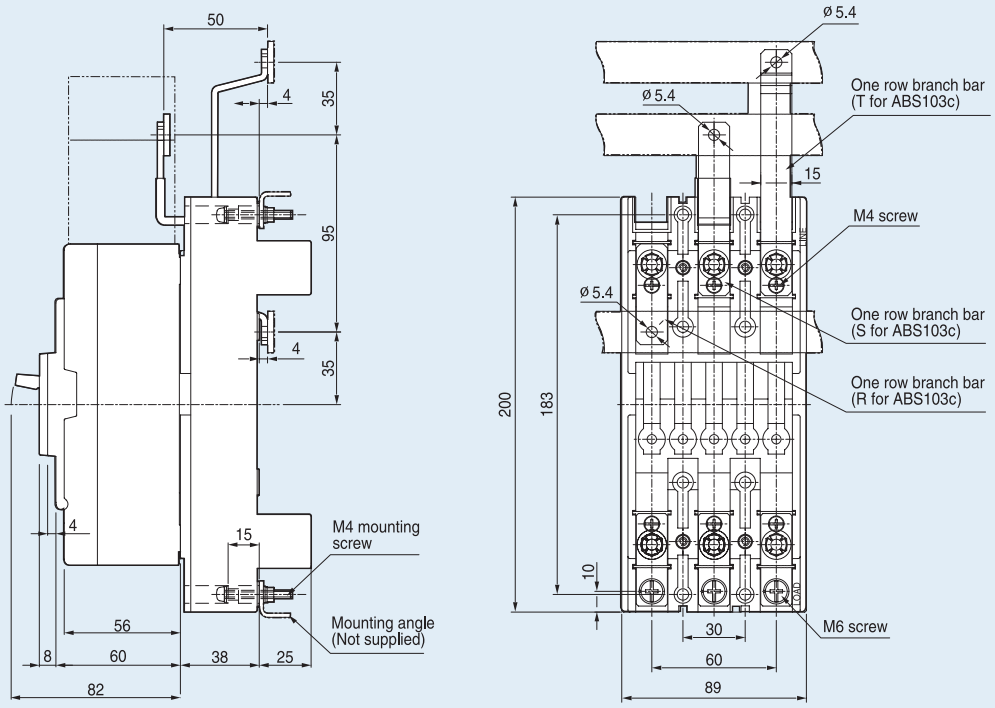


Mounting dimensions

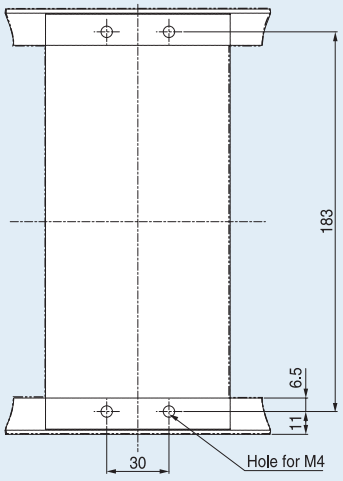


Plug-in MCCB (ABH125c)

Double-row type (PB-C3-2DB)

(Unit: mm)

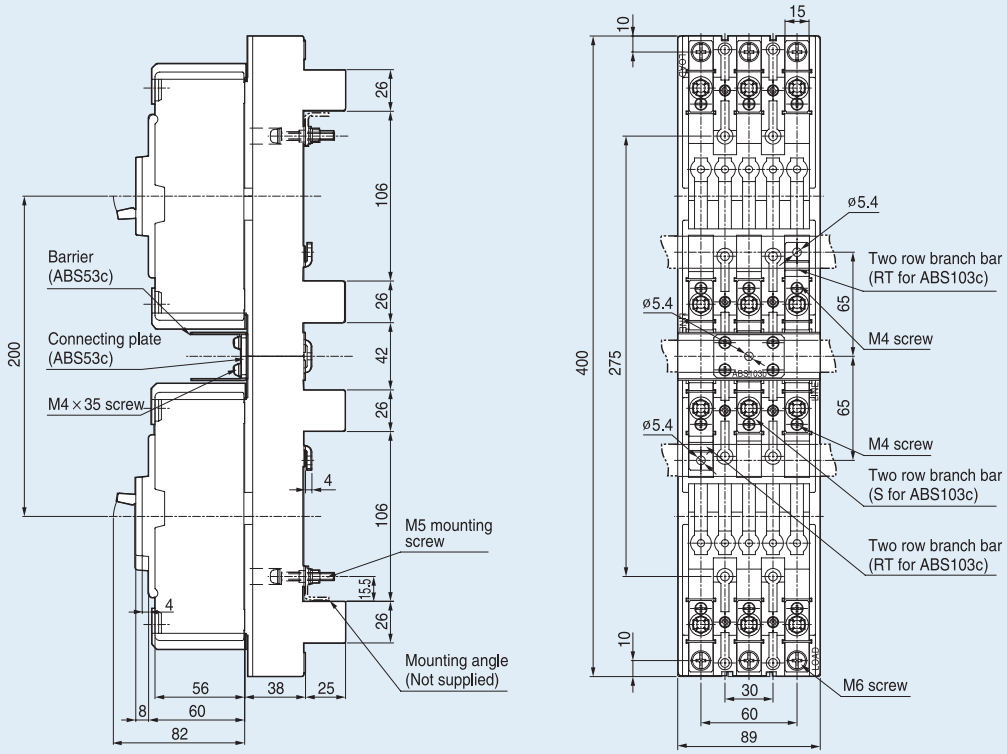


Mounting dimensions

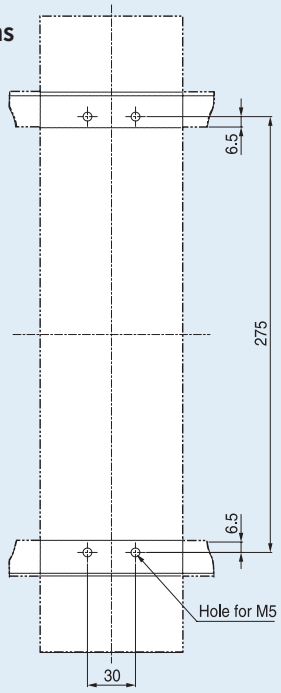


Plug-in MCCB (ABH125c)

Line-only type (PB-C3-FRL)

(Unit: mm)

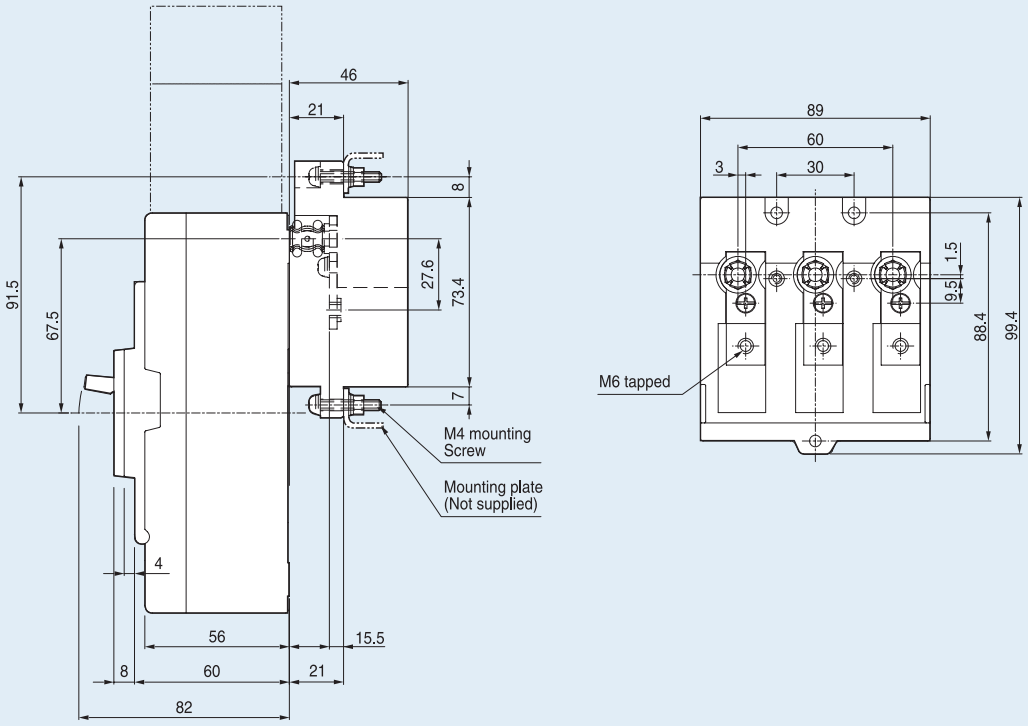


Mounting dimensions

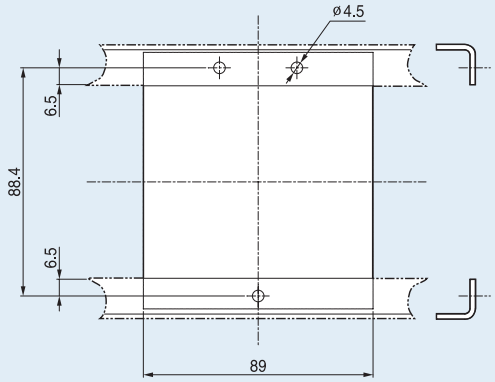


Plug-in MCCB (ABH250c, 400AF)


Normal type (PB-D3-FR/FRL)

(Unit: mm)

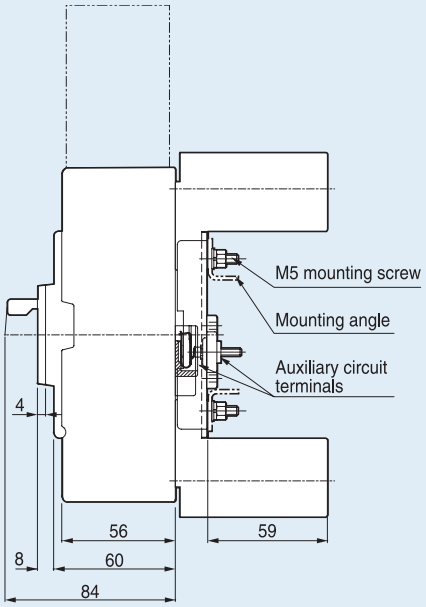


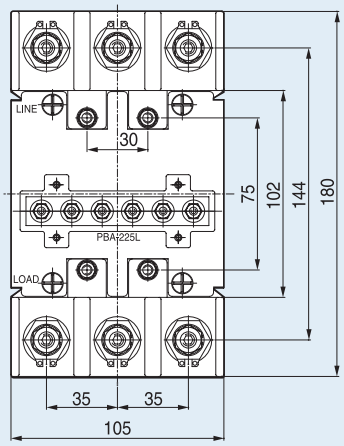


Detail for connection

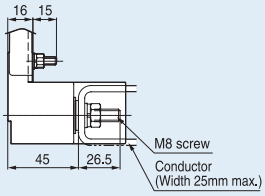


Mounting dimensions

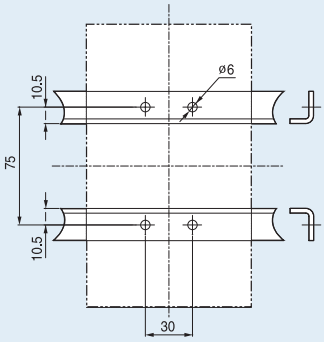

PB-D3-FRL

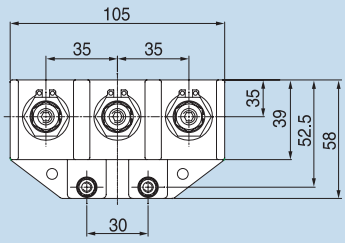


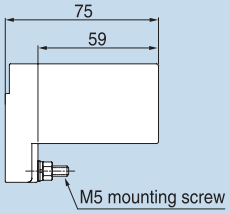


Plug-in MCCB (400AF)


Normal type (PB-I3-FR/FRL)

(Unit: mm)

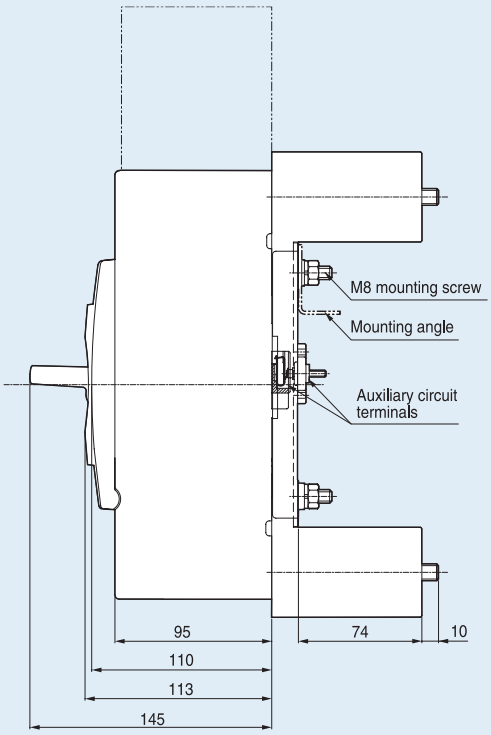


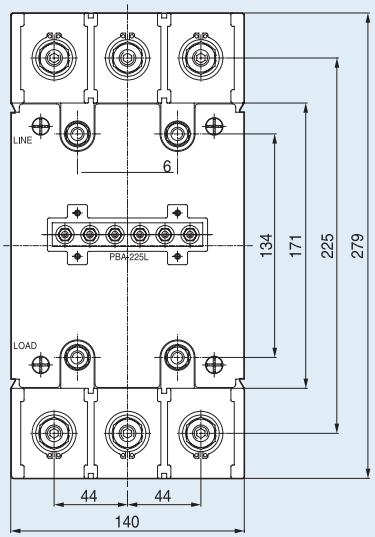


Detail for connection

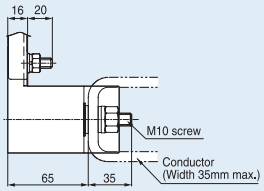


Mounting dimensions

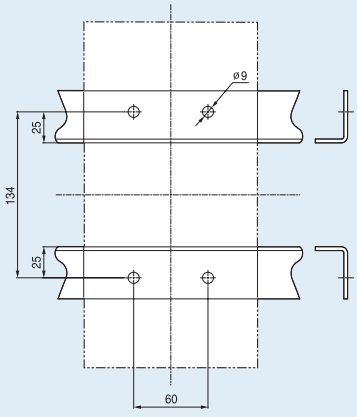

PB-I3-FRL

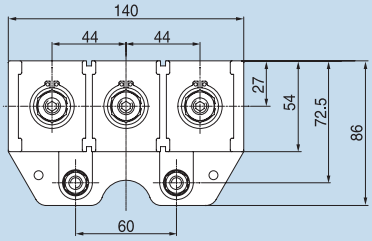


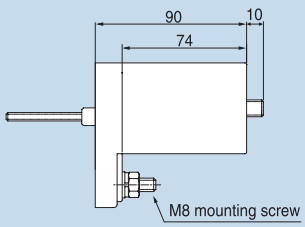


Plug-in MCCB (800AF)


Normal type (PB-J3-FR)

(Unit: mm)

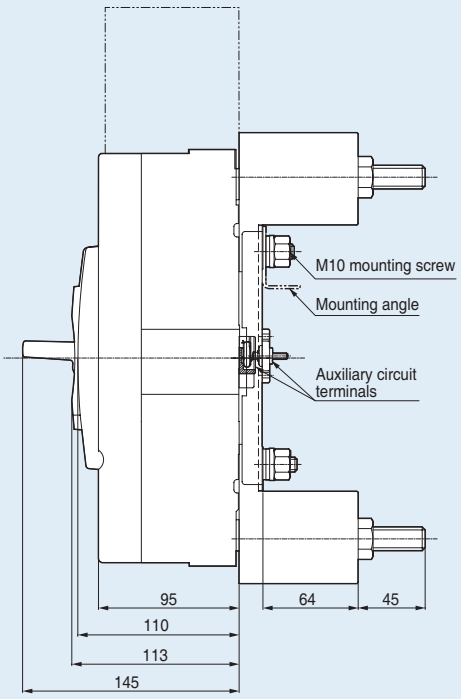


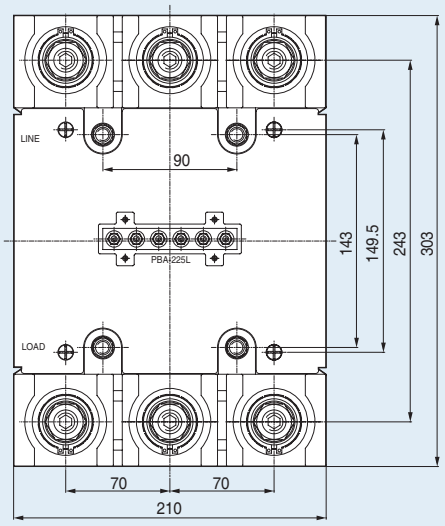


Mounting dimensions

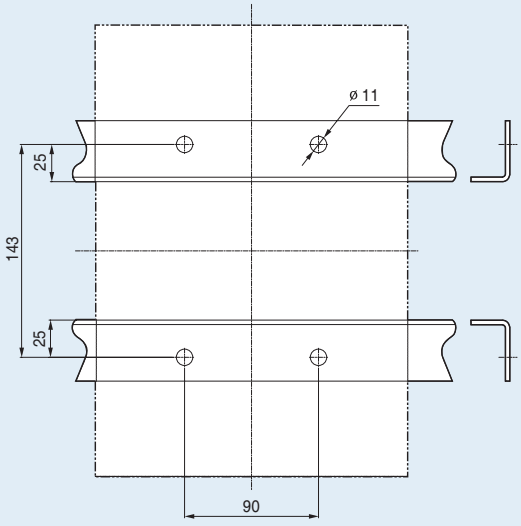

Detail for connection

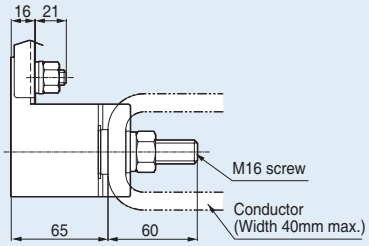

Remote operation

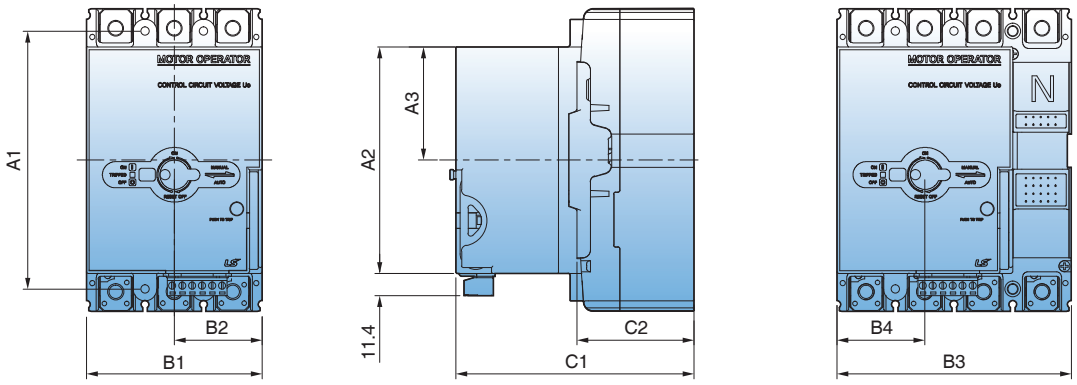

	A1	A2	A3	B1	B2	B3	B4	C1	C2
MOP-M1	110.5	102	51	75	37.5	100	37.5	128	60
MOP-M2	132	116	58	90	45	120	45	122	60
MOP-M3	126	116	55	105	52.5	140	52.5	125	60
MOP-M4	215	176	88	140	70	184	70	198	109
MOP-M5	243	176	88	210	105	280	105	198	109
MOP-M6	322.5	176	65.5	220	110	289	110	210	105

Dimensions

Standard accessories

The following accessories for mounting, connection and insulation are standard items and are packed with Metasol series circuit breakers.












Item	100AF	125AF	250AF	400AF	800AF
Fixing screw					
	2P: 2EA (M4×60) 3P: 2EA (M4×60) 4P: 4EA (M4×60)	2P: 2EA (M4×60) 3P: 2EA (M4×60) 4P: 4EA (M4×60)	2P: 2EA (M4×55) 3P: 2EA (M4×55) 4P: 4EA (M4×55)	2P: 4EA (M6×100) 3P: 4EA (M6×100) 4P: 4EA (M6×100)	2P: 4EA (M6×100) 3P: 4EA (M6×100) 4P: 4EA (M6×100)
Terminal bolt					
	3~50A 2P: 4EA (M5×14) 3P: 6EA (M5×14) 4P: 8EA (M5×14) **60~100A** 2P: 4EA (M8×14) 3P: 6EA (M8×14) 4P: 8EA (M8×14)	2P: 4EA (M8×14) 3P: 6EA (M8×14) 4P: 8EA (M8×14)	2P: 4EA (M8×20) 3P: 6EA (M8×20) 4P: 8EA (M8×20)	2P: 4EA (M10×30) 3P: 6EA (M10×30) 4P: 8EA (M10×30)	2P: 4EA (M12×35) 3P: 6EA (M12×35) 4P: 8EA (M12×35)
Insulation barrier					
	2P: 1EA 3P: 2EA 4P: 3EA	2P: 1EA 3P: 2EA 4P: 3EA	2P: 1EA 3P: 2EA 4P: 3EA	2P: 1EA 3P: 2EA 4P: 3EA	2P: 1EA 3P: 2EA 4P: 3EA

Fixing screws for rotary handles







Handle type	N-30c	N-40c	N-50c	N-70	N-80
Applied MCCB	ABN 50c/60c/100c ABS 30c/50c/60c ABN100e	ABS 125c ABH 50c ABH 125c ABL 125c	ABN 250c ABS 250c ABH 250c ABL 250c	ABN 400c ABS 400c ABH 400c ABL 400c	ABN 800c ABS 800c ABL 800c
Applied ELCB	EBN 50c/60c/100c EBS 30c/50c/60c	EBS 125c EBH 50c EBH 125c	EBN 250c EBS 250c EBH 250c	EBN 400c EBS 400c EBH 400c EBL 400c	EBN 800c EBS 800c EBL 800c
Fixing screw (short)	-	-	-	M6×16	M6×16
Fixing screw (long)	M4×85	M4×85	M4×85	M6×110	M6×110

Handle type	DH/EH100	DH/EH125	DH/EH250
Fixing screw	M4×70	M4×70	M4×70


Connection

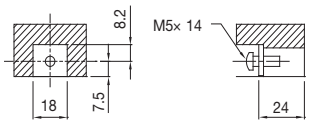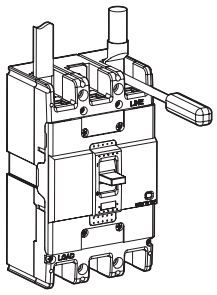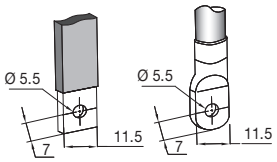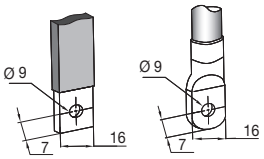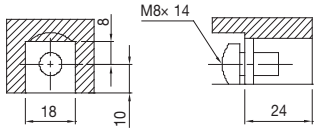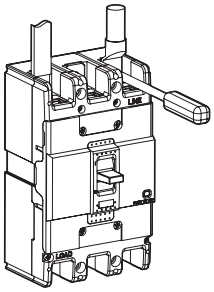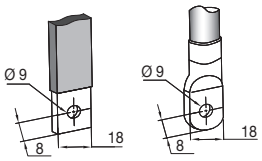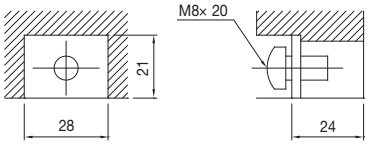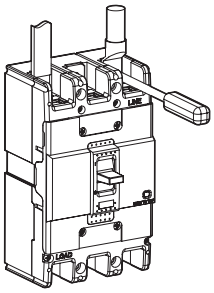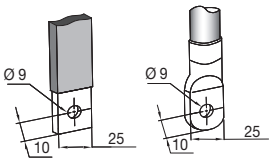MCCB	Terminal (mm)	Tightening torque (kgf·cm)	Conductor (mm)
100AF	[3~50A]  [60~100A] 	M5: 23 ~ 28 M8: 55 ~ 75 	[3~50A]  [60~100A] 
125AF		M8: 55 ~ 75 	
250AF		M8: 80 ~ 130 	

Connection

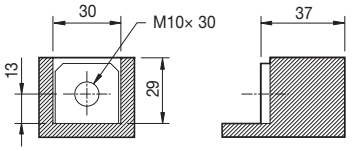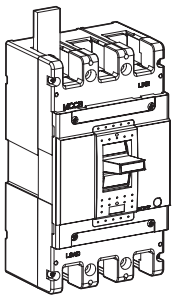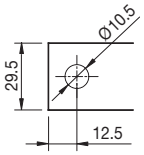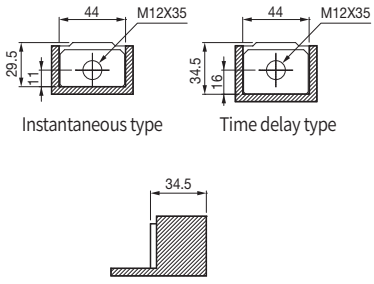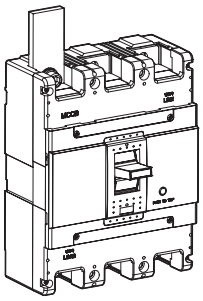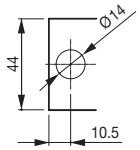MCCB	Terminal (mm)	Tightening torque (kgf·cm)	Conductor (mm)
400AF		M10: 240~300 (Terminal) M12: 400~500 (Busbar) 	
800AF		M12: 400~500 (Terminal, Busbar) 	

Aux cover screw connection

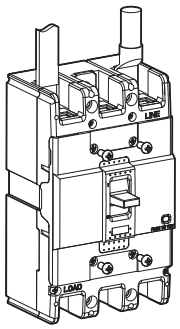
Model	Tightening torque (kgf·cm)	Screw position
30AF 50AF 60AF 100AF 125AF 250AF	15	
400AF 630AF 800AF	21	

Safety clearance

When installing a circuit breaker, safety clearances must be kept between the breaker and panels, bars and other protection devices installed nearby. These safety clearances are depend on the ultimate breaking capacity and are defined by tests carried out in accordance with standard IEC 60947-2.
When a short circuit interruption occur, high temperatures pressures are present in and above the arc chambers of the circuit-breaker. In order to allow the pressure to be distributed and to prevent fire and arcing or short-circuit currents, safety clearances are required.

A: Minimum distance to metallic top panels

Frame size	Description	A (mm)	
		460V	250V
100AF	ABN50c	40	25
	ABN60c	40	25
	ABN100c	50	30
	ABN100e	50	30
	ABS30c	30	25
	ABS50c	40	30
	ABS60c	40	30
125AF	ABS125c	50	40
	ABH50c	50	40
	ABH125c	100	80
	ABL125c	100	80
250AF	ABN250c	100	80
	ABS250c	100	80
	ABH250c	100	80
	ABL250c	100	80
400AF	ABN400c	100	80
	ABS400c	100	80
	ABH400c	100	80
	ABL400c	100	80
800AF	ABN800c	120	80
	ABS800c	120	80
	ABL800c	120	80

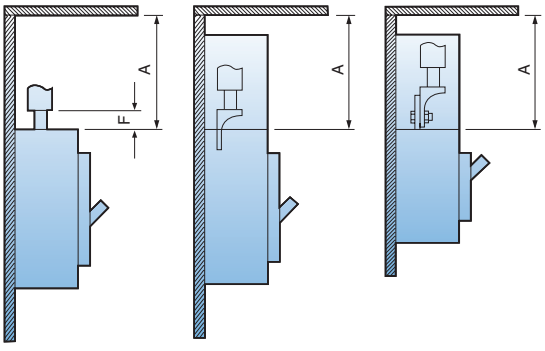


Safety clearance

B: Minimum distance between the lower and the upper breakers

- C1: Minimum distance between the lower breaker and the bare terminal of the upper breaker
- C: C1+ the dimension of bare part of conductor

Frame size	Description	C1 (mm)		C (mm)
		460V	250V	
100AF	ABN50c	40	25	The dimension of bare conduct + C1
	ABN60c	40	25	
	ABN100c	50	30	
	ABN100e	50	30	
	ABS30c	30	25	
	ABS50c	40	30	
	ABS60c	40	30	
125AF	ABS125c	50	40	
	ABH50c	50	40	
	ABH125c	100	80	
	ABL125c	100	80	
250AF	ABN250c	100	80	
	ABS250c	100	80	
	ABH250c	100	80	
	ABL250c	100	80	
400AF	ABN400c	100	80	
	ABS400c	100	80	
	ABH400c	100	80	
	ABL400c	100	80	
800AF	ABN800c	100	80	
	ABS800c	100	80	
	ABL800c	100	80	

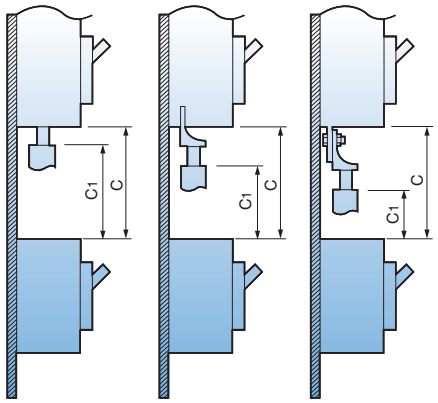

Direct connection of cable


Connection by using a crimp-type terminal lug

Connection by using a crimp-type terminal lug to the extended terminal

Insulated length of main terminal of circuit breaker

- D1: Connection by solerless terminal with taping
- D2: Connection by busbar with taping
- D3: Connection by solderless terminal and using insulation barrier
- D4: Connection by busbar and using insulation barrier


Frame size	Description	D1 (mm)	D2 (mm)	D3 (mm)	D4 (mm)
100AF	ABN50c	The dimension of bare conduct + 20	40	The dimension of bare conduct + 20	40
	ABN60c		40		40
	ABN100c		50		50
	ABN100e		50		50
	ABS30c		30		30
	ABS50c		40		40
	ABS60c		40		40
125AF	ABS125c		50		50
	ABH50c		50		50
	ABH125c		50		50
	ABL125c		50		50
250AF	ABN250c		50		50
	ABS250c		50		50
	ABH250c		50		50
	ABL250c		50		50
400AF	ABN400c		100		100
	ABS400c		100		100
	ABH400c		100		100
	ABL400c		100		100
800AF	ABN800c		150		150
	ABS800c		150		150
	ABL800c		150		150

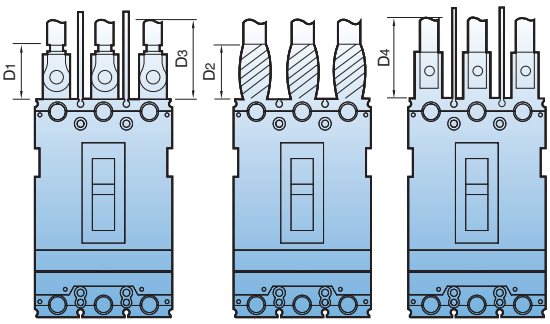

Safety clearance


Minimum distance to metallic side panels

Frame size	Description	E (mm)	
		460V	250V
100AF	ABN50c	25	15
	ABN60c	25	15
	ABN100c	25	15
	ABN100e	25	15
	ABS30c	20	15
	ABS50c	25	15
	ABS60c	25	15
125AF	ABS125c	25	15
	ABH50c	25	15
	ABH125c	50	20
	ABL125c	50	20
250AF	ABN250c	50	15
	ABS250c	50	15
	ABH250c	50	15
	ABL250c	50	15
400AF	ABN400c	80	40
	ABS400c	80	40
	ABH400c	80	40
	ABL400c	80	40
800AF	ABN800c	80	40
	ABS800c	80	40
	ABL800c	80	40

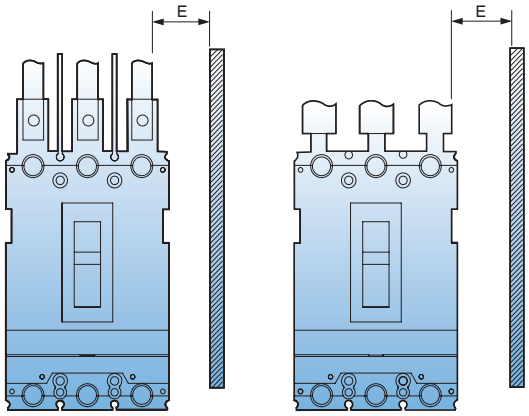

Distance of bare cables or busbars


Frame size	Description	F (mm)
100AF	ABN50c	10
	ABN60c	10
	ABN100c	-
	ABN100e	-
	ABS30c	5
	ABS50c	10
	ABS60c	10
125AF	ABS125c	-
	ABH50c	10
	ABH125c	20
	ABL125c	-
250AF	ABN250c	-
	ABS250c	-
	ABH250c	-
	ABL250c	-
400AF	ABN400c	10
	ABS400c	10
	ABH400c	10
	ABL400c	10
800AF	ABN800c	10
	ABS800c	10
	ABL800c	10

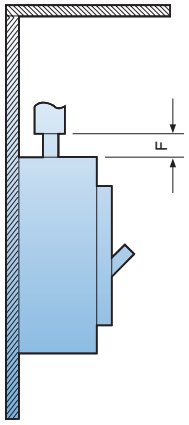

Safety clearance

Minimal distance between two adjacent breakers (With terminal covers)

Frame size	Description	G (mm)
100AF	ABN50c	0
	ABN60c	0
	ABN100c	0
	ABN100e	0
	ABS30c	0
	ABS50c	0
	ABS60c	0
125AF	ABS125c	0
	ABH50c	0
	ABH125c	0
	ABL125c	0
250AF	ABN250c	0
	ABS250c	0
	ABH250c	0
	ABL250c	0
400AF	ABN400c	0
	ABS400c	0
	ABH400c	0
	ABL400c	0
800AF	ABN800c	0
	ABS800c	0
	ABL800c	0

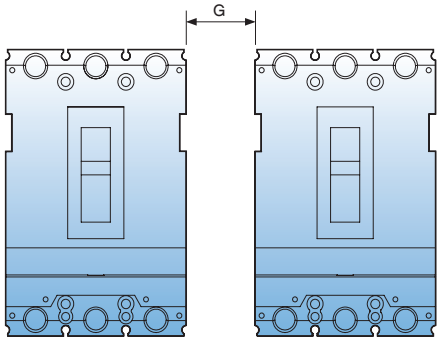

Insulation resistance (IR) testing & withstand voltage testing (For ELCB)

Insulation resistance (IR) testing

Insulation resistance marked as △ in table1 is not destroyed when 500V is applied using insulation tester but when 1000V is applied. Conduct the testing when the indicator needle of insulation tester wavers greatly. Make sure ELCB is Off before testing.

Withstand voltage testing

When conducting IR testing and withstand voltage testing, Do Not apply voltage for those marked as X in Table1.

Table1. insulation resistance (IR) testing & withstand voltage testing

Application circuit breaker / Application circuit breaker		Insulation resistance (IR) testing		Withstand voltage testing	
handle status		On	Off	On	Off
Charge-earth		○	○	○	○
R-S, S-T, R-T	Line	△	△	×	○
	Load	△	△	×	×
Line-load		–	○	–	○

Standards & approval

Metasol series circuit breakers and auxiliaries comply with the following international standard:

• IEC 60947-1
Low-voltage switchgear and controlgear - Part 1: General rules

• IEC 60947-2
Low-voltage switchgear and controlgear - Part 2: Circuit-breakers

The following certificates are available on a request.

- CE Declaration of conformity
- Certificate of conformance test (CB) - IEC 60947

CE conformity marking

The CE conformity marking shall indicate conformity to all the obligations imposed on the manufacturer, as regards his products, by virtue of the european community directives providing for the affixing of the CE marking.
When the CE marking is affixed on a product, it represents a declaration of the manufacturer or of his authorized representative that the product in question conforms to all the applicable provisions including the conformity assessment procedures.


CB TEST CERTIFICATE

IEC SYSTEM FOR MUTUAL RECOGNITION OF TEST CERTIFICATES FOR ELECTRICAL EQUIPMENT (IECEE) CB SCHEME

KEMA


CB TEST CERTIFICATE

IEC SYSTEM FOR MUTUAL RECOGNITION OF TEST CERTIFICATES FOR ELECTRICAL EQUIPMENT (IECEE) CB SCHEME

KEMA

Standard use environment

Standard use environment for molded case circuit breaker

The operation characteristic of Molded Case Circuit Breaker including short-circuit, overload, endurance and insulation is often influenced largely by external environment and thus should be applied appropriately with conditions of the place where it is used taken into consideration. In particular, the operation characteristic of the circuit breaker with a thermal magnetic trip element (FTU, FMU, ATU) applied changes a bit with the ambient temperature so you have to adjust the value of power rating accordingly when it is actually in use.

1) Ambient temperature: Within the range of -5°C~+40°C (However, the average for the duration of 24 hours must not exceed 35°C.)
2) Relative humidity: Within the range of 45~85%
3) Altitude: 2,000m or less (However, if it exceeds 1,000m, atmosphere correction through humidity test and withstand voltage test can be considered.)
4) Atmosphere where excessive steam, oil steam, smoke, dust, salt, conductive powder and other corrosive materials do not exist



- If a standard circuit breaker is used in high temperature exceeding 40°C, you are advised to use it according to the current corrected for each level of ambient temperature in catalog.
- If used in conditions of highly humidity, the dielectric strength or electric performance may be degraded.



- There is no problem in conduction switch, trip or short circuit isolation in the temperature of -20°C.
- Passing or storage in stone-cold area is allowed in the temperature of 40°C.
- The operating characteristic of the breaker with a thermal magnetic trip element changes as the base ambient temperature is adjusted to 40°C.



- It is highly recommended to use a dust cover or anti-humid agent if it is used in dusty and humid conditions.
- Excessive vibration may cause a trip break such as connection fault or flaw on mechanical parts.



- If it is left On or Off for a long time, it is recommended to switch load current on a regular basis.
- It is recommend to put it in the sealed protection if corrosive gas is prevalent.

Special use environment

Environment where ambient temperature exceeds 40°C

The temperate of each module of a Molded Case Circuit Breaker is the sum of temperature increase by conduction and ambient temperature and if the ambient temperature exceeds 40°C the passing current needs to be reduced so that the temperature of such element as internal insulator of MCCB exceed the maximum allowable temperature.
The base ambient temperature of Metasol breaker is set as 40°C so if it has to be used in conditions with higher temperature than this, the rated current is required to be reduced a little as described in the table below.

Table of rated current for Metasol MCCB corrected according to ambient temperature

Ampere frame	Rated current	Model name of breaker	Rated current	Table of rated current corrected according to ambient temperature (A)						
				10°C	20°C	30°C	40°C	45°C	50°C	55°C
30	3	ABS30c	3	3	3	3	3	3	3	3
	5		5	5	5	5	5	5	5	4
	10		10	10	10	10	10	10	9	9
	15		15	15	15	15	15	15	14	13
	20		20	20	20	20	20	19	19	18
	30		30	30	30	30	30	29	28	27
50	40	ABN50c, ABS50c	40	40	40	40	40	39	38	36
	50		50	50	50	50	50	49	47	45
60	60	ABN60c, ABS60c	60	60	60	60	60	58	56	55
100	75	ABN100c, ABN100e	75	75	75	75	75	73	71	68
	100		100	100	100	100	100	97	94	91
125	125	ABH50c, ABS125c, ABH125c, ABL125c	125	125	125	125	125	121	116	107
250	150	ABN250c, ABS250c, ABH250c, ABL250c	150	150	150	150	150	145	140	128
	175		175	175	175	175	175	169	163	150
	200		200	200	200	200	200	193	186	171
	225		225	225	225	225	225	217	209	193
	250		250	250	250	250	250	241	233	214
400	250	ABN400c, ABS400c ABH400c, ABL400c	250	250	250	250	250	246	242	238
	300		300	300	300	300	300	295	291	287
	350		350	350	350	350	350	345	339	332
	400		400	400	400	400	400	394	388	381
800	700	ABN800c, ABS800c ABL800c	700	700	700	700	700	689	679	668
	800		800	800	800	800	800	788	776	764

Special use environment

Table of rated current for Metasol ELCB corrected according to ambient temperature

Ampere frame	Rated current	Model name of breaker	Rated current	Table of rated current corrected according to ambient temperature (A)						
				10°C	20°C	30°C	40°C	45°C	50°C	55°C
30	15	EBS30c	15	15	15	15	15	15	15	15
	20		20	20	20	20	20	19	19	18
	30		30	30	30	30	30	29	28	27
50	40	EBN50c, EBS50c	40	40	40	40	40	39	38	36
	50		50	50	50	50	50	49	47	45
60	60	EBN60c, EBS60c	60	60	60	60	60	58	56	55
100	75	EBN100c	75	75	75	75	75	73	71	68
	100		100	100	100	100	100	97	94	91
125	125	EBH50c, EBS125c, EBH125c	125	125	125	125	125	121	116	107
250	150	EBN250c, EBS250c, EBH250c	150	150	150	150	150	145	140	128
	175		175	175	175	175	175	169	163	150
	200		200	200	200	200	200	193	186	171
	225		225	225	225	225	225	217	209	193
	250		250	250	250	250	250	241	233	214
400	250	EBN400c, EBS400c, EBH400c, EBL400c	250	250	250	250	246	242	238	238
	300		300	300	300	300	295	291	287	287
	350		350	350	350	350	345	339	332	332
	400		400	400	400	400	394	388	381	381
800	700	EBN800c, EBS800c EBL800c	700	700	700	700	689	679	668	668
	800		800	800	800	800	788	776	764	764

Environment where ambient temperature is -5℃ or less

Molded Case Circuit Breaker is subject to the effect of low temperature brittle of metal part inside and insulator, or changes in viscosity of lubricating oil in device, extra care should be taken not to have the temperature drop extremely with the use of such device as space heater. In addition, in case of using a thermal magnetic trip element (FTU, FMU, ATU) , the operating characteristic changes toward the difficult direction, so you should identify the relationship of protection and correct accordingly.
Although MCCB is not affected by conduction switch, trip, or short circuit isolation in the temperature of - 20°C, it is highly recommended to use a temperature maintaining device such as space heater. In addition, transportation and passing in stone-cold area in the temperature as low as -40°C is allowed but it is recommend to leave the status of MCCB off or tripped in order to minimize the effect of brittle due to a low temperature.

High humidity condition (Relative humidity 85% or more)

Using Molded Case Circuit Breaker in a place of high humidity requires a rigorous maintenance including installation of anti-humidity agent within the structure in order to prevent the insulation sag of insulator or corrosion of mechanical parts as a result of high humidity. Also, in case of installing MCCB within the enclosed equipment, a space heater needs to be installed as well to prevent dew condensation that might occur due to a drastic temperature change.

Environment where petrochemical gas exists

The contact material of Molded Case Circuit Breaker is silver or silver alloy which develops creation of petrochemical coat that might cause a poor connection if it gets in contact with petrochemical gas. However, it is easy for petrochemical coat to be mechanically taken off so it is no problem if make-and break operation occurs frequently but it needs to be switched back and forth between make and break if the operation rarely occurs.
The lead wire of moving contact of Molded Case Circuit Breaker can be disconnected as it is corroded or hardened by petrochemical gas. The silver coating is effective to prevent this from occurring and there is a need to increase durability of MCCB with the use of silver coated lead wire if it is used in environment with thick petrochemical gas.

Environment where potentially explosive gas exists

It is advised, in principle, not to install a Molded Case Circuit Breaker that switches and inhibits current in a dangerous place such as this one.

Impact of altitude

If an MCCB is used in an elevated area higher than 2000m sea level, its operating performance is subject to dramatic drop in atmospheric pressure and temperature. For example, the air pressure is reduced to 80% of ordinary pressure at 2,200m and further 50% at 5,500m although the short-circuit performance is not affected. If
it is used in areas of high sea level, you can do correction based on the correction parameter table in high altitude environment, as described below

* Refer to the correction parameter table in high altitude environment (ANSI C37. 29-1970)
1) How to correct voltage:
- If the rated voltage is AC 600V at 4,000m above sea level, 600V (rated voltage) × 0.82 (correction parameter) = 492V.

2) How to correct current:
- If the rated voltage is AC 800A at above 4,000m sea level, 800A (rated current) × 0.96 (correction parameter) = 768A.

[Correction parameter table for altitude]

Altitude	Voltage correction parameter	Current correction parameter
2,000m	1.00	1.00
3,000m	0.91	0.98
4,000m	0.82	0.96
5,000m	0.73	0.94
6,000m	0.65	0.92

Environment with vibration and impulse exercised

Impact of vibration and impulse

An excessive vibration and impulse may cause damage on breaker or other security problems including dynamic strength. An appropriate consideration is required to select a right MCCB for an adverse environmental stress such as this one. Moreover, this stress may incur from vibration during transportation, magnetic impulse while manipulating a switch or may be affected by equipment in surrounding area.
There is a standard call [Vibration testing method for small electric appliances] for vibration and impulse test for electric equipment and the seismic and endurance tests of Molded Case Circuit Breaker are conducted in accordance with this standard, considering the circumstance mentioned above.

Vibration

The magnitude of vibration is measured by double amplitude and frequency with the following equation with accelerator.
$\alpha g = 0.002 \times$ frequency (Hz) $\times$ double amplitude (mm)
* αg: Multiple of gravitational acceleration ($g = 9.8 m/sec^2$)
There are three types of vibration tests including resonance test, vibration endurance test, and malfunction test as described below.

1) Resonant test
Alter the frequency of sinusoidal wave within the range of 0~55Hz gradually with 0.5~1mm of double amplitude applied to see if there is any occurrence of vibration on a specific part of MCCB.

2) Vibration endurance test
A sinusoidal wave with double amplitude of 0.5~1mm and frequency of 55Hz (Resonant frequency obtained in previous clause if there is a resonant point) is manually created to check the operational status.

3) Malfunction test
Apply vibration for 10 minutes for each condition of altering double amplitude and frequency to check if there is any malfunction in MCCB.

Impulse

The magnitude of impulse is denoted by the multiple of gravitational acceleration imposed on the equipment and part. The test is conducted through a drop impulse test.

Impact of high frequency

In case of high frequency current, you are required to reduce the rated current of the breaker with a thermal magnetic trip element embedded due to heat incurred by the skin effect of conductor and/or core less of structure. The reduction rate varies according to the frame Size and rated current and decreases down to 70~80% at 400Hz. In addition, the core loss decreases attractive force, which leads to increase of instantaneous trip current.



* Core loss: It refers to the electrical loss in a transformer caused by magnetization of the core that changes over time and is categorized into hysteresis loss and eddy current loss.

* Hysteresis loss: It takes up the majority portion of no-load loss of electric equipment and is calculated like this.
$Ph = \sigma f Bmn$
Bm: Maximum value of magnetic flux density, n: constant (1.6~2.0), f: Frequency, σ: Hysteresis constant

* Eddy current: It refers to an induced electric current formed within the body of a conductor when it moves through a non-uniform or changing magnetic field. The eddy current that incurs at winding of transformer or core is considered as one of the transformer losses as a part of exciting current. It is also called 'eddy current loss'.

Use environment with vibration and impulse applied

[Table of seismic performance and internal impulse performance]

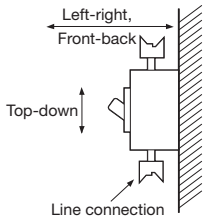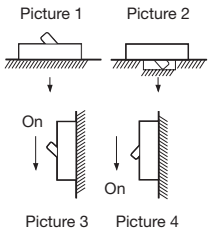		Test	Internal impulse
Test condition	Mounting vibration, direction of impulse	• Vertical mounting • Top-down, Left-right, Front-back 	• Picture 1, 2, 3, 4 (→ Represents the direction of drop) 
	Status of MCCB	(1) Non-conduction (On or Off status) (2) Status where rated current is conducted until the temperature of MCCB becomes constant and keeps being conducted	Non-conduction (On or Off status)
Test result	Judgment condition	• If it is On, it should not be Off • If it is Off, it should not be On • No abnormal status such as damage, transformation, or annealing of nut part • Characteristics of switch and trip after the test must be normal	

Certifications

MCCB

Type		Approvals		Certificates
Certificate		Safet certi	IEC	KEMA
Mark and name			CE	KEMA
Type		Korea	Europe	Netherlands
MCCB 30~250AF	ABS32c	●	●	●
	ABS33c	●	●	●
	ABS34c	●	●	●
	ABN52c	●	●	●
	ABN53c	●	●	●
	ABN54c	●	●	●
	ABS52c	●	●	●
	ABS53c	●	●	●
	ABS54c	●	●	●
	ABN62c	●	●	●
	ABN63c	●	●	●
	ABN64c	●	●	●
	ABS62c	●	●	●
	ABS63c	●	●	●
	ABS64c	●	●	●
	ABN102c	●	●	●
	ABN103c	●	●	●
	ABN104c	●	●	●
	ABS32d	●	●	●
	ABS33d	●	●	●
	ABS34d	●	●	●
	ABN52d	●	●	●
	ABN53d	●	●	●
	ABN54d	●	●	●
	ABS52d	●	●	●
	ABS53d	●	●	●
	ABS54d	●	●	●
	ABN62d	●	●	●
	ABN63d	●	●	●
	ABN64d	●	●	●
	ABS62d	●	●	●
	ABS63d	●	●	●
	ABS64d	●	●	●
	ABN102d	●	●	●
	ABN103d	●	●	●
	ABN104d	●	●	●
	ABP52c	●	●	●
	ABP53c	●	●	●
	ABP54c	●	●	●
	ABH52c	●	●	●
	ABH53c	●	●	●
	ABH54c	●	●	●
	ABS102c	●	●	●
	ABS103c	●	●	●
	ABS104c	●	●	●
	ABP102c	●	●	●
	ABP103c	●	●	●

Type		Approvals		Certificates
Certificate		Safet certi	IEC	KEMA
Mark and name			CE	KEMA
Type		Korea	Europe	Netherlands
MCCB 30~250AF	ABP104c	●	●	●
	ABH102c	●	●	●
	ABH103c	●	●	●
	ABH104c	●	●	●
	ABN202c	●	●	●
	ABN203c	●	●	●
	ABN204c	●	●	●
	ABS202c	●	●	●
	ABS203c	●	●	●
	ABS204c	●	●	●
	ABP202c	●	●	●
	ABP203c	●	●	●
	ABP204c	●	●	●
	ABH202c	●	●	●
	ABH203c	●	●	●
	ABH204c	●	●	●
MCCB 400~800AF	ABN402c	●	●	●
	ABN403c	●	●	●
	ABN404c	●	●	●
	ABS402c	●	●	●
	ABS403c	●	●	●
	ABS404c	●	●	●
	ABH402c	●	●	●
	ABH403c	●	●	●
	ABH404c	●	●	●
	ABL402c	●	●	●
	ABL403c	●	●	●
	ABL404c	●	●	●
	ABN602c		●	●
	ABN603c		●	●
	ABN604c		●	●
	ABS602c		●	●
	ABS603c		●	●
	ABS604c		●	●
	ABL602c		●	●
	ABL603c		●	●
	ABL604c		●	●
	ABN802c		●	●
	ABN803c		●	●
	ABN804c		●	●
	ABS802c		●	●
	ABS803c		●	●
	ABS804c		●	●
	ABL802c		●	●
	ABL803c		●	●
	ABL804c		●	●

ELCB

Type		Approvals		Certificates
Certificate		Safet certi	IEC	KEMA
Mark and name			CE	KEMA
Type		Korea	Europe	Netherlands
ELCB 30~250AF	EBS32c	●	●	●
	EBS33c	●	●	●
	EBS34c	●	●	●
	EBN52c	●	●	●
	EBN53c	●	●	●
	EBS53c	●	●	●
	EBS54c	●	●	●
	EBN63c	●	●	●
	EBS63c	●	●	●
	EBS64c	●	●	●
	EBN102c	●	●	●
	EBN103c	●	●	●
	EBN104c	●	●	●
	EBS33d	●	●	●
	EBS34d	●	●	●
	EBN52d	●	●	●
	EBN53d	●	●	●
	EBS53d	●	●	●
	EBS54d	●	●	●
	EBN63d	●	●	●
	EBS63d	●	●	●
	EBS64d	●	●	●
	EBN102d	●	●	●
	EBN103d	●	●	●
	EBN104d	●	●	●
	EBP53c	●	●	●
	EBP54c	●	●	●
	EBH53c	●	●	●
	EBH54c	●	●	●
	EBS103c	●	●	●
	EBS104c	●	●	●
	EBP103c	●	●	●
	EBP104c	●	●	●
	EBH103c	●	●	●
	EBH104c	●	●	●
	EBN202c	●	●	●
	EBN203c	●	●	●
	EBS203c	●	●	●
	EBS204c	●	●	●
	EBP203c	●	●	●
	EBP204c	●	●	●
	EBH203c	●	●	●
	EBH204c	●	●	●

Note: ● (Completion)

FUTURING SMART ENERGY

We open up a brighter future through
efficient and convenient energy solutions.



Safety Instructions

- For your safety, please read user's manual thoroughly before operating.
- Contact the nearest authorized service facility for examination, repair, or adjustment.
- Please contact qualified service technician when you need maintenance.
  Do not disassemble or repair by yourself!
- Any maintenance and inspection shall be performed by the personnel having expertise concerned.



- According to The WEEE Directive, please do not discard the device with your household waste.

LS ELECTRIC

www.ls-electric.com

■ Headquarter
127 LS-ro (Hogye-dong) Dongan-gu, Anyang-si, Gyeonggi-Do, 14119, Korea

■ Seoul Office
LS Yongsan Tower, 92, Hangang-daero, Yongsan-gu, Seoul, 04386, Korea
Tel. 82-2-2034-4916, 4684, 4429

■ Overseas Subsidiaries
- LS ELECTRIC Middle East FZE (Dubai, UAE)
  Tel: 971-4-886-5360 E-Mail: middleeast@ls-electric.com
- LS ELECTRIC America Inc. (Lincolnshire, Illinois, USA)
  Tel: 1-224-352-2265 E-Mail: sales.us@lselectricamerica.com
- MCM Engineering II (Enoch, Utah, USA)
  Tel: 1-435-865-0125 E-Mail: sales.us@lselectricamerica.com
- LS ELECTRIC Energy Solution LLC. (Charlotte, North Carolina, USA)
  Tel: 1-980-221-0654 E-Mail: cmfeldman@ls-es.com
- LS ELECTRIC Europe B.V. (Hoofddorp, Netherlands)
  Tel: 31-20-654-1424 E-Mail: europartner@ls-electric.com
- LS ELEKTRİK SANAYİ TİCARET LİMİTED ŞİRKETİ (Istanbul, Türkiye)
  Tel: 90-212-806-1252 E-Mail: turkiye@ls-electric.com
- LS ELECTRIC IBERIA S.L.U. (Madrid, Spain)
  Tel: 34-910-28-02-74 E-Mail: iberia@ls-electric.com
- LS ELECTRIC(Dalian) Co., Ltd. (Dalian, China)
  Tel: 86-411-8730-7560 E-Mail: china.dalian@lselectric.com
- LS ELECTRIC(Wuxi) Co., Ltd. (Wuxi, China)
  Tel: 86-510-8534-6666 E-Mail: china.wuxi@lselectric.com
- LS ELECTRIC(lishui) Co., Ltd. (lishui, China)
  Tel: 86-133-6207-7980 E-Mail: china.lishui@lselectric.com.cn
- LS ELECTRIC Japan Co., Ltd. (Tokyo, Japan)
  Tel: 81-3-6268-8241 E-Mail: japan@ls-electric.com
- LS ELECTRIC Vietnam Co., Ltd. (Bac Ninh Province, Vietnam)
  Tel: 84-222-2221-110 E-Mail: vietnam@ls-electric.com
- PT. LS ELECTRIC INDONESIA (Jakarta Barat, Indonesia)
  Tel: 62-2933-7614 E-Mail: indonesia@ls-electric.com

■ Overseas Branches
- LS ELECTRIC America Western Office (Santa Fe Sprinigs, California, USA)
  Tel: 1-949-333-3140 E-Mail: america@ls-electric.com
- LS ELECTRIC America Bastrop Campus (Bastrop, TX, USA)
  Tel: 1-224-352-2265 E-Mail: sales.us@lselectricamerica.com
- LS ELECTRIC Moscow Office (Moscow, Russia)
  Tel: 7-499-682-6130 E-Mail: info@lselectric-ru.com
- LS ELECTRIC Italy Office (Brescia, Italia)
  Tel: 39-030-8081-833 E-Mail: italia@ls-electric.com
- LS ELECTRIC Shanghai Office (Shanghai, China)
  Tel: 86-21-5237-9977 E-Mail: china@lselectric.com.cn
- LS ELECTRIC Beijing Office (Beijing, China)
  Tel: 86-10-5095-1631 E-Mail: china@lselectric.com.cn
- LS ELECTRIC Guangzhou Office (Guangzhou, China)
  Tel: 86-20-3818-2883 E-Mail: china@lselectric.com.cn
- LS ELECTRIC Qingdao Office (Qingdao, China)
  Tel: 86-532-8501-2065 E-Mail: china@lselectric.com.cn
- LS ELECTRIC Chengdu Office (Chengdu, China)
  Tel: 86-28-8670-3201 E-Mail: china@lselectric.com.cn
- LS ELECTRIC Nanjing Office (Nanjing, China)
  Tel: 86-25-8467-0005 E-Mail: china@lselectric.com.cn
- LS ELECTRIC Tokyo Office (Tokyo, Japan)
  Tel: 81-3-6268-8241 E-Mail: tokyo@ls-electric.com
- LS ELECTRIC Bangkok Office (Bangkok, Thailand)
  Tel: 66-2-128-0295 E-Mail: thailand@ls-electric.com
- LS ELECTRIC Co., Ltd. India Office (Karnataka, india)
  Tel: 91-80-6142-9108 E-Mail: info_india@ls-electric.com
- LS ELECTRIC Co., Ltd. Singapore Branch (Singapore)
  Tel: 65-6958-8162 E-Mail: singapore@ls-electric.com

2024. 07 | Specifications in this catalog are subject to change without notice due to continuous product development and improvement.

©2009. 10 LS ELECTRIC Co., Ltd. All rights reserved. / English (32) 2024. 07 Staffcom